

Manual

Fortec Integrated

WebPoster-M4

Industrial 4K HTML Player

Version 1.2

25.10.2024

FORTEC
UNITED STATES



FORTEC
INTEGRATED



FORTEC
UNITED KINGDOM



The information contained in this document has been carefully researched and is, to the best of our knowledge, accurate. However, we assume no liability for any product failures or damages, immediate or consequential, resulting from the use of the information provided herein. Our products are not intended for use in systems in which failures of product could result in personal injury. All trademarks mentioned herein are property of their respective owners. All specifications are subject to change without notice.

Table of Contents

1	Revision History	3
2	Introduction	4
3	Features	4
4	Installation and Setup	5
4.1	Hardware Setup of WebPoster-M4	5
4.2	Installation of Artista Device Finder	5
4.3	Network Setup of WebPoster-M4 via Artista Device Finder	6
4.4	Device Setup of WebPoster-M4 via Web Interface.....	7
5	WebPoster-M4 Configuration via Web Interface	8
5.1	System Information	9
5.2	View Logs	10
5.3	Network Configuration	11
5.3.1	Using DHCP	12
5.3.2	Using Static IP Addresses	12
5.4	WiFi Configuration	13
5.5	Date and Time	14
5.6	Browser Settings	14
5.7	Audio Settings	16
5.8	Timer Configuration	17
5.9	Display Settings	17
5.10	Password Settings	18
5.11	Advanced Options	20
5.11.1	Firmware Update / Board Setup	21
5.11.2	Artista Device Finder Support	21
5.11.3	Master Reset.....	21
5.12	Restart System	22
6	Factory Settings of WebPoster-M4	23
7	Firmware Update	23
7.1	Firmware Update via Web Interface	24
7.2	Firmware Update via USB Flash Drive	24
8	Technical Specification	25
9	Order Numbers	26

9.1 Distec BLO-Line A1 Monitor Series 26

1 Revision History

Date	Rev.No.	Description	Page
07.10.2024	1.0	Initial version	All
15.10.2024	1.1	Release version	All
25.10.2024	1.2	Update cover template	All

2 Introduction

WebPoster-M4 is a turn-key product to show a specific web page in full-screen mode on the display.

It can be used, e.g. for industrial applications to show production instructions or statistics in factories or digital signage applications to show ads.

WebPoster-M4 supports the following Distec monitor series:

- BLO-Line

Note:

Before purchasing WebPoster-M4 it is strongly recommended to test if the web page is displayed on the screen as expected.

3 Features

This section gives an overview about the main features of WebPoster-M4:

- Auto start at power-on
- Show a preconfigured web page in full-screen mode on the display (URL not shown)
- Browser features:
 - HTML5
 - JavaScript
 - Configurable auto-reload interval for the web page
 - Configurable preferred web-site language
 - Virtual keyboard for text input with configurable keyboard layout
 - Local root certificate
- Multi-Touch support with gesture control
- Web Interface for device configuration (network parameters, web page address, reload interval, etc.)
- Firmware update via Web Interface or USB flash drive
- Audio output via stereo line out
- Free Windows® software Artista Device Finder for easy configuration of network parameters (static IP or DHCP, hostname, etc.)

Note:

Interaction with web pages via USB keyboard or mouse is **NOT** supported by WebPoster-M4.

4 Installation and Setup

4.1 Hardware Setup of WebPoster-M4

- Connect the WebPoster-M4 monitor to the Ethernet (LAN)
- Connect the WebPoster-M4 monitor to the power supply
- Models with integrated power adapter must be switched on, models with external power adapter start automatically
- After system start the pre-configured web page is displayed on the screen (if WebPoster-M4 has access to the Internet)

4.2 Installation of Artista Device Finder

- Install the free Windows software Artista Device Finder (ADF) on the PC. It is required to find the WebPoster-M4 in the network and to execute the configuration of it.


Download link for the ADF setup:

<https://www.distec.de/service/downloads/webposter-downloads/>


- The Windows PC and the WebPoster-M4 must be connected to the same network

4.3 Network Setup of WebPoster-M4 via Artista Device Finder

- Make sure that WebPoster-M4 is powered on and connected to the same network as the Windows PC
- Start the software Artista Device Finder on the Windows PC
- Press the button **Scan / Refresh** to scan the network for available WebPoster-M4 devices

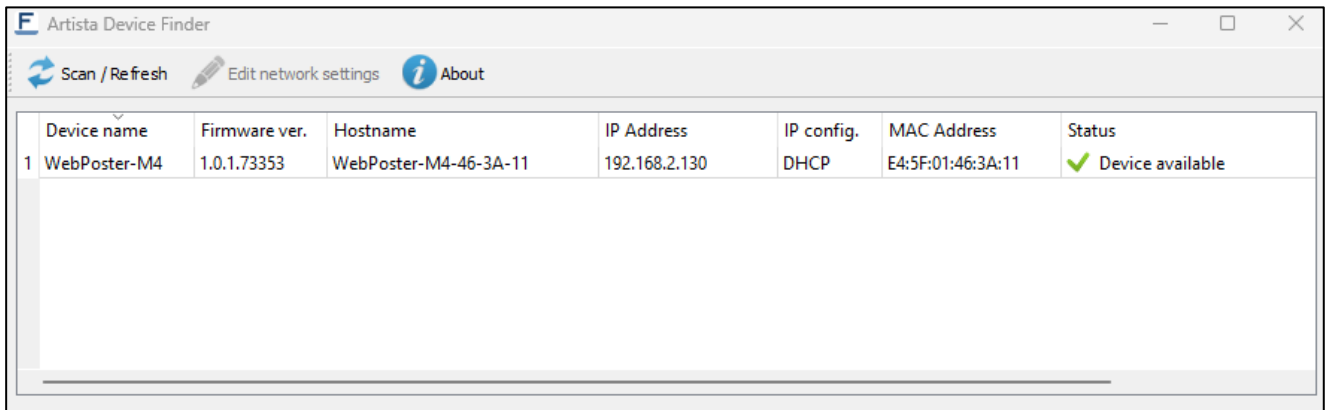

- Double-click the device to edit the network parameters as required

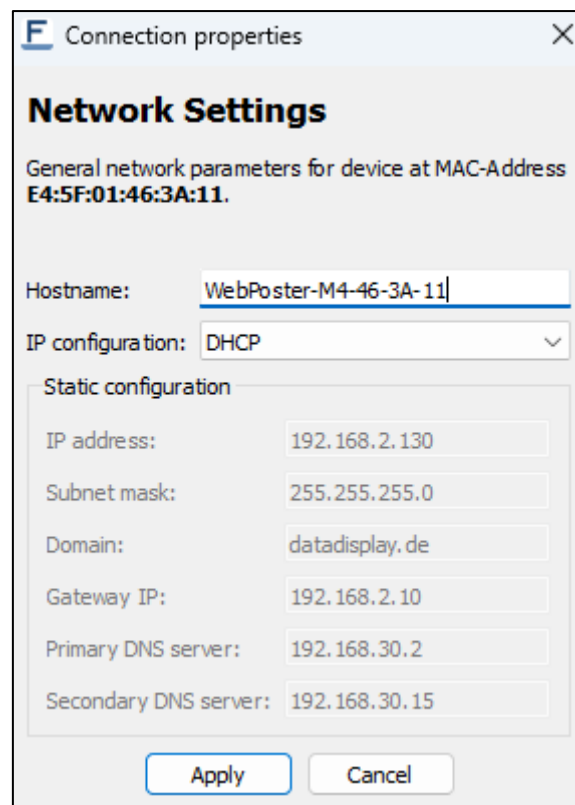

- Press the button **Apply** and enter the **Username** and **Password** of WebPoster-M4 to save the new network parameters on the device. The default login parameters can be found in section Factory Settings of WebPoster-M4

4.4 Device Setup of WebPoster-M4 via Web Interface

- Use the Artista Device Finder, to open the Web Interface of WebPoster-M4 for further configuration. To do so, right-click on the device and select the context menu **Open in web browser**. Your standard Browser opens with the IP address of the WebPoster-M4 and a login dialog appears

The screenshot shows a window titled "Artista Device Finder" with a toolbar containing "Scan / Refresh", "Edit network settings", and "About". Below the toolbar is a table with the following data:

Device name	Firmware ver.	Hostname	IP Address	IP config.	MAC Address	Status
1 WebPoster-M4	1.0.1.73353	WebPoster-M4-46-3A-11	192.168.2.130	DHCP	E4:5F:01:46:3A:11	✔ Device available

- Log in to the Web Interface with the default login parameters (see section Factory Settings of WebPoster-M4)
- Select the menu **Browser Settings** and enter the URL of the web site that should be displayed on the WebPoster-M4 screen and the **Reload Interval** if necessary. See section Browser Settings for more details
- Select the menu **Display Settings** to select the display orientation **Portrait**, if required. See section Display Settings for more details
- Select the menu **Change Password** to set your own password. See section Password Settings for more details

Now your WebPoster-M4 monitor is ready to use.

5 WebPoster-M4 Configuration via Web Interface

The WebPoster-M4 configuration interface can be accessed with any common web browser like Microsoft Edge, Google Chrome, Mozilla Firefox and many others. You can establish the connection by using the Windows software Artista Device Finder or by typing the IP address of your device into the browser manually. The current IP address of WebPoster-M4 is displayed on the screen during the system start after power on. When you are asked for the device password, use the stored password (for the default password see the section Factory Settings of WebPoster-M4).



5.1 System Information

This is the menu to get all system information of WebPoster-M4 with one click.

In case of a technical question or problem, please add this information to your support request.

FORTEC
INTEGRATED

WebPoster-M4 System Information

Listing of most important device parameters and settings

Firmware Information

- Configuration Name: PA-45-009
- Configuration version: 1.0.0.0
- Firmware version: 1.0.1.73353
- Kernel version: 6.1.21-171730.1
- Display controller version: 0.30.16
- Operating mode: Normal

Hardware Information

- Hardware version: 1.2_02
- CPU temperature: 59 °C
- CPU frequency: 1500 MHz

Filesystem Usage

Storage	Size	Used	Avail	Use%
Internal:	13G	28M	12G	1%
SD Card:	not supported			

Display Configuration

- Display brightness: 100%
- Display power status: On
- Resolution: 3840x2160
- Input source: internal

Browser Configuration

- Home Page: www.fortec-integrated.de
- Reload Interval: 0
- Preferred Language: de
- Virtual Keyboard: On
- Keyboard Layout: de
- Persistent Configuration: On

Network Configuration

- Network setup: DHCP
- IP-address: 192.168.2.130
- Netmask: 255.255.255.0
- Gateway IP-address: 192.168.2.10
- Hostname: WebPoster-M4-46-3A-11
- Domain: datadisplay.de
- DNS: 192.168.30.2 192.168.30.15
- MAC-address: E4:5F:01:46:3A:11
- Description: WebPoster-M4
 - OpenVPN: Disabled

Wi-Fi Configuration

- Wi-Fi status: Off
- Interface status: Active
- Network SSID: Not connected

Date and Time

- Date and Time setup: NTP
- Times: Tue Oct 15 13:36:28 UTC 2024
- Time zone: Etc/UTC
- NTP status: clock is synchronised to the timeserver
- NTP details:

remote	refid	st	t	when	poll	reach	delay	offset	jitter
*131.188.3.223	.PZFS,	1	u	47	64	17	21.562	-4.728	2.863
+168.119.183.207	216.239.35.8	2	u	8	64	77	21.132	-10.895	3.556

Advanced

- Remote Monitoring: Off
- Remote Control: Off

WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH

5.2 View Logs

WebPoster-M4 operation can be monitored through its log files. There are several dedicated log files on the device, each committed to logging of a particular subsystem:

- Setup Manager – shows which setup files have been executed on the device
- Event Manager – shows errors related to event processing
- System – shows the system log of the Linux operating system

The log files can be erased by clicking “Clear”.

FORTEC
INTEGRATED

WebPoster-M4 Logs

Check WebPoster-M4 modules activity

Available logs:

[Setup Manager](#) [Event Manager](#) [System](#)

(no log selected)

WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH

Information
System Information
[View Logs](#)

Configuration
Network Configuration
Wi-Fi Configuration
Date and Time
Browser Configuration
Audio Settings
Display Settings
Timer Configuration
Http Access
Advanced

Restart
Restart

5.3 Network Configuration

This is the menu to change the settings of the network interface of WebPoster-M4.

FORTEC
INTEGRATED

Network Configuration

Set up your WebPoster-M4 device's network interface

Name	Value	Description
Use DHCP:	<input checked="" type="checkbox"/>	On submit, you will be redirected to the new address.
WebPoster IP-Address:	192.168.2.130	Assign a valid IP-Address that is unique in your network.
Netmask:	255.255.255.0	Usually 255.255.255.0
Gateway IP-Address:	192.168.2.10	Enables access to/from other subnets.
WebPoster Hostname:	WebPoster-M4-46-3A-11	Assign a hostname which is unique in your network.
Domain:	datadisplay.de	The network domain your WebPoster is part of
Nameserver IPs:	192.168.30.2 192.168.30.1	IP address of one or more nameservers, separated by space.
WebPoster Description:	WebPoster-M4	A free description.

[Discard changes](#) [Submit configuration](#)

Please Note
 If you have questions regarding your network parameters, please contact your network administrator.
 If the IP-Address of your WebPoster-M4 changes on submit, your browser will be automatically redirected to the new address.

WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH

Discard changes:

Use this button to reset all input fields. This will have no effect on the actual configuration settings - only the form inputs will be cleared.

Submit configuration:

Use this button to apply and save the settings entered.
 After submitting the new configuration, WebPoster-M4 restarts automatically.

5.3.1 Using DHCP

To use DHCP for network configuration, tick the **Use DHCP** checkbox. If the device should be reachable by its hostname, the DHCP server must be able to pass hostnames to the DNS. The default hostname of WebPoster-M4 has the following format: WebPoster-M4-xx-xx-xx (WebPoster-M4- followed by the last 3 bytes of its MAC address), but can be set to something more descriptive if needed. The network settings will be displayed on the splash screen shown during start-up of the device.

If DHCP setup fails, the device's network will be configured with its default settings (see section Factory Settings of WebPoster-M4 for more details).

5.3.2 Using Static IP Addresses

To use a static network configuration for WebPoster-M4, disable the **Use DHCP** checkbox. In this mode the following network parameters can be set manually:

- IP address of WebPoster-M4
- Netmask
- IP address of the Gateway
- Hostname of WebPoster-M4
- Domain
- IP address of the Nameserver (one or more Nameserver addresses separated by space)

When using a static IP address, it must be assured that this address is not used by any other device connected to the network. Please contact your network administrator for details and configuration parameters.


5.4 WiFi Configuration

You can establish a WiFi connection in WebPoster-M4 instead of a wired Ethernet connection.
(A WiFi/USB stick is required)

The screenshot shows the 'FORTEC INTEGRATED' web interface for 'Wi-Fi Configuration'. The left sidebar contains a navigation menu with sections: 'Information' (System Information, View Logs), 'Configuration' (Network Configuration, **Wi-Fi Configuration**, Date and Time, Browser Configuration, Audio Settings, Display Settings, Timer Configuration, Http Access, Advanced), and 'Restart' (Restart). The main content area is titled 'Wi-Fi Configuration' and includes the instruction 'Set up your WebPoster-M4 device's Wi-Fi interface'. It features a toggle for 'Enable Wi-Fi' (checked), an 'Interface status' of 'Wi-Fi interface active', and a 'Wi-Fi Networks' section with a 'Scan' button. Below this is a table with columns for 'Network SSID', 'Security Key', 'Security Standard' (set to 'WPA/WPA2PSK'), 'Signal Strength', and 'Status'. An 'Add' button is located to the right of the table. At the bottom, the footer reads 'WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH'.

5.5 Date and Time

WebPoster-M4 provides Date and time configuration as well as the time zone control of the device.

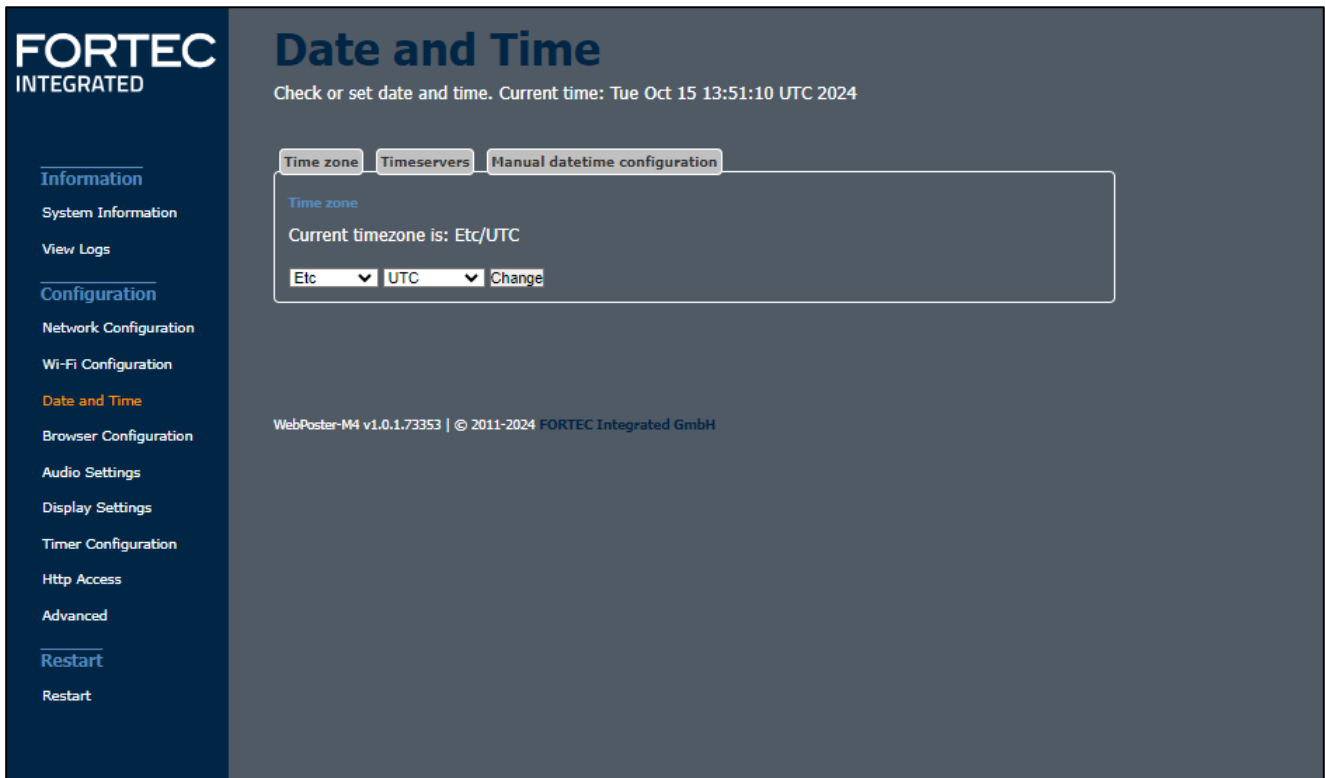

5.6 Browser Settings

This is the menu to configure the integrated Web Browser of WebPoster-M4.

Home Page:

Set the address (URL) of the web page to be shown in full screen mode on the display.

Reload Interval:

If the content of the web page changes from time to time and the web page doesn't support content update in the browser directly, WebPoster-M4 can be configured to reload the web page periodically. The interval can be set in seconds. To disable the reload function, the interval must be set to **0**.

Discard changes:

Use this button to reset all input fields. This will have no effect on the actual configuration settings - only the form inputs will be cleared.

Submit configuration:

Apply and save the settings above.

FORTEC
INTEGRATED

Information

System Information

View Logs

Configuration

Network Configuration

Wi-Fi Configuration

Date and Time

Browser Configuration

Audio Settings

Display Settings

Timer Configuration

Http Access

Advanced

Restart

Restart

Browser Configuration

Set up your WebPoster-M4 device's browser

Name	Value	Description
Home Page:	<input type="text" value="www.fortec-integrated.de"/>	Please make sure to assign a valid home page.
Reload Interval (seconds):	<input type="text" value="0"/>	Zero means that automatic reload is disabled.
Preferred Language:	<input type="text" value="German"/> ▼	
Virtual keyboard:	<input checked="" type="checkbox"/>	On checked, you get an onscreen keyboard for input.
Keyboard Layout:	<input type="text" value="German"/> ▼	
Persistent Browser Configuration:	<input checked="" type="checkbox"/>	On checked, browser configuration persists on reboot.
<input type="button" value="Discard changes"/> <input type="button" value="Submit configuration"/>		

Root Certificate

Please select the root certificate (.crt).

Root certificate (.crt): Keine ausgewählt

To delete current root certificate click button

Reset Browser Configuration

Resets browser to its default state and reboots the browser!


WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH

5.7 Audio Settings

This page can be used to set the volume level for audio playback between 0% and 100%.

Submit settings:


Apply and save the selected audio volume.

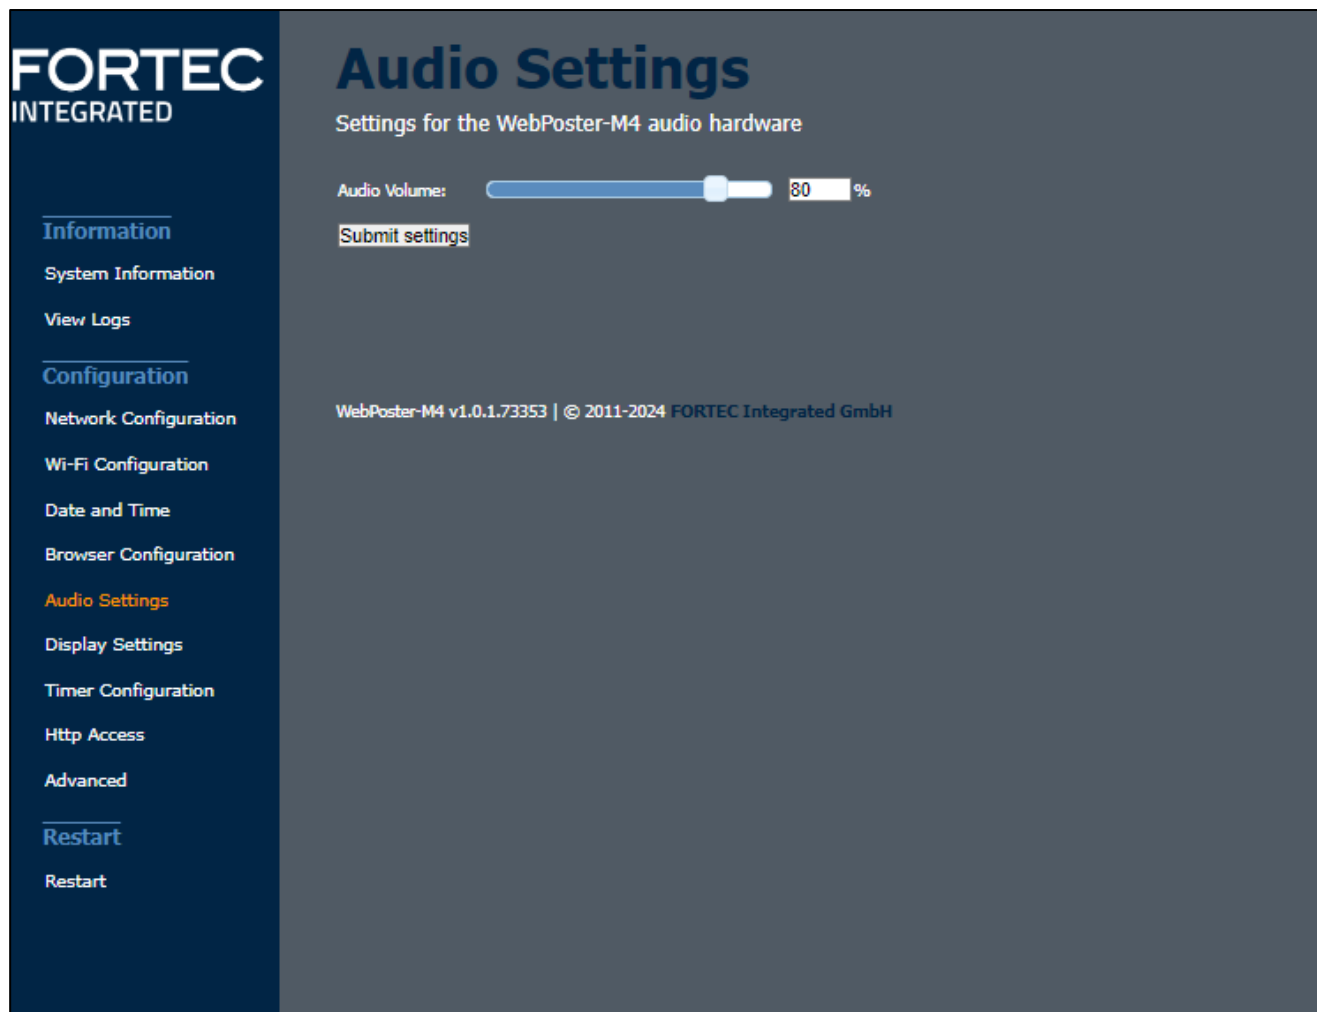

The screenshot displays the 'Audio Settings' page for the WebPoster-M4 hardware. On the left is a dark blue sidebar with the 'FORTEC INTEGRATED' logo at the top. Below the logo are menu categories: 'Information' (with sub-items 'System Information' and 'View Logs'), 'Configuration' (with sub-items 'Network Configuration', 'Wi-Fi Configuration', 'Date and Time', 'Browser Configuration', 'Audio Settings' (highlighted in orange), 'Display Settings', and 'Timer Configuration'), 'Http Access', 'Advanced', and 'Restart' (with sub-item 'Restart'). The main content area has a dark grey background. At the top, it says 'Audio Settings' and 'Settings for the WebPoster-M4 audio hardware'. Below this is a slider for 'Audio Volume' set to 80%, with a 'Submit settings' button underneath. At the bottom of the main area, it shows 'WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH'.

5.8 Timer Configuration

You can schedule your device activity during the day and the week using the time configuration.

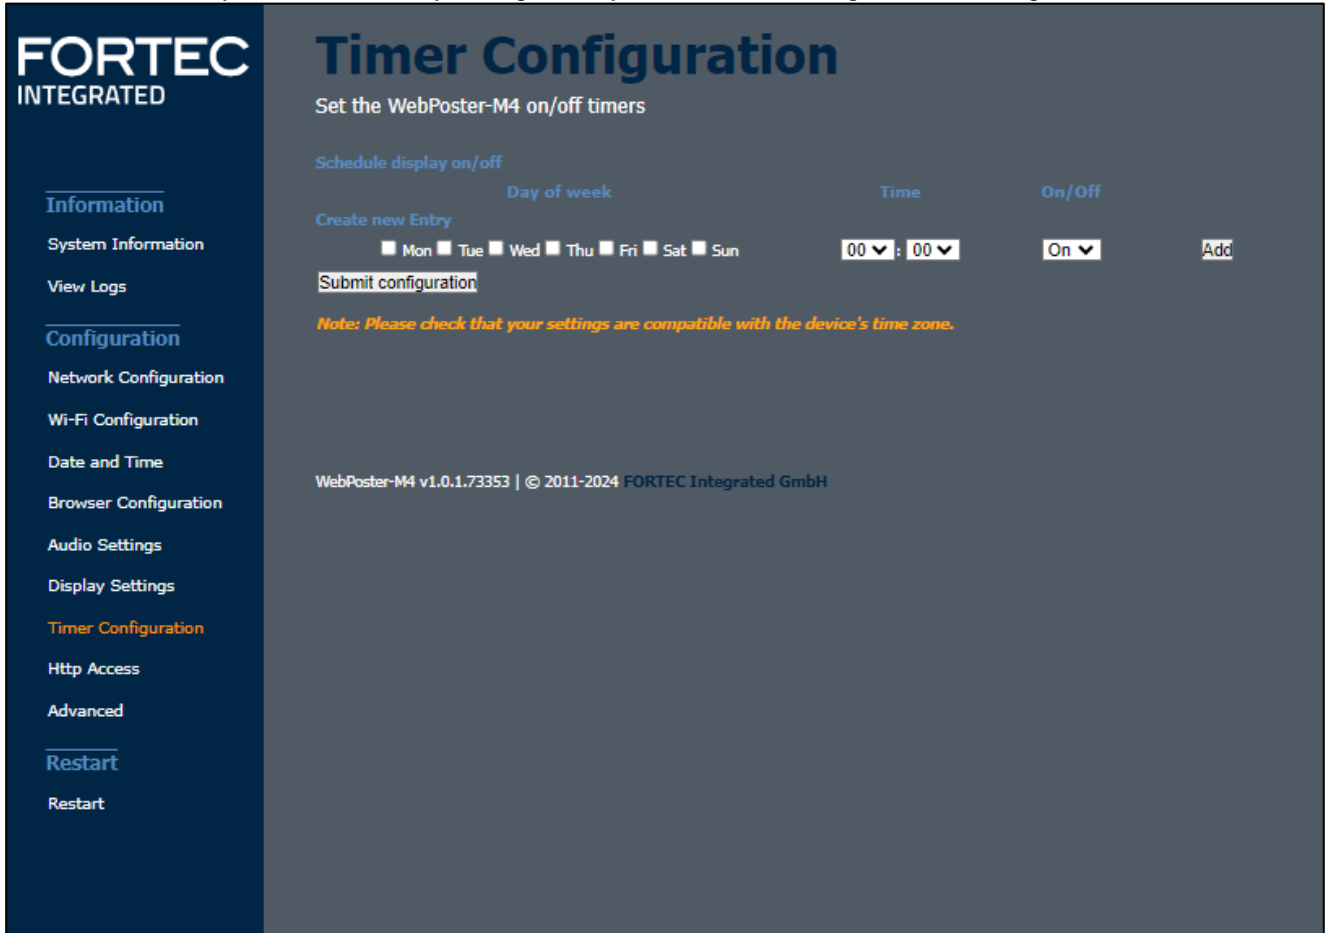

5.9 Display Settings

This page can be used to configure the orientation of the content on the screen.

Landscape:


The content is shown on the display in landscape mode (default).

Portrait:

The content is shown on the display in portrait mode (rotated 90° counterclockwise).

Submit settings:

Apply and save the display orientation.

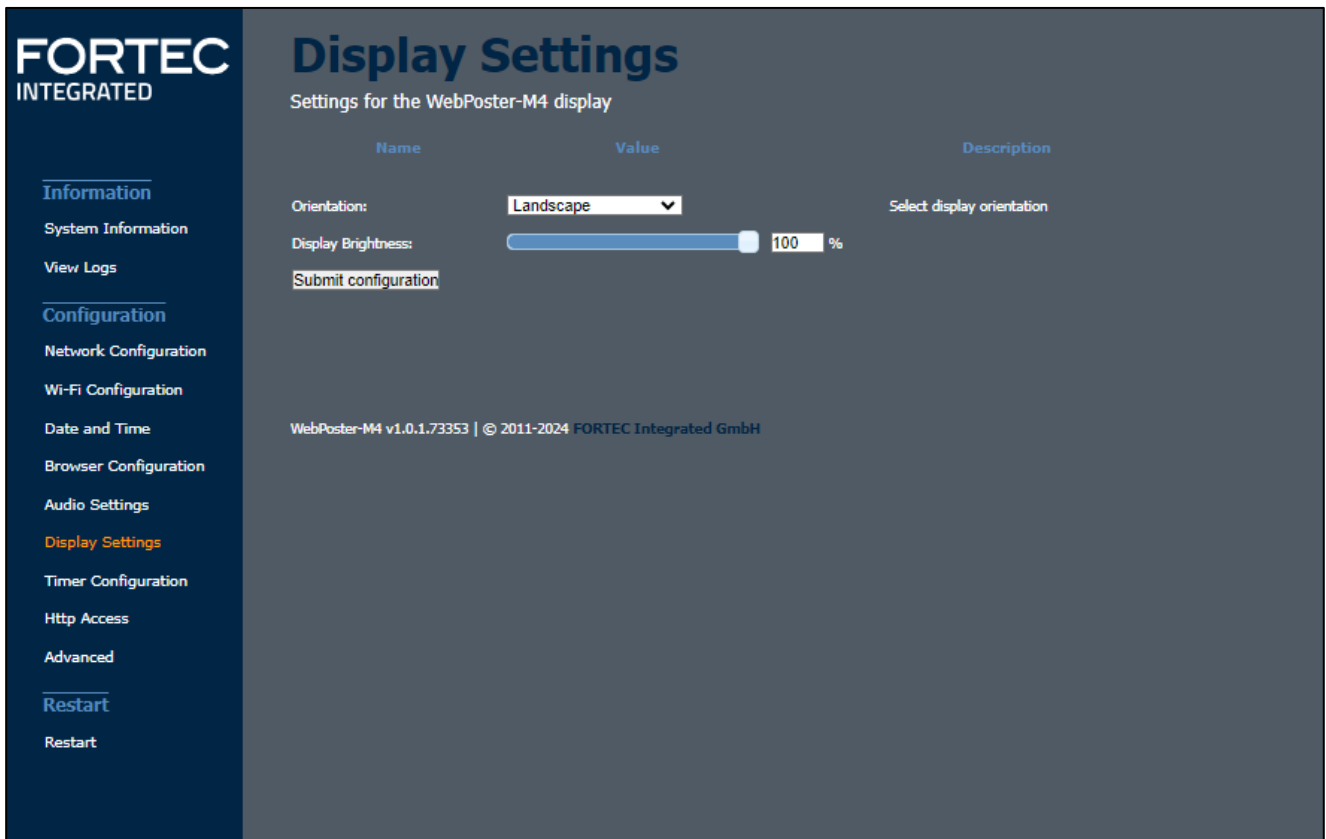

5.10 Password Settings

This is the menu to change the password of WebPoster-M4. This password is required to access the device with Artista Device Finder and with this Web Interface.

The Username is not configurable. The new password must be entered twice to prevent the device from being inaccessible due to typing errors.

Clear:

Use this button to reset the form data. This will have no effect on the actual password setting - only the form inputs will be cleared.

Submit:

By pressing this button, the new password will be activated, and you will have to re-login on changing to any other page of the web interface.

FORTEC
INTEGRATED

Information

- System Information
- View Logs

Configuration

- Network Configuration
- Wi-Fi Configuration
- Date and Time
- Browser Configuration
- Audio Settings
- Display Settings
- Timer Configuration
- Http Access**
- Advanced

Restart

- Restart

Password Settings

Create an arbitrary password for the WebPoster-M4 Web Interface

Username:

Password:

Repeat Password:

WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH

5.11 Advanced Options

This is the menu to update the WebPoster-M4 firmware or reset the device to the factory settings.

The screenshot shows the 'Advanced Options' page of the WebPoster-M4 web interface. On the left is a dark blue sidebar with the FORTEC INTEGRATED logo and a navigation menu. The main content area is light blue and contains several sections:

- Information:** System Information, View Logs.
- Configuration:** Network Configuration, Wi-Fi Configuration, Date and Time, Browser Configuration, Audio Settings, Display Settings, Timer Configuration.
- Http Access:** Advanced (highlighted in orange), Restart.
- Advanced Options (Main Content):**
 - WebPoster-M4 update and maintenance options:**
 - Firmware Update / Board Setup:**

Please select the correct setup file. Please ensure that the file fits your hardware needs. In case of any doubt please contact our support team: support@fortec-integrated.de

WebPoster-M4 setup file: Keine ausgewählt
 - Artista Device Finder Support:**

Artista Device Finder Support is currently ENABLED
 - HDMI Input Priority:**

If HDMI input priority is enabled, the video signal coming from the external HDMI input port is displayed on the screen instead of the signal coming from the internal media player. If the external HDMI source is disconnected or switched off, the system switches back to the internal media player automatically. If HDMI input priority is disabled, the external HDMI input signal is ignored.

Input priority is currently ENABLED
 - Remote Monitoring / Control:**

Remote Monitoring is currently DISABLED

Toggle remote monitoring (VNC viewonly)

Remote Control is currently DISABLED

Toggle remote control (VNC)
 - openVPN:**

openVPN is currently DISABLED. You can not enable openVPN because of missing configuration.

Please select the correct openVPN configuration file (zip) that includes configuration, certificates and key. Please ensure that the file fits your openVPN server needs.

openVPN configuration file (zip): Keine ausgewählt
 - Master Reset:**

Master reset sets all configuration parameters back to their default values, clears the internal storage and reboots the device!

At the bottom of the page, it says: WebPoster-M4 v1.0.1.73353 | © 2011-2024 FORTEC Integrated GmbH

5.11.1 Firmware Update / Board Setup

This function can be used to apply a firmware update or setup packages to WebPoster-M4.

Please contact your sales contact person in the FORTEC Group to get the required file.

To check information about your device, select **System Information** from the menu on the left. Please make sure that the firmware update or setup file you are going to install is compatible with your hardware.

Click the **Browse** button and then choose the correct firmware update or setup file. Then press the button **Upload to WebPoster-M4** to upload and install the software on the device.

Warning:
Do not power off your device while the update process is running!
This can damage the hardware!

Further details can be found in the section Firmware Update.

5.11.2 Artista Device Finder Support

Here you can enable or disable support for the Artista Device Finder tool. If enabled (default), network configuration can be done remotely from a PC connected to the same **physical** network (for browser access, the PC and the device must be in the same subnet, for Artista Device Finder this is not mandatory). Please see the Artista Device Finder manual for more information.


5.11.3 Master Reset

Master reset sets all configuration parameters of WebPoster-M4 back to their factory default values and reboots the device!

Click **Perform Master Reset** to execute this function and wait until WebPoster-M4 has restarted.

5.12 Restart System

In some cases, it might be necessary to restart WebPoster-M4. The device will automatically restart in 10 seconds but can also be restarted immediately by clicking the **Restart** button. Press **Stop** if you got on this page by mistake and don't need to restart the device.

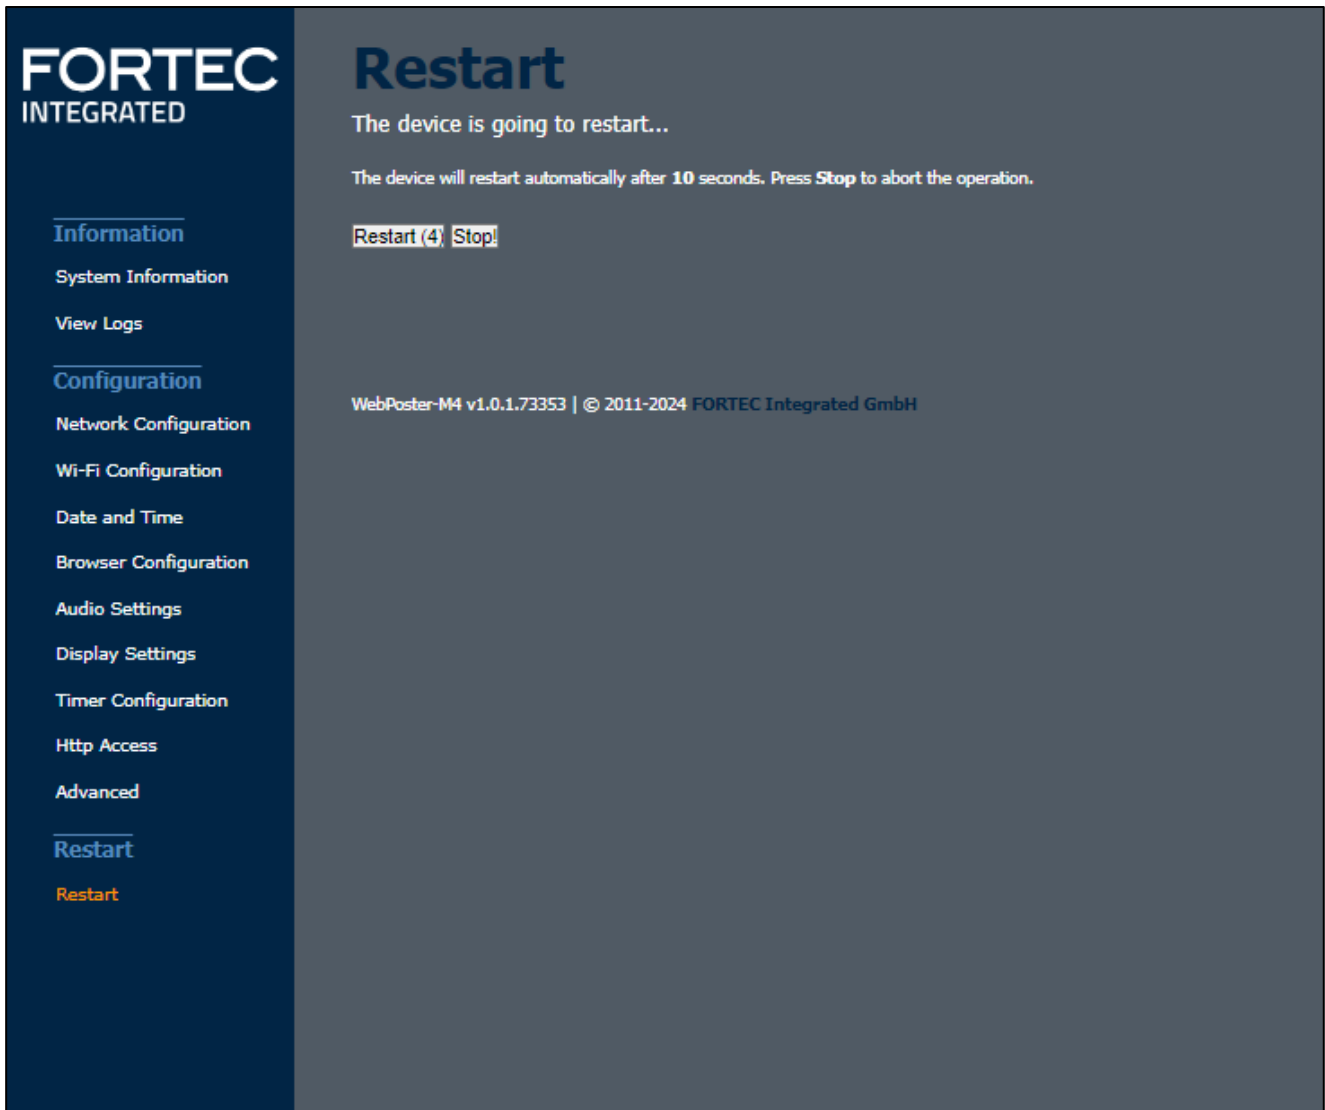

6 Factory Settings of WebPoster-M4

This section shows all factory settings of WebPoster-M4. WebPoster-M4 can be reset to these values by using the **Master Reset** in the Web Interface (see section Master Reset for details).

Default Network Configuration:

Parameter	Default Value	Notes
DHCP	Enabled	
IP Address	192.168.0.1	Default IP address, if no DHCP server is available
Netmask	255.255.255.0	Default netmask, if no DHCP server is available
Hostname	WebPoster-M4-xx-xx-xx	xx-xx-xx represents the last 6 bytes of the device's MAC address

Default Login Data:

This login data is required for Artista Device Finder and the Web Interface.

Parameter	Default Value	Notes
Username	Artista	Not configurable
Password	Artista	

Default Browser Configuration:

Parameter	Default Value	Notes
Web Page URL	https://www.fortec-integrated.de/	
Auto reload	0	Auto reload disabled

7 Firmware Update

This section describes how to update the firmware of WebPoster-M4.

Name of the Firmware Update File:

setup_WebPoster-M4_Firmware_Update_vV.E.R.S.bin

Note: "V.E.R.S" is a placeholder for the new firmware version number (e.g. "1.2.0.58835")

Warning:

**Do not power off your device while the update process is running!
This can damage the hardware!**

The WebPoster-M4 restarts after the firmware installation automatically. This is normal behavior

Preparations before the Firmware Update:

- Download the firmware zip file "WebPoster-M4_Firmware_Update_vV.E.R.S.zip" and save it on your computer
- Extract the contained firmware file and install it on your WebPoster-M4 as described in the next section

The new firmware can be installed on WebPoster-M4 by using one of the following methods:

7.1 Firmware Update via Web Interface

- Open the web frontend of WebPoster-M4
- Select the menu **Advanced**
- Click the **Browse** button in the section **Firmware Update / Board Setup** and select the correct firmware update file
- Press the button **Upload to WebPoster-M4** to upload and install the software on the device
- Wait up to 4 minutes and consider the messages in your browser until the installation has finished

7.2 Firmware Update via USB Flash Drive

- Copy the firmware update file into the root directory of an empty USB flash drive
- Insert the USB flash drive into the USB port of your WebPoster-M4
- Read the status messages on the display
- Wait up to 4 minutes until the installation has finished
- Verify if the installation was successful. To do so, insert the USB flash drive into a PC and open the log-file called "setup_WebPoster-M4_Firmware_Update_vV.E.R.S.log". Check the messages in this log file. For a successful update the last line states:
"Update complete, current FW version is V.E.R.S"

8 Technical Specification

Hardware Requirement	Distec Monitor Series	BLO-Line A1
		High Bright
		POS-Line
		POS-WP-PRO
Operating System	Embedded Linux	Based on Debian 11 (Bullseye)
	Kernel	Version 5.15.61
Integrated Browser	Chromium	Version 104.0.5112.105
	HTML5	Yes
	JavaScript	Yes
Display	Resolution	1024 x 768
		1280 x 800
		1280 x 1024
		1920 x 1080
		4K
Network	Ethernet 10/100	1x
	Wi-Fi	Yes via USB Dongle
	2G GSM	Not supported
	3G UMTS	Not supported
	4G LTE	Not supported
USB	USB 2.0 Host	2x
	USB 3.0 Host	Not available
Audio	USB Speaker	Not supported
	Stereo Line Out	1x
HDMI	Input	1x
	Output	Not available
Input Devices	Keyboard	Not supported
	Mouse	Not supported
	Touch Screen	Yes

9 Order Numbers

9.1 Distec BLO-Line A1 Monitor Series

The table below lists all available BLO-Line A1 monitors with preinstalled WebPoster-M4. For detailed information about the hardware and available options, please contact your sales contact person in the FORTEC Group.

Part #	Description	Display Size	Display Resolution
PA-45-003	BLO-Line 54.6 WebPoster M4 NA	54.6"	3840x2160
PA-45-005	BLO-Line 42.5 WebPoster M4 NA	42.5"	3840x2160
PA-45-011	BLO-Line 54.6 WebPoster M4 NA	54.6"	3840x2160
PA-45-015	BLO-Line 42.5 WebPoster M4 NA	42.5"	3840x2160

Our company network supports you worldwide with offices in Germany, Austria, Switzerland, the UK and the USA. For more information please contact:

Headquarters

Germany



FORTEC
GROUP

FORTEC Elektronik AG

Augsburger Str. 2b
82110 Germering

Phone: +49 89 894450-0

E-Mail: info@fortecag.de

Internet: www.fortecag.de

Fortec Group Members

Austria



FORTEC
INTEGRATED

FORTEC Integrated GmbH Office Vienna

Nuschinggasse 12
1230 Wien

Phone: +43 1 8673492-0

E-Mail: info@fortec-integrated.de

Internet: www.fortec-integrated.de

Germany



FORTEC
INTEGRATED

FORTEC Integrated GmbH

Augsburger Str. 2b
82110 Germering

Phone: +49 89 894363-0

E-Mail: info@fortec-integrated.de

Internet: www.fortec-integrated.de

Switzerland



FORTEC
SWITZERLAND

FORTEC Switzerland AG

Bahnhofstraße 3
5436 Würenlos

Phone: +41 44 7446111

E-Mail: info@fortec.ch

Internet: www.fortec.ch

United Kingdom



FORTEC
UNITED KINGDOM

FORTEC Technology UK Ltd.

Osprey House, 1 Osprey Court
Hinchingsbrooke Business Park
Huntingdon, Cambridgeshire, PE29 6FN

Phone: +44 1480 411600

E-Mail: info@fortec.uk

Internet: www.fortec.uk

USA



FORTEC
UNITED STATES

FORTEC US, Corp.

87 Raynor Avenue, Unit 1
Ronkonkoma, NY 11779

Phone: +1 631 5804360

E-Mail: info@fortec.us

Internet: www.fortec.us