



OUR GLOBAL  
COMPETENCE  
CENTRES

 APOLLO DISPLAY  
TECHNOLOGIES



 DISTEC



 DISPLAY  
TECHNOLOGY



# Manual

## Advantech

### SOM-7569

**COM Express Mini Computer-on-Module with Intel® Apollo Lake Atom™ x5-E3930/x5-E3940/x7-E3950,  
Pentium™ N4200E or Celeron™ N Series N3350E Processor**




---

The information contained in this document has been carefully researched and is, to the best of our knowledge, accurate. However, we assume no liability for any product failures or damages, immediate or consequential, resulting from the use of the information provided herein. Our products are not intended for use in systems in which failures of product could result in personal injury. All trademarks mentioned herein are property of their respective owners. All specifications are subject to change without notice.

---

# User Manual

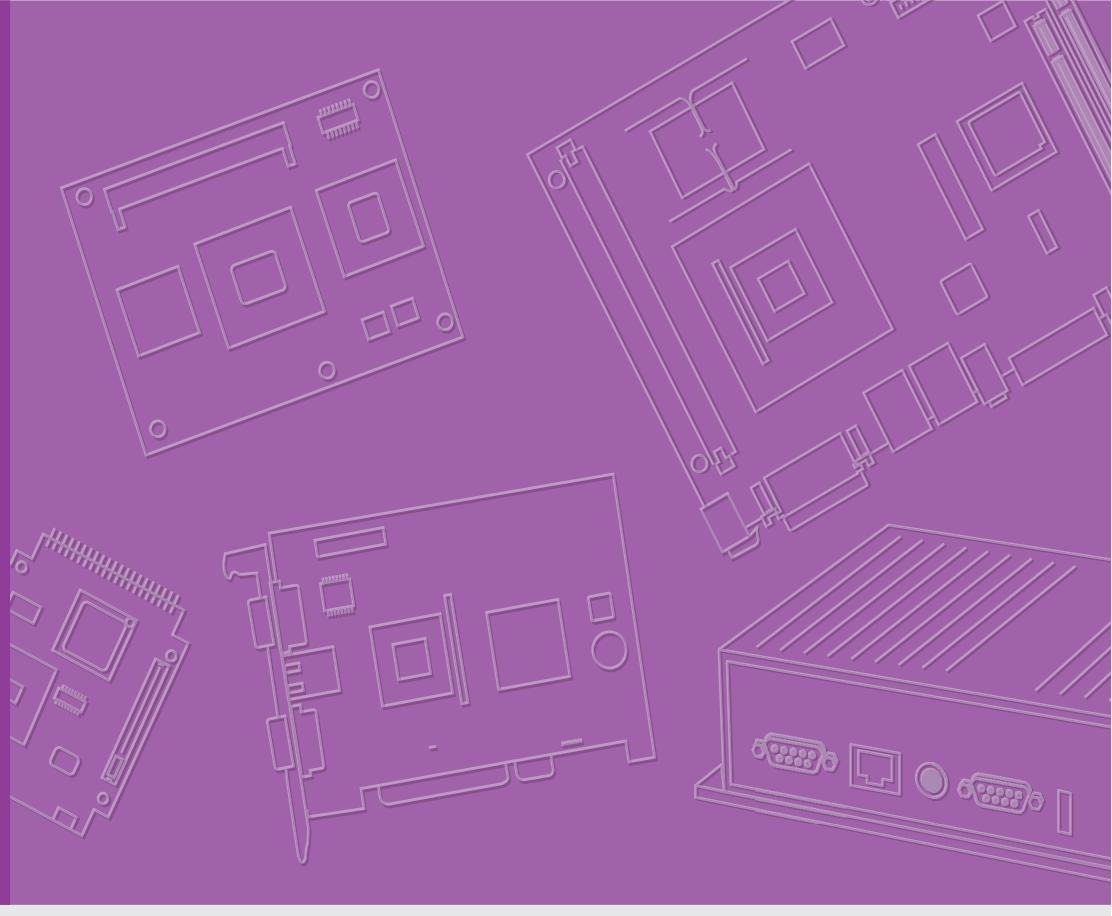

## SOM-7569

**COM Express Mini Module**

**ADVANTECH**

*Enabling an Intelligent Planet*

---

## Copyright

The documentation and the software included with this product are copyrighted 2022 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. The information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties that may result from its use.

## Acknowledgments

Intel® is a trademark of Intel® Corporation.

AMI is a trademark of American Megatrends, Inc.

IBM, PC, PS/2, and VGA are trademarks of International Business Machines Corporation.

Microsoft Windows®, DirectX® is a registered trademark of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

For more information on this and other Advantech products, please visit our websites at:

<http://www.advantech.com>

<http://www.advantech.com/eplatform>

For technical support and service, please visit our support website at:

<http://support.advantech.com/>

## Product Warranty (2 years)

Advantech warrants the original purchaser that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products that have been repaired or altered by persons other than repair personnel authorized by Advantech, or products that have been subject to misuse, abuse, accident, or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced free of charge during the warranty period. For out-of-warranty repairs, customers will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details.

If you believe your product to be defective, follow the steps outlined below.

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages displayed when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain a return merchandise authorization (RMA) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a completed Repair and Replacement Order Card, and a proof of purchase date (such as a photocopy of your sales receipt) into a shippable container. Products returned without a proof of purchase date are not eligible for warranty service.
5. Write the RMA number clearly on the outside of the package and ship the package prepaid to your dealer.

---

# Declaration of Conformity

## CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This type of cable is available from Advantech. Please contact your local supplier for ordering information.

Test conditions for passing also include the equipment being operated within an industrial enclosure. In order to protect the product from damage caused by electrostatic discharge (ESD) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

## FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

## FM

This equipment has passed FM certification. According to the National Fire Protection Association, work sites are categorized into different classes, divisions, and groups based on hazard considerations. This equipment is compliant with the specifications for Class I, Division 2, Groups A, B, C, and D indoor hazards.

# Technical Support and Assistance

1. Visit the Advantech website at [www.advantech.com/support](http://www.advantech.com/support) to obtain the latest product information.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before calling:
  - Product name and serial number
  - Description of your peripheral attachments
  - Description of your software (operating system, version, application software, etc.)
  - A complete description of the problem
  - The exact wording of any error messages

# Warnings, Cautions, and Notes

**Warning!** *Warnings indicate conditions that if not observed can result in personal injury!*



**Caution!** *Cautions are included to help prevent hardware damage and data losses. For example,*



*“Batteries are at risk of exploding if incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type as recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.”*

**Note!** *Notes provide additional, optional information.*



## Document Feedback

To assist us with improving this manual, we welcome all comments and constructive criticism. Please send all feedback in writing to support@advantech.com.

## Packing List

Before system installation, check that the items listed below are included and in good condition. If any item does not accord with the list, contact your dealer immediately.

- SOM-7569 CPU Module
- 1960079608T000 Heatspreader for N4200, N3350 CPU SKU
- 1960079610T000 Heatspreader for E3950, E3940, E3930 CPU SKU

# Safety Instructions

1. Read these safety instructions carefully.
2. Retain this user manual for future reference.
3. Disconnect the equipment from all power outlets before cleaning. Use only a damp cloth for cleaning. Do not use liquid or spray detergents.
4. For pluggable equipment, the power outlet socket must be located near the equipment and easily accessible.
5. Protect the equipment from humidity.
6. Place the equipment on a reliable surface during installation. Dropping or letting the equipment fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. Do not cover the openings.
8. Ensure that the voltage of the power source is correct before connecting the equipment to a power outlet.
9. Position the power cord away from high-traffic areas. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage from transient overvoltage.
12. Never pour liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If any of the following occurs, have the equipment checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated the equipment.
  - The equipment has been exposed to moisture.
  - The equipment is malfunctioning, or does not operate according to the user manual.
  - The equipment has been dropped and damaged.
  - The equipment shows obvious signs of breakage.
15. Do not leave the equipment in an environment with a storage temperature of below -20 °C (-4 °F) or above 60 °C (140 °F) as this may damage the components. The equipment should be kept in a controlled environment.
16. CAUTION: Batteries are at risk of exploding if incorrectly replaced. Replace only with the same or equivalent type as recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.
17. In accordance with IEC 704-1:1982 specifications, the sound pressure level at the operator's position does not exceed 70 dB (A).

**DISCLAIMER:** These instructions are provided according to IEC 704-1 standards. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

## Safety Precaution — Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from the PC chassis before manual handling. Do not touch any components on the CPU card or other cards while the PC is powered on.
- Disconnect the power before making any configuration changes. A sudden rush of power after connecting a jumper or installing a card may damage sensitive electronic components.



# Contents

<b>Chapter 1</b>	<b>General Information .....</b>	<b>1</b>
1.1	Introduction .....	2
	Table 1.1: Acronyms.....	3
1.2	Functional Block Diagram .....	4
1.3	Product Specifications.....	5
	Table 1.2: Feature List.....	5
	Table 1.3: Processor System .....	6
	Table 1.4: Graphics .....	7
	Table 1.5: Display Interface.....	7
	Table 1.6: Multiple-Display .....	8
<b>Chapter 2</b>	<b>Mechanical Information .....</b>	<b>15</b>
2.1	Board Information.....	16
	Figure 2.1 Board chips location - Front.....	16
	Figure 2.2 Board chips location- Front.....	16
	Figure 2.3 Board chips location– Back .....	17
2.2	Mechanical Drawing.....	17
	Figure 2.4 Board Mechanical Diagram - Front.....	17
	Figure 2.5 Board Mechanical Diagram - Front.....	18
	Figure 2.6 Board Mechanical Diagram – Back .....	18
	Figure 2.7 Board Mechanical Diagram – Side .....	19
2.3	Assembly Drawing .....	19
	Figure 2.8 Assembly Diagram .....	19
	Figure 2.9 Main Chip Height and Tolerance .....	20
	Figure 2.10Main Chip Height and Tolerance .....	20
<b>Chapter 3</b>	<b>AMI BIOS .....</b>	<b>21</b>
	Figure 3.1 Setup program initial screen.....	22
3.1	Entering Setup .....	22
3.2	Main Setup .....	22
	Figure 3.2 Main setup screen .....	23
3.3	Advanced BIOS Features Setup .....	24
	Figure 3.3 Advanced BIOS features setup screen .....	24
3.3.1	Trusted Computing .....	25
	Figure 3.4 ACPI Settings .....	25
3.3.2	ACPI Settings.....	26
	Figure 3.5 ACPI Settings .....	26
3.3.3	Embedded Controller .....	27
	Figure 3.6 Embedded Controller.....	27
3.3.4	Serial Port 1 Configuration.....	28
	Figure 3.7 Serial Port 1 Configuration .....	28
3.3.5	Serial Port 2 Configuration.....	29
	Figure 3.8 Serial Port 2 Configuration .....	29
3.3.6	Hardware Monitor .....	30
	Figure 3.9 Hardware Monitor .....	30
3.4	W83627DHGSEC Super IO Configuration.....	31
	Figure 3.10 W83627DHGSEC Super IO Configuration .....	31
3.4.1	Serial Port 3 Configuration.....	32
	Figure 3.11 Serial Port 3 Configuration .....	32
3.4.2	Serial Port 4 Configuration.....	33
	Figure 3.12 Serial Port 4 Configuration .....	33

3.4.3	Parallel Port Configuration.....	34
	Figure 3.13 Parallel Port Configuration .....	34
3.4.4	Serial Port Console Redirection.....	35
	Figure 3.14 Serial Port Console Redirection .....	35
	Figure 3.15 Legacy Console Redirection Settings .....	36
3.4.5	CPU Configuration.....	37
	Figure 3.16 CPU Configuration .....	37
3.4.6	Socket 0 CPU Configuration.....	38
	Figure 3.17 Socket 0 CPU Configurations.....	38
3.4.7	CPU Power Management.....	39
	Figure 3.18 Socket 0 CPU Configurations.....	39
3.4.8	Network Stack Configuration .....	40
	Figure 3.19 Network Stack Configuration .....	40
3.4.9	CSM Configuration .....	41
	Figure 3.20 CSM Configuration .....	41
3.4.10	NVMe Configuration .....	42
	Figure 3.21 NVMe Configuration .....	42
3.4.11	SDIO Configuration.....	43
	Figure 3.22 SDIO Configuration .....	43
3.4.12	USB Configuration.....	44
	Figure 3.23 USB Configuration.....	44
3.4.13	Platform Trust Technology.....	45
	Figure 3.24 Platform Trust Technology .....	45
3.4.14	Security Configuration .....	46
	Figure 3.25 Security Configuration .....	46
3.5	Chipset.....	47
	Figure 3.26 Chipset Setup.....	47
3.5.1	North Bridge.....	48
	Figure 3.27 North Bridge .....	48
3.5.2	South Bridge .....	49
	Figure 3.28 South Bridge.....	49
3.5.3	Uncore Configuration.....	50
	Figure 3.29 Uncore Configuration .....	50
3.5.4	South Cluster Configuration.....	51
	Figure 3.30 South Cluster Configuration .....	51
	Figure 3.31 HD-Audio Configuration .....	52
	Figure 3.32 PCI Express Configuration .....	53
	Figure 3.33 LAN .....	55
	Figure 3.34 PCI Express Root Port 0 Configuration .....	56
	Figure 3.35 PCI Express Root Port 1 Configuration .....	57
	Figure 3.36 PCI Express Root Port 2 Configuration .....	58
	Figure 3.37 PCI Express Root Port 3 Configuration .....	59
	Figure 3.38 SATA Drives.....	60
	Figure 3.39 SCC Configuration .....	61
	Figure 3.40 USB Configuration.....	62
	Figure 3.41 Miscellaneous Configuration .....	63
3.6	Security Setting.....	64
	Figure 3.42 Security Setup .....	64
3.7	Boot Settings.....	65
	Figure 3.43 Boot Settinga.....	65
3.8	Save & Exit .....	66
	Figure 3.44 Save & Exit.....	66

## Chapter 4 S/W Introduction & Installation..... 67

4.1	S/W Introduction .....	68
4.2	Driver Installation .....	68
	4.2.1 Windows Driver Setup .....	68
	4.2.2 Other OS.....	68

4.3	Advantech iManager .....	68
<b>Appendix A</b>	<b>Pin Assignments .....</b>	<b>71</b>
A.1	SOM-7569 Type 10 Pin Assignment.....	72
	Table A.1: SOM-7569 Row A,B .....	72
<b>Appendix B</b>	<b>Watchdog Timer .....</b>	<b>75</b>
B.1	Programming the Watchdog Timer .....	76
<b>Appendix C</b>	<b>Programming GPIO .....</b>	<b>77</b>
C.1	GPIO Register.....	78
<b>Appendix D</b>	<b>System Assignments .....</b>	<b>79</b>
D.1	System I/O Ports .....	80
	Table D.1: System I/O ports.....	80
D.2	Interrupt Assignments .....	82
	Table D.2: Interrupt Assignments.....	82
D.3	1st MB Memory Map .....	83
	Table D.3: 1st MB Memory Map .....	83



# Chapter 1

## General Information

This chapter details background information on the SOM-7569 COM Express Mini CPU Module.

Sections include:

- Introduction
- Functional Block Diagram
- Product Specification

## 1.1 Introduction

SOM-7569 is a COM Express Mini module with type-10 pin-out that fully complies with the PICMG (PCI Industrial Computer Manufacturers Group) COM.0 R2.1 specifications. This low-power CPU module is equipped with the latest Intel® Atom™ E3900 & Pentium™ and Celeron™ N Series Processors single-chip processors, which are manufactured on 14-nm process technology. SOM-7569 supports up to 8GB single channel DDR3L 1866 (non-ECC)/1600(ECC) MT/s onboard memory, with higher memory bandwidth for better performance. In addition, this mini module supports eMMC onboard storage; it is suitable for lower power or handheld applications such as those found in digital signage, medical, automation and transportation scenarios.


SOM-7569 features low power Intel® Gen 9-Low power graphics and HEVC, H.264, MVC, VP8, VP9, JPEG/MJPEG media encode & decode engine and MPEG2, VC-1, WMV9 decode, with up to 18 Execution Units. SOM-7569 supports 3D rendering, media compositing and video encoding. It includes the latest DX, OpenGL 4.3, OGL ES 3.0, and OpenCL 1.2 functions. In addition, this mini module provides multiple display interfaces — one channel LVDS or eDP, and HDMI/DisplayPorts, which are able to support dual displays. This product is designed to support wide-range voltage input (4.75 ~ 20 Vdc) and adopts a diverse array of I/O interfaces — including 4 x PCIe x1 for better data transmission, and offers one Intel® i210IT/i210AT LAN controller, 2 x SATA Gen3, 8 x USB 2.0, 2 x USB 3.0, 2 x COM ports, SMBus, I2C, and HD audio interface functions.

Advantech iManager was designed to satisfy numerous embedded application requirements — such as multi-level watchdog timer, voltage and temperature monitoring, and thermal protection through processor throttling, as well as LCD backlight on/off, brightness control, and embedded storage information. Combined with Advantech SUSI Access, it can remotely monitor and control devices via the Internet for easy maintenance. All Advantech COM Express modules integrate iManager and SUSI Access to benefit customer's applications.

**Table 1.1: Acronyms**

Term	Define
AC'97	Audio CODEC (Coder-Decoder)
ACPI	Advanced Configuration Power Interface – standard to implement power saving modes in PC-AT systems
BIOS	Basic Input Output System – firmware in PC-AT system that is used to initialize system components before handing control over to the operating system
CAN	Controller-area network (CAN or CAN-bus) is a vehicle bus standard designed to allow microcontrollers to communicate with each other within a vehicle without a host computer
DDI	Digital Display Interface – containing DisplayPort, HDMI/DVI, and SDVO
EAPI	Embedded Application Programmable Interface <ul style="list-style-type: none"> <li>■ Software interface for COM Express® specific industrial function</li> <li>■ System information</li> <li>■ Watchdog timer</li> <li>■ I2C Bus</li> <li>■ Flat Panel brightness control</li> <li>■ User storage area</li> <li>■ GPIO</li> </ul>
GbE	Gigabit Ethernet
GPIO	General purpose input output
HDA	Intel High Definition Audio (HD Audio) refers to the specification released by Intel in 2004 for delivering high definition audio that is capable of playing back more channels at higher quality than AC'97
I2C	Inter Integrated Circuit – 2 wire (clock and data) signaling scheme allowing communication between integrated circuit, primarily used to read and load register values
ME	Management Engine
PC-AT	“Personal Computer – Advanced Technology” – an IBM trademark term used to refer to Intel based personal computer in 1990s
PEG	PCI Express Graphics
RTC	Real Time Clock – battery backed circuit in PC-AT systems that keeps system time and date as well as certain system setup parameters
SPD	Serial Presence Detect – refers to serial EEPROM on DRAMs that has DRAM Module configuration information
TPM	Trusted Platform Module, chip to enhance the security features of a computer system
UEFI	Unified Extensible Firmware Interface
WDT	Watchdog Timer

## 1.2 Functional Block Diagram

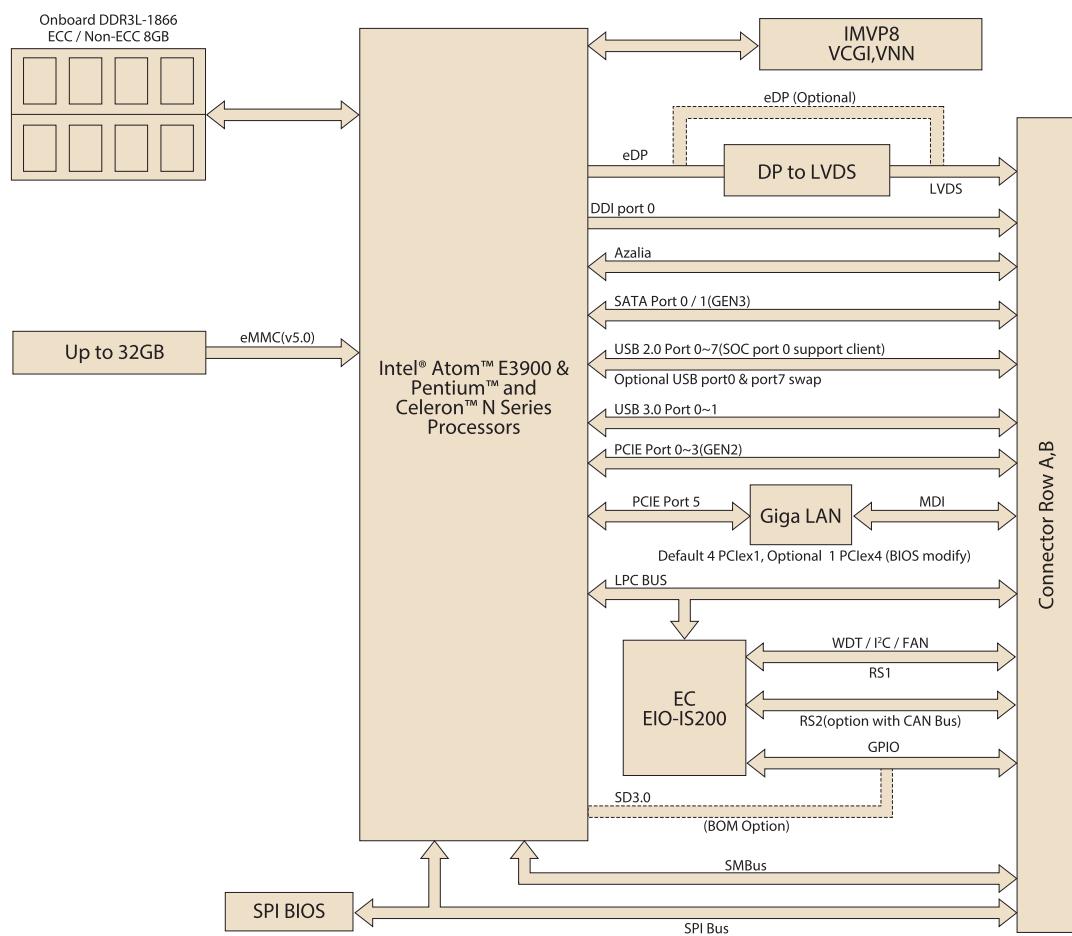

## 1.3 Product Specifications

### Compliance

- COM R.2.1 Type 10 Mini Module
- 84 x 55 mm

### Feature List

**Table 1.2: Feature List**

A-B	System I/O	Rev.2.1 Type 10	SOM-7569 R2.1 Type 10
	PCI Express Lanes 0 - 5	1 / 4	3/4
	LVDS Channel A	0 / 1	1
	LVDS Channel B	N/A	N/A
	eDP on LVDS CH A Pins	0 / 1	1 (Option)
	VGA Port	N/A	N/A
	TV-Out	N/A	N/A
	Digital Display Interface 0	0 / 1	1
	Serial Ports 1 - 2 **	0 / 2	2
	CAN Interfaces on SER1	0 / 1	1 (Option)
	SATA / SAS Ports	1 / 2	2
	AC'97 / HDA Digital Interface	0 / 1	1
	USB 2.0 Ports (Host)	4 / 8	8
	USB Client (USB 2.0)	0 / 1	1 (Option)
	USB 3.0 Ports (Host)	0 / 2	2
	LAN Port 0	1 / 1	1
	Express Card Support	0 / 2	2
	LPC Bus	1 / 1	1
	SPI	1 / 2	1
A-B	System Management	Rev.2.1 Type 10	SOM-7569 R2.1 Type 10
	SDIO (Muxed on GPIO)	0 / 1	1 (Option)
	General Purpose I/O	8 / 8	8
	SMBus	1 / 1	1
	I2C	1 / 1	1
	Watchdog Timer	0 / 1	1
	Speaker Out	1 / 1	1
	External BIOS ROM Support	0 / 2	2
	Reset Function	1 / 1	1
A-B	Power Management	Rev.2.1 Type 10	SOM-7569 R2.1 Type 10
	Thermal Protection	0 / 1	1
	Battery Low Alarm	0 / 1	1
	Suspend / Wake Signals	0 / 3	3
	Power Button Support	1 / 1	1
	Power Good	1 / 1	1
	VCC_5V_SBY Contacts	4 / 4	4

**Table 1.2: Feature List**

Sleep	0 / 1	1
Lid Input	0 / 1	1
Fan PWM / Tachometer **	0 / 2	2
Trusted Platform Modules	0 / 1	1
<b>A-B Power</b>	<b>Rev.2.1 Type 10</b>	<b>SOM-7569 R2.1 Type 10</b>
VCC_12V Contacts	12 / 12	12
<b>C-D System I/O</b>	<b>Rev.2.1 Type 10</b>	<b>SOM-7569 R2.1 Type 10</b>
PCI Express Lanes 16 - 31	N/A	N/A
PCI Express Graphics (PEG)	N/A	N/A
Muxed SDVO Channels 1 - 2	N/A	N/A
PCI Express Lanes 6 - 15	N/A	N/A
PCI Bus - 32 Bit	N/A	N/A
PATA Port	N/A	N/A
LAN Port 1 - 2	N/A	N/A
Digital Display Interfaces 1 - 3	N/A	N/A
USB 3.0 Ports	N/A	N/A
<b>C-D Power</b>	<b>Rev.2.1 Type 10</b>	<b>SOM-7569 R2.1 Type 10</b>
VCC_12V Contacts	N/A	N/A

### Processor System

**Table 1.3: Processor System**

CPU	Std. Freq.	Max. Turbo Freq.	Core/Threat	LLC Cache	TDP(W)
Atom X7-E3950	1.6 GHz	2 GHz	4/4	2MB	12W
Atom X5-E3940	1.6 GHz	1.8 GHz	4/4	2MB	9.5W
Atom X5-E3930	1.3 GHz	1.8 GHz	2/2	2MB	6.5W
Pentium N4200	1.1 GHz	2.5 GHz	4/4	2MB	6W
Celeron N3350	1.1 GHz	2.4 GHz	2/2	2MB	6W

### Memory

One channel DDR3L 1866 ECC / non-ECC onboard memory up to 8 GB.

## Graphics

Intel Gen9-LP graphics supports up to 18 EU (execution unit).

**Table 1.4: Graphics**

CPU	Graphics Controller	Base Freq.	Max. Burst Freq.	GFX EU
Atom X7-E3950	Intel HD Graphics 505	500 MHz	650 MHz	18
Atom X5-E3940	Intel HD Graphics 500	400 MHz	600 MHz	12
Atom X5-E3930	Intel HD Graphics 500	400 MHz	550 MHz	12
Pentium N4200	Intel HD Graphics 505	200 MHz	750 MHz	18
Celeron N3350	Intel HD Graphics 500	200 MHz	650 MHz	12

- **3D API support**  
DirectX (9.3, 10, 11.1, 12), OpenGL 4.3, OGL ES 3.0
- **Other API support**  
OpenCL 1.2
- **Media Hardware Decoder**  
HEVC (H.265) @L5, H.264 @5.2, MVC, MPEG2, VP8, VP9, VC-1, WMV9, JPEG/MJPEG
- **Media Hardware Encoder**  
HEVC (H.265) @L4, H.264@ 5.2, MVC, VP8, VP9, JPEG/MJPEG
- **Media Content Protection**  
PAVP, HDCP 2.2, WiDi, Play Ready3 DRM

## Display Interface

Supports single channel 18/24-bit LVDS (optionally can be eDP). Supports DDI0 with configurable DisplayPort (DP), HDMI,DVI.

**Table 1.5: Display Interface**

	LVDS	eDP	DP	HDMI
<b># of Ports</b>	Single channel 18/24-bit	1 port shared with LVDS	1 port shared with HDMI	1 port
<b>Standard</b>	ANSI/TIA/EIA-644- A-2001 standard	eDP1.4	DP1.2	HDMI1.4b
<b>Max. Resolution</b>	Up to 1366x768 @ 60Hz Option support eDP1.3	Up to 3840x2160 @60 Hz	Up to 4096×2160 @60 Hz	Up to 3840x2160 @30 Hz
<b>Data Rate</b>		5.4Gb/s	5.4Gb/s	2.9Gb/s
<b>HDCP</b>	N/A	N/A	1.4	1.4
<b>HD Audio</b>	N/A	N/A	Yes	Yes

## Multiple-Display

**Table 1.6: Multiple-Display**

		Single Display	Dual Display	
		LVDS, eDP, DP/ HDMI/DVI	LVDS+DP/HDMI/DVI	eDP+DP/HDMI/DVI
eDP	<b>LVDS</b>	Single channel 18/24-bit, up to 1366 x 768	Single channel 18/24-bit, up to 1366 x 768	-
	<b>eDP</b>	3840x2160 @60Hz	-	3840x2160 @60Hz
DDI0	<b>DP</b>	Up to 4096×2160 @60Hz	Up to 4096×2160 @60Hz	
	<b>HDMI</b> or	Up to 3840x2160 @30Hz	or	Up to 3840x2160 @30Hz
	<b>DVI</b>	1920 x 1080@60Hz	1920 x 1080@60Hz	

## Expansion Interface

### ■ PCIe x1

Intel natively integrates 4 x PCI Express x1 lanes.

	PCIe P0	PCIe P1	PCIe P2	PCIe P3	LAN
<b>Default</b>	x1	x1	x1	x1	Yes
<b>Option</b>			x4		Yes

### ■ HD Audio Interface

Supports Intel HD Audio interface integrated in Intel SoC.

### ■ LPC

Supports Low Pin Count (LPC) 1.1 specifications, without DMA or bus mastering. Allows connection to Super I/O, embedded controller, or TPM. LPC clock is 25MHz.

## Serial Bus

### ■ SMBus

Supports SMBus 2.0 specification with Alert pin.

### ■ I2C Bus

Supports I2C bus 8-bit and 10-bit address modes, at both 100KHz and 400KHz.

## I/O

### ■ Gigabit Ethernet

On-module Intel i210IT/i210AT supports IEEE802.3 for 1000BASE-T, 100BASE-TX, and 10BASE-T (802.3, 802.3u, and 802.3ab). Supports IPv4, IPv6, TCP/UDP, SCTP, ARP, Neighbor Discovery, EUI-64.

### ■ SATA

Supports 2 x ports SATA Gen3 (6.0 Gb/s), backward compliant to SATA Gen2 (3.0 Gb/s) and Gen1 (1.5 Gb/s). Maximum data rate is 600 MB/s. Supports AHCI 1.3.1 mode (not support IDE mode).

### ■ USB 3.0/USB 2.0

2 x ports USB 3.0 (5.0 Gbps) and 8 x ports USB 2.0 (480 Mbps) which are backward compatible to USB 1.x. For USB 3.0, supports LPM (U0, U1, U2, and U3) manageability to saving power.

### ■ USB 3.0

	P0	P1
<b>SoC</b>	P0	P1
<b>Schematics</b>		USB_0_1_OC#
<b>SoC USB_OC#</b>		USB_OC0#

■ **USB 2.0**

	<b>P0</b>	<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P4</b>	<b>P5</b>	<b>P6</b>	<b>P7</b>
<b>SoC</b>	P0	P1	P2	P3	P4	P5	P6	P7
<b>Schematics</b>	USB_0_1_OC#	USB_2_3_OC#	USB_4_5_OC#	USB_6_7_OC#				
<b>SoC USB_OC#</b>		USB_OC0#			USB_OC1#			

■ **SPI Bus**

Supports BIOS flash only. SPI clock can be 50MHz, 33MHz, or 20MHz, capacity up to 16MB.

■ **Watchdog**

Supports multi-level watchdog time-out output. Provides 1-65535 levels, from 100ms to 109.22 minutes interval.

■ **Serial port**

2 x ports 2-wire serial port (Tx/Rx) supports 16550 UART compliance.

- Programmable FIFO or character mode
- 16-byte FIFO buffer on transmitter and receiver in FIFO mode
- Programmable serial-interface characteristics: 5, 6, 7, or 8-bit character
- Even, odd, or no parity bit selectable
- 1, 1.5, or 2 stop bit selectable
- Baud rate up to 115.2K

■ **BIOS**

BIOS chip is on module by default. Allows users to place BIOS chip on carrier board with appropriate design and a pull-down to GND on BIOS\_DISABLE# pin.

**Note!** If system CMOS is cleared, we strongly suggest to go to BIOS setup menu and load default setting at first time of boot up.



## Power Management

■ **Power Supply**

Supports both ATX and AT power modes. VSB is for suspend power and can be optional if not required (suspend-to-RAM). RTC Battery may be optional if time/date is not required.

VCC: 5V +/- 5%

VSB: 5V +/- 5% (Suspend power)

RTC Battery Power: 2.0V ~ 3.3V

■ **PWROK**

Power OK from main power supply. A high value indicates that the power is good. This signal can be used to hold off Module startup to allow Carrier based FPGAs or other configurable devices time to be programmed.

■ **Power Sequence**

According to PICMG COM Express COM.0 R 2.1 specification.

■ **Wake Event**

Various wake-up event support allows the user to apply to different scenarios.

- Wake-on-LAN(WOL): Wake to S0 from S3/S4/S5
- USB Wake: Wake to S0 from S3
- PCIe Device Wake: depends on user inquiry and may need customized BIOS
- LPC Wake: depends on user inquiry and may need customized BIOS

- **Advantech S5 ECO Mode (Deep Sleep Mode)**  
Advantech iManager provides additional features to allow the system enter a very low suspend power mode – S5 ECO mode. In this mode, the Module will cut all power including suspend and active power into the chipset and keep an on-module controller active. Therefore, only an under 50mW power will consume which means user battery pack can last longer time. While this mode is enabled in BIOS, the system (or module) will only allow a power button to boot rather than others such as WOL.

## Environment

- **Temperature**  
Operating: 0 ~ 60 °C (32 ~ 140 °F), with a fan-less heatsink under 0.7m/s air flow chamber  
Storage: -40 ~ 85 °C (-40 ~ 185 °F)  
Extend: -40 ~85 °C (-40 ~ 185 °F)
- **Humidity**  
Operating: 40 °C @ 95% relative humidity, non-condensing  
Storage: 60 °C @ 95% relative humidity, non-condensing
- **Vibrations**  
IEC60068-2-64: Random vibration test under operation mode, 3.5Grms
- **Drop Test (Shock)**  
Federal Standard 101 Method 5007 test procedure with standard packing
- **EMC**  
CE EN55022 Class B and FCC Certifications: validate with standard development boards in Advantech chassis
- **MTBF**  
Please refer Advantech SOM-7569 Series Reliability Prediction Report No: TBC.

The mission of Advantech Embedded Software Services is to "Enhance quality of life with Advantech platforms and Microsoft Windows embedded technology." We enable Windows Embedded software products on Advantech platforms to more effectively support the embedded computing community. Customers are freed from the hassle of dealing with multiple vendors (Hardware suppliers, System integrators, Embedded OS distributor) for projects. Our goal is to make Windows Embedded Software solutions easily and widely available to the embedded computing community.

To install the drivers, please connect to internet and browse the website <http://support.advantech.com.tw> to download the setup file.

## Advantech iManager

Supports APIs for GPIO, smart fan control, multi-stage watchdog timer and output, temperature sensor, hardware monitor, etc. Followed by PICMG EAPI 1.0 specification that provides backward compatibility.

## Advantech WISE-PaaS/RMM

Cloud-based centralized remote IPC, IoT device HW & SW status monitoring and management.

### **Reliable:**

Remote monitoring and management for all connected devices with access control Integration of 3rd party protection and recovery solution and support server redundancy for service availability.

**Scalable:**

Supports up to 1000 IoT device connections.

Supports 3 layers of server hierarchy and unlimited sub-server amount.

**Extensible:**

Restful API web service, Node-red & WISE Agent framework allow users to make further development, customization, and integration based on their applications.

**Power Consumption & Performance**

For reference performance or benchmark data that compare with other module, please refer to "Advantech COM Performance & Power Consumption Table".

**Selection Guide w/ P/N:**

Part No.	SoC	Base/ Burst Freq.	Core	LLC	CPU TDP	Onboar d Mem ory	Onboar d Flash	Thermal Solutio n	Operatin g Tempera ture
SOM-7569CM0C-S2A1E	Pentium N4200	1.1GHz / 2.5GHz	4	2MB	6W	4GB / Non-ECC	N/A	Passive	0 ~ 60 °C
SOM-7569CM0C-S1A1E	Celeron N3350	1.1GHz / 2.4GHz	2	2MB	6W	4GB / Non-ECC	N/A	Passive	0 ~ 60 °C
SOM-7569CCBC-S6A1E	Atom X7-E3950	1.6GHz / 2GHz	4	2MB	12W	4GB / ECC	MLC 32GB	Passive	0 ~ 60 °C
SOM-7569CM0C-S5A1E	Atom X5-E3940	1.6GHz / 1.8GHz	4	2MB	9.5W	4GB / ECC	N/A	Passive	0 ~ 60 °C
SOM-7569CM0C-S3A1E	Atom X5-E3930	1.3GHz / 1.8GHz	2	2MB	6.5W	4GB / ECC	N/A	Passive	0 ~ 60 °C
SOM-7569DCBX-S6A1E	Atom X7-E3950	1.6GHz / 2GHz	4	2MB	12W	8GB / ECC	MLC 32GB	TBC	-40 ~ 85 °C
SOM-7569CCBX-S6A1E	Atom X7-E3950	1.6GHz / 2GHz	4	2MB	12W	4GB / ECC	MLC 32GB	TBC	-40 ~ 85 °C
SOM-7569CM0X-S5A1E	Atom X5-E3940	1.6GHz / 1.8GHz	4	2MB	9.5W	4GB / ECC	N/A	TBC	-40 ~ 85 °C
SOM-7569CM0X-S3A1E	Atom X5-E3930	1.3GHz / 1.8GHz	2	2MB	6.5W	4GB / ECC	N/A	TBC	-40 ~ 85 °C

**Note!** Any other SKU or combination is project based support. Please contact sales for details.



## Selection Guide w/ P/N, (for B2 version)

Part No.	SoC	Base Freq.	Core	LLC	CPU TDP	Onboard Memory	Onboard Flash	Thermal Solution	Operating Temperature
SOM-7569BNBCC-S2B2	Pentium N4200E	1.1GHz	4	2MB	6W	4GB / Non-ECC	MLC 32GB	Passive	0~60 °C
SOM-7569BN0CC-S1B2	Celeron N3350E	1.1GHz	2	2MB	6W	4GB / Non-ECC	N/A	Passive	0~60 °C
SOM-7569CCBCC-S6B2	Atom X7-E3950	1.6GHz	4	2MB	12W	8GB igrade / ECC	MLC 32GB	Passive	0~60 °C
SOM-7569BC0CC-S3B2	Atom X5-E3930	1.3GHz	2	2MB	6.5W	4GB / ECC	N/A	Passive	0~60 °C
SOM-7569BCBCC-S6B2	Atom X7-E3950	1.6GHz	4	2MB	12W	4GB / ECC	MLC 32GB	Passive	0~60 °C
SOM-7569CCBXC-S6B2	Atom X7-E3950	1.6GHz	4	2MB	12W	8GB igrade / ECC	MLC 32GB	Passive	-40 ~ 85 °C
SOM-7569BCBXC-S5B2	Atom X5-E3940	1.6GHz	4	2MB	9.5W	4GB / ECC	MLC 32GB	Passive	-40 ~ 85 °C
SOM-7569BC0XC-S3B2	Atom X5-E3930	1.3GHz	2	2MB	6.5W	4GB / ECC	N/A	Passive	-40 ~ 85 °C

## Packing list

Part No.	Description	Quantity
-	SOM-7569 CPU Module (N4200, N3350 CPU SKU)	1
1960079608T000	Heatspreader * For N4200, N3350 CPU SKU	1
Part No.	Description	Quantity
-	SOM-7569 CPU Module (E3950, E3940, E3930 CPU SKU)	1
1960079610T000	Heatspreader * For E3950, E3940, E3930 CPU SKU	1

## Development Board

Part No.	Description
SOM-DB5800-U0A2E	COMe Devel. Board Type10 pint-out Rev. A2

## Accessory

Part No.	Description
1960056280N001	Semi-Heatsink 84 x 55 x 13.2 mm (0 ~ 60 °C)
96LEDK-I057VG50NA1	5.7" LED PANEL 500N 640X480(G)
96LEDK-A084SV45NB2	8.4" LED PANEL 450N 800X600(G) G084SN05 V9
96LEDK-C150XG40NG1	15" LED PANEL 400N 1024X768(G) G150XGE-L04

## Pin Description

Advantech provides useful checklists for schematic design and layout routing. In schematic checklist, it will specify detail about each pin electrical properties and how to connect for different user scenes. In layout checklist, it will specify the layout constraints and recommendations for trace length, impedance, and other necessary information during design.

Please contact your nearest Advantech branch office or call for getting the design documents and further advance supports.



# **Chapter 2**

## **Mechanical Information**

**This chapter details mechanical information on the SOM-7569 COM Express Mini CPU Module.**


**Sections include:**

- Board Information**
- Mechanical Drawing**
- Assembly Drawing**

## 2.1 Board Information


The figures below indicate the main chips on SOM-7569 COM Express Mini CPU Module.

Please aware on these positions while designing the customer's own carrier board to avoid mechanical problems and for thermal solutions contacts for best thermal dissipation performance.

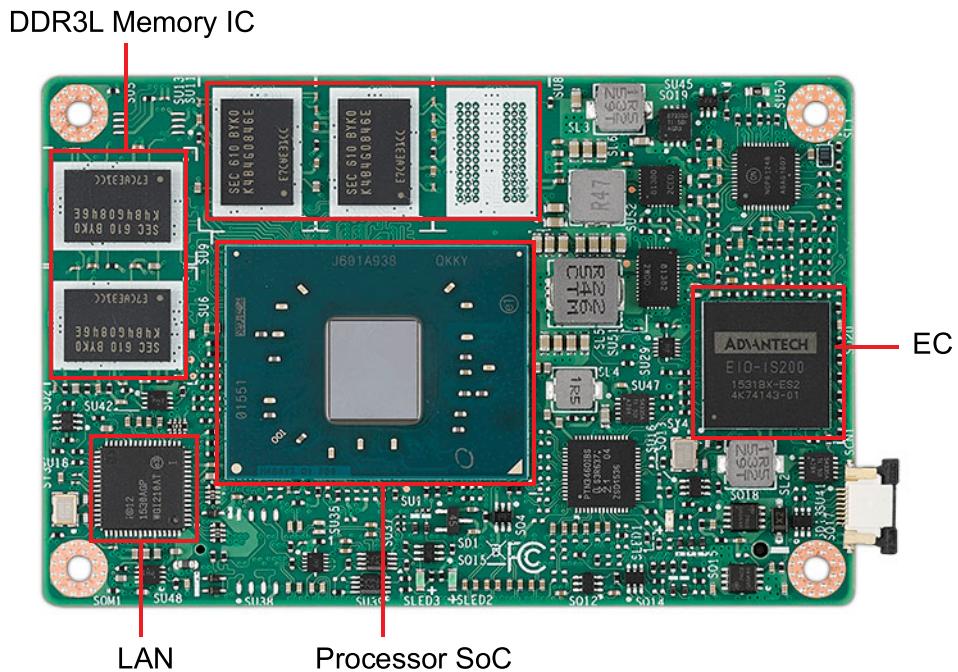


Intel® Pentium and Celeron N and J Series

**Figure 2.1 Board chips location - Front**

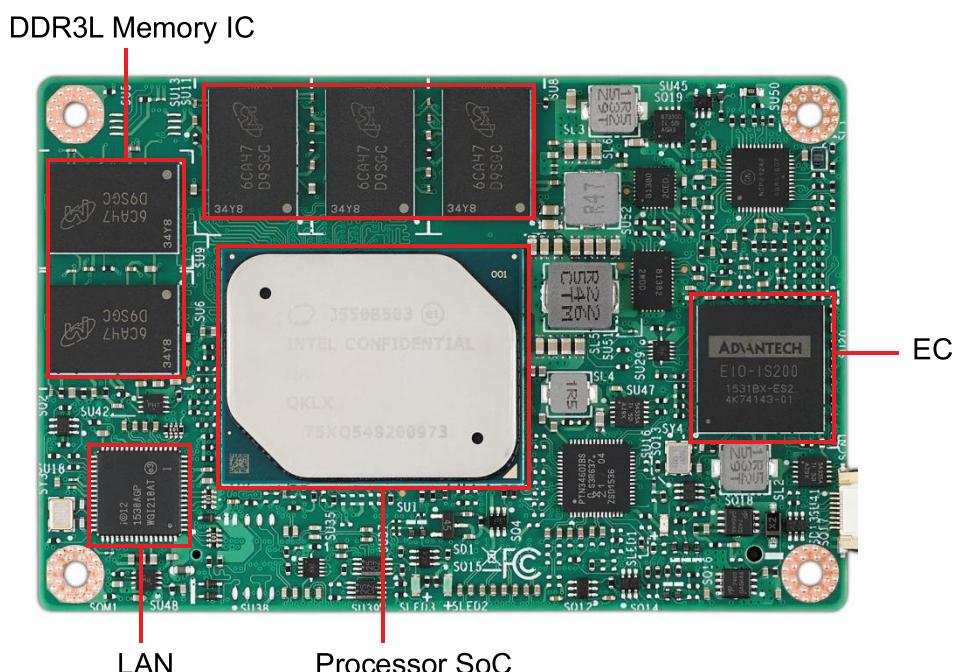

Intel® Atom™ Processor E3900 Series


**Figure 2.2 Board chips location- Front**

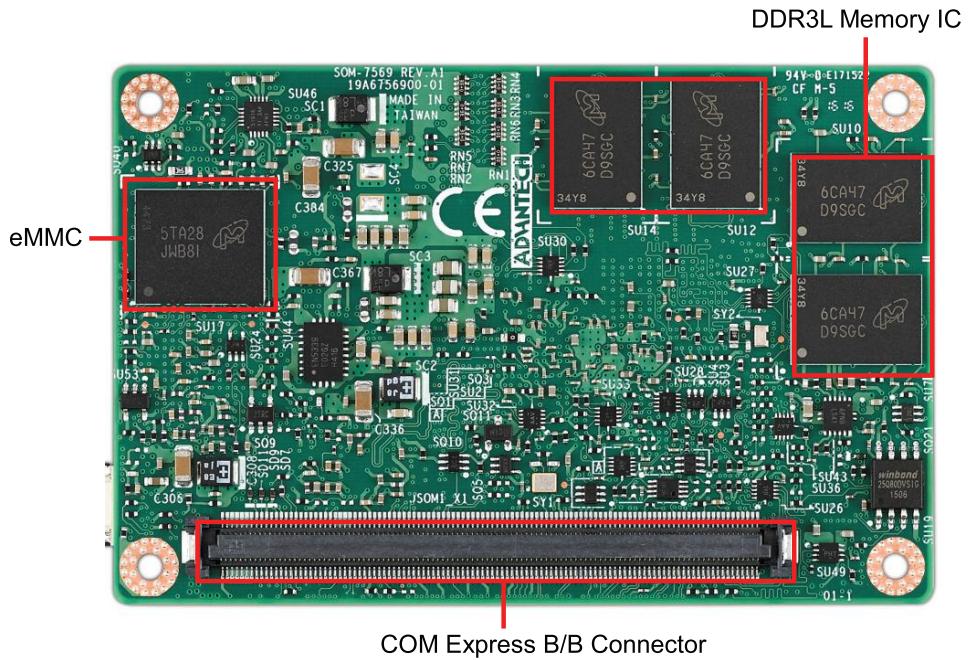

**Figure 2.3 Board chips location– Back**


## 2.2 Mechanical Drawing

For more details about 2D/3D models, please look on Advantech's COM support service website:<http://com.advantech.com>.

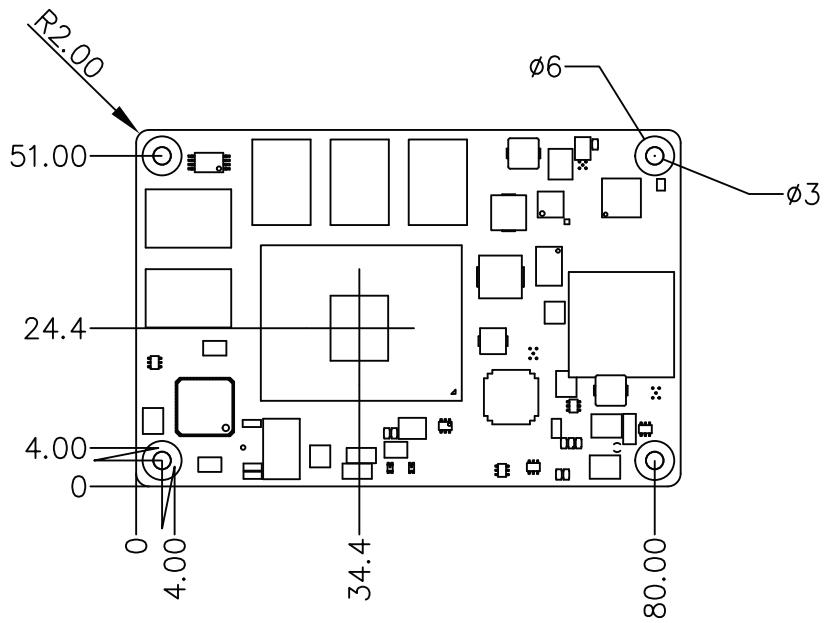


Intel® Pentium and Celeron N and J Series

**Figure 2.4 Board Mechanical Diagram - Front**

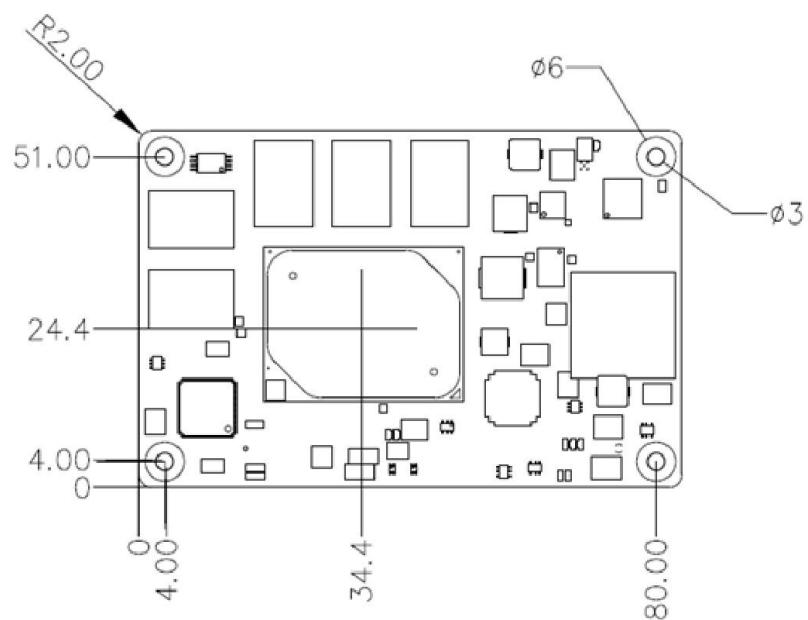

Intel® Atom™ Processor E3900 Series  
**Figure 2.5 Board Mechanical Diagram - Front**

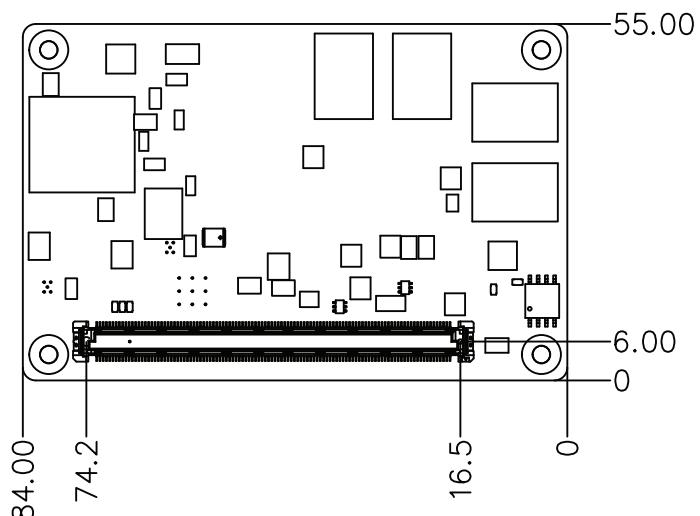

**Figure 2.6 Board Mechanical Diagram – Back**

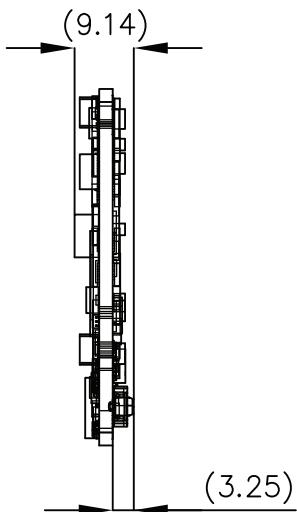


Figure 2.7 Board Mechanical Diagram – Side

## 2.3 Assembly Drawing

These figures demonstrate the assembly order from thermal module, COM Express CPU module to carrier board.


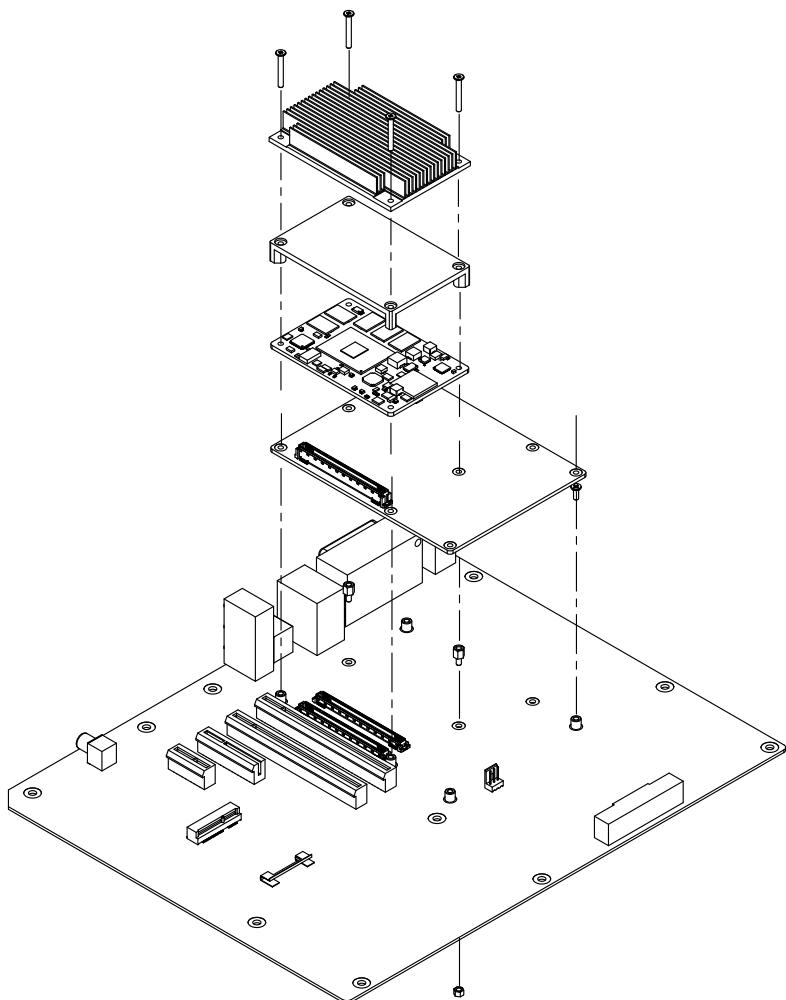



Figure 2.8 Assembly Diagram

## Assembly Drawing

Please consider the CPU and chip height tolerance when designing your thermal solution.

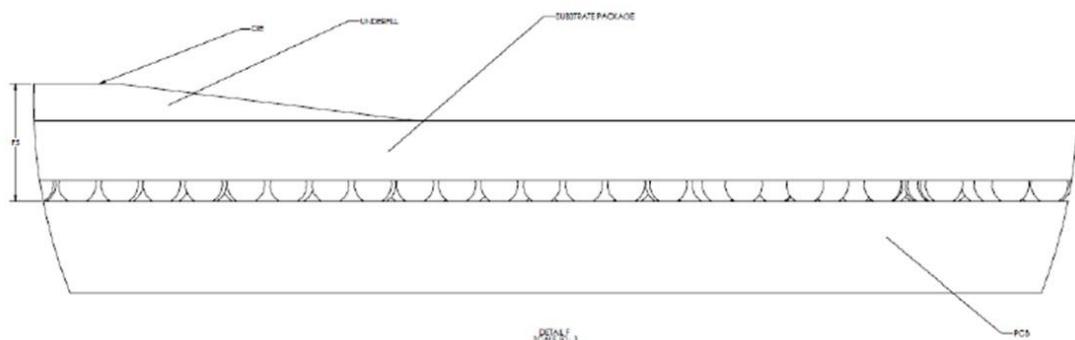

Intel® Pentium and Celeron N and J Series  
**Figure 2.9 Main Chip Height and Tolerance**

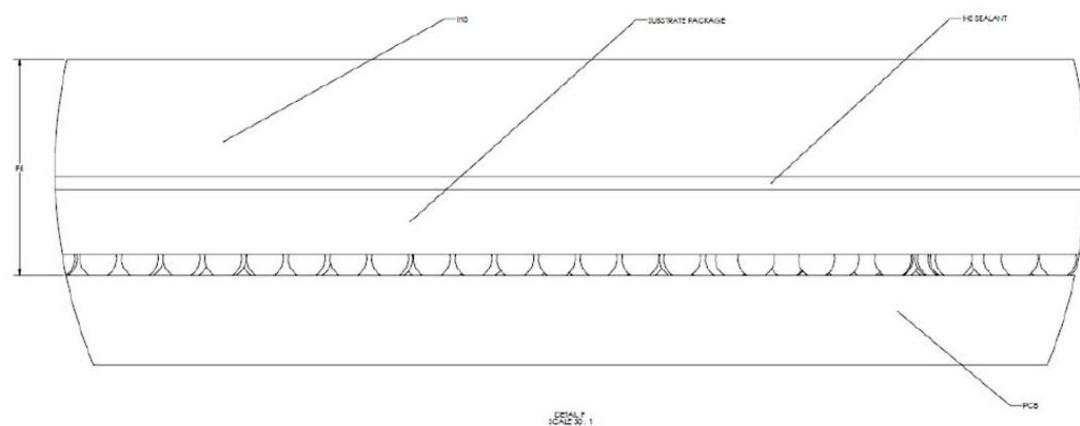

Intel® Atom™ Processor E3900 Series  
**Figure 2.10 Main Chip Height and Tolerance**

# Chapter 3

## AMI BIOS

This chapter details BIOS setup information for the SOM-7569 COM Express Mini CPU Module.

Sections include:

- Introduction
- Entering Setup
- Hot/Operation Key
- Exit BIOS Setup Utility

With the AMI BIOS Setup Utility, users can modify BIOS settings and control various system features. This chapter describes the basic navigation of the BIOS Setup Utility.



**Figure 3.1 Setup program initial screen**

AMI's BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This information is stored in flash ROM so it retains the Setup information when the power is turned off.

## 3.1 Entering Setup

Turn on the computer and then press <DEL> or <ESC> to enter Setup menu.

## 3.2 Main Setup

When users first enter the BIOS Setup Utility, users will enter the Main setup screen. Users can always return to the Main setup screen by selecting the Main tab. There are two Main Setup options. They are described in this section. The Main BIOS Setup screen is shown below.



Figure 3.2 Main setup screen

The Main BIOS setup screen has two main frames. The left frame displays all the options that can be configured. Grayed-out options cannot be configured; options in blue can. The right frame displays the key legend.

Above the key legend is an area reserved for a text message. When an option is selected in the left frame, it is highlighted in white. Often a text message will accompany it.

#### ■ System time / System date

Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time must be entered in HH:MM:SS format.

### 3.3 Advanced BIOS Features Setup

Select the Advanced tab from the SOM-7569 setup screen to enter the Advanced BIOS Setup screen. Users can select any item in the left frame of the screen, such as CPU Configuration, to go to the sub menu for that item. Users can display an Advanced BIOS Setup option by highlighting it using the <Arrow> keys. All Advanced BIOS Setup options are described in this section. The Advanced BIOS Setup screens are shown below. The sub menus are described on the following pages.

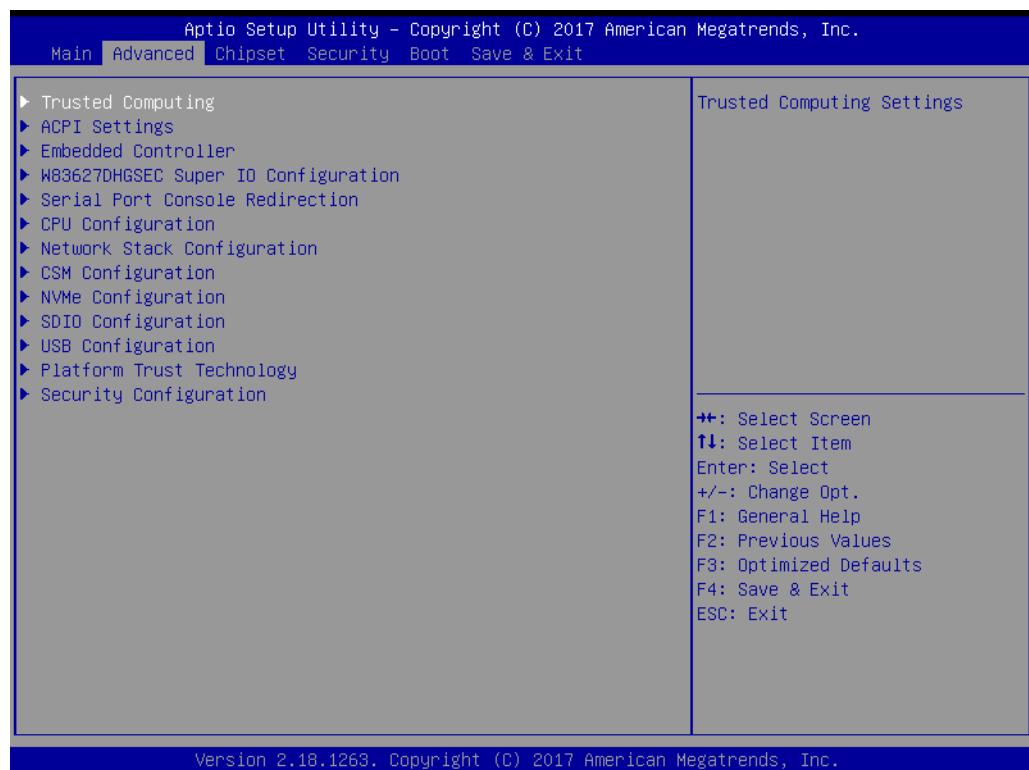


Figure 3.3 Advanced BIOS features setup screen

### 3.3.1 Trusted Computing

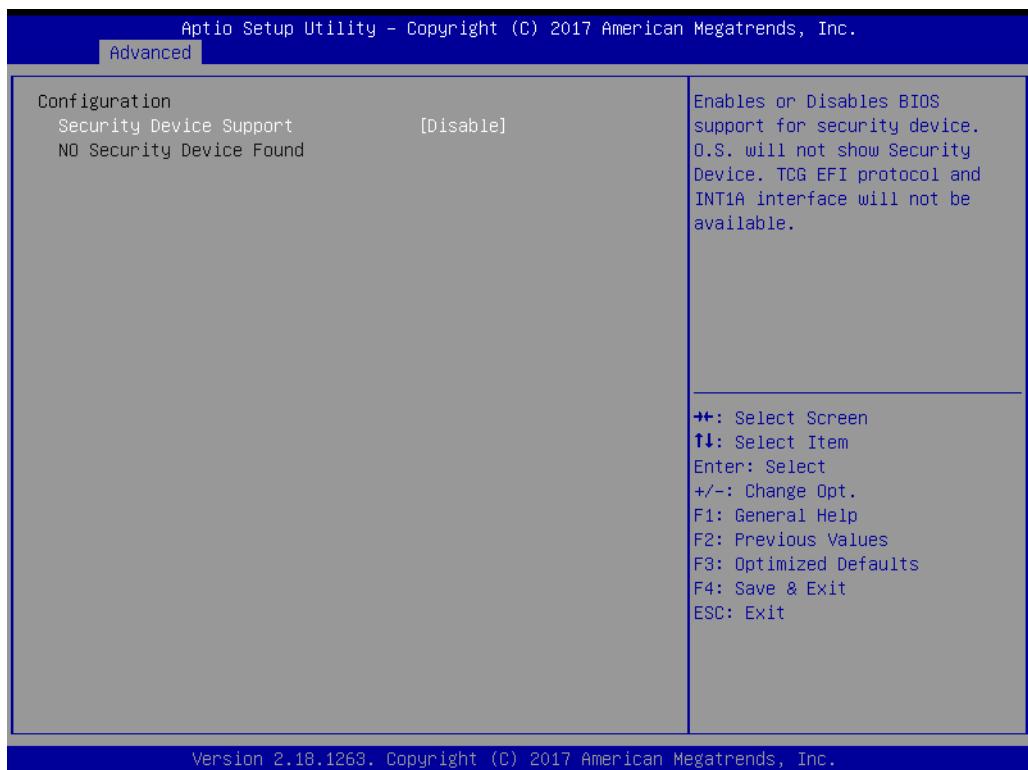


Figure 3.4 ACPI Settings

#### ■ Security Device Support

Enables or Disables BIOS support for security device. OS will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

### 3.3.2 ACPI Settings

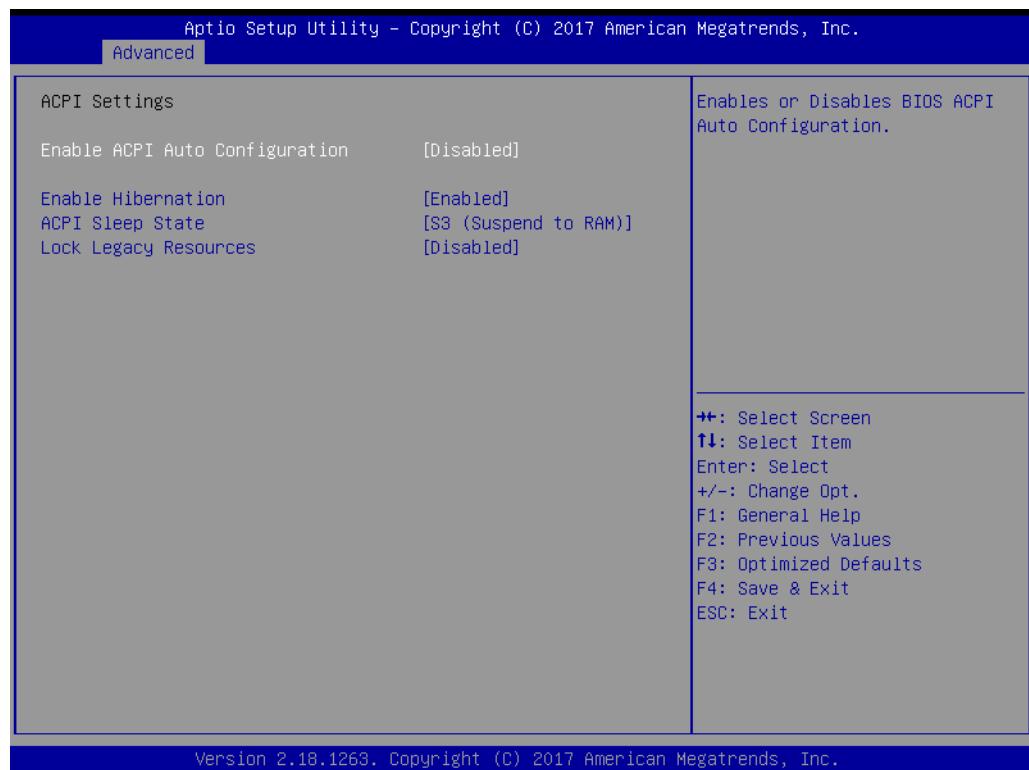


Figure 3.5 ACPI Settings

- **Enable ACPI Auto Configuration**

Enable/Disable BIOS ACPI Auto Configuration.

- **Enable Hibernation**

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

- **ACPI Sleep State**

Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.

- **Lock Legacy Resources**

Enable or Disable Lock of Legacy Resources.

### 3.3.3 Embedded Controller

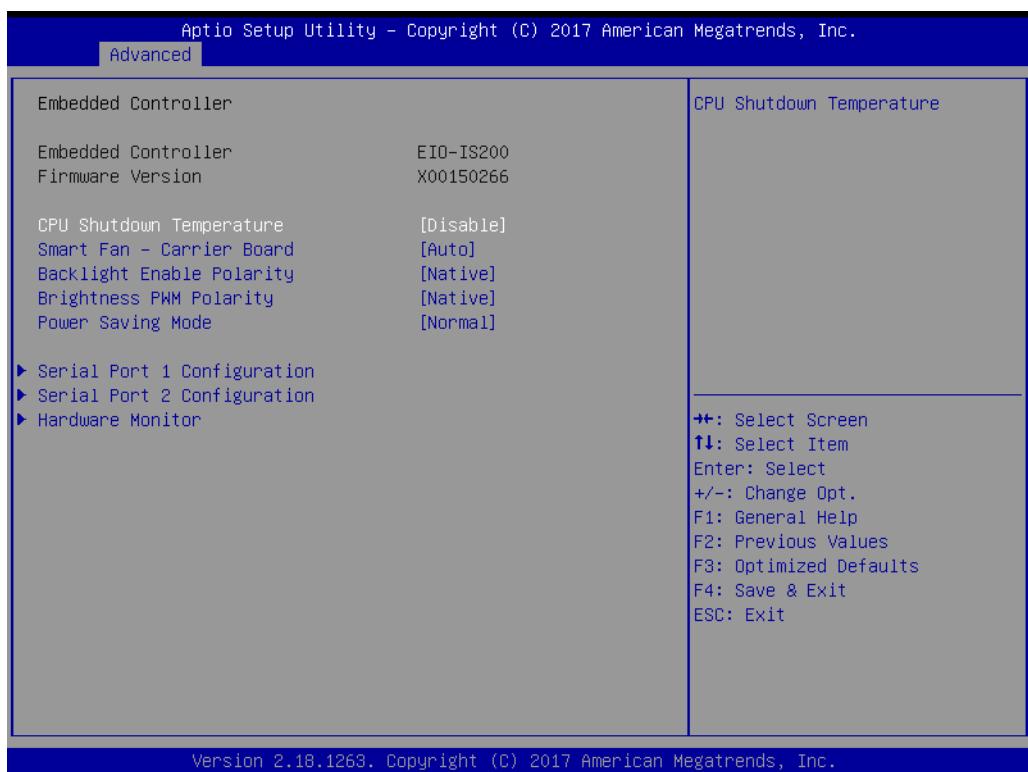


Figure 3.6 Embedded Controller

- **CPU Shutdown Temperature**  
Enable/Disable CPU Shutdown Temperature.
- **Smart Fan – Carrier Board**  
Control Carrier Board Smart FAN function. Get value from EC and only set value when Save Changes.
- **Backlight Enable Polarity**  
Switch Backlight Enable Polarity for Native or Invert
- **Brightness PWM Polarity**  
Backlight Control Brightness PWM Polarity for Native or Invert
- **Power Saving Mode**  
Select Power Saving Mode
- **Serial Port 1 Configuration**  
Set Parameters of Serial Port 1 (COMA)
- **Serial Port 2 Configuration**  
Set Parameters of Serial Port 2 (COMB)
- **Hardware Monitor**  
Monitor hardware status

### 3.3.4 Serial Port 1 Configuration



Figure 3.7 Serial Port 1 Configuration

- **Serial Port**

Enable/Disable Serial Port (COM).

- **Change Settings**

Select an optimal setting for Super IO device.

### 3.3.5 Serial Port 2 Configuration


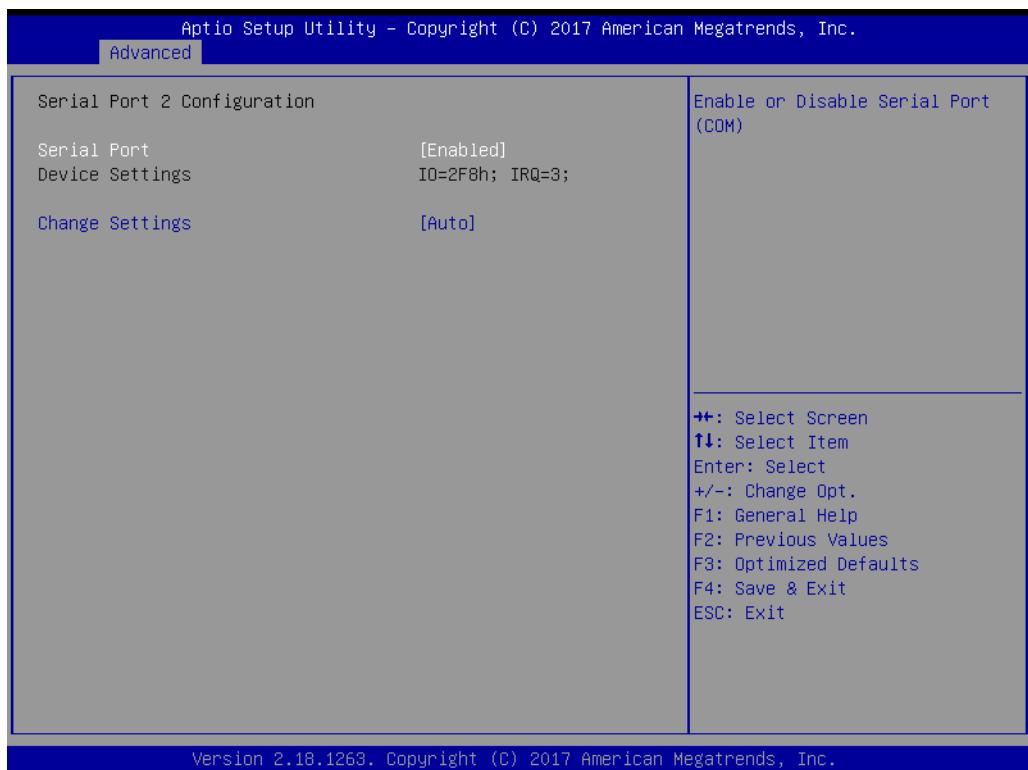


Figure 3.8 Serial Port 2 Configuration

- **Serial Port**  
Enable/Disable Serial Port (COM).
- **Change Settings**  
Select an optimal setting for Super IO device.

### 3.3.6 Hardware Monitor

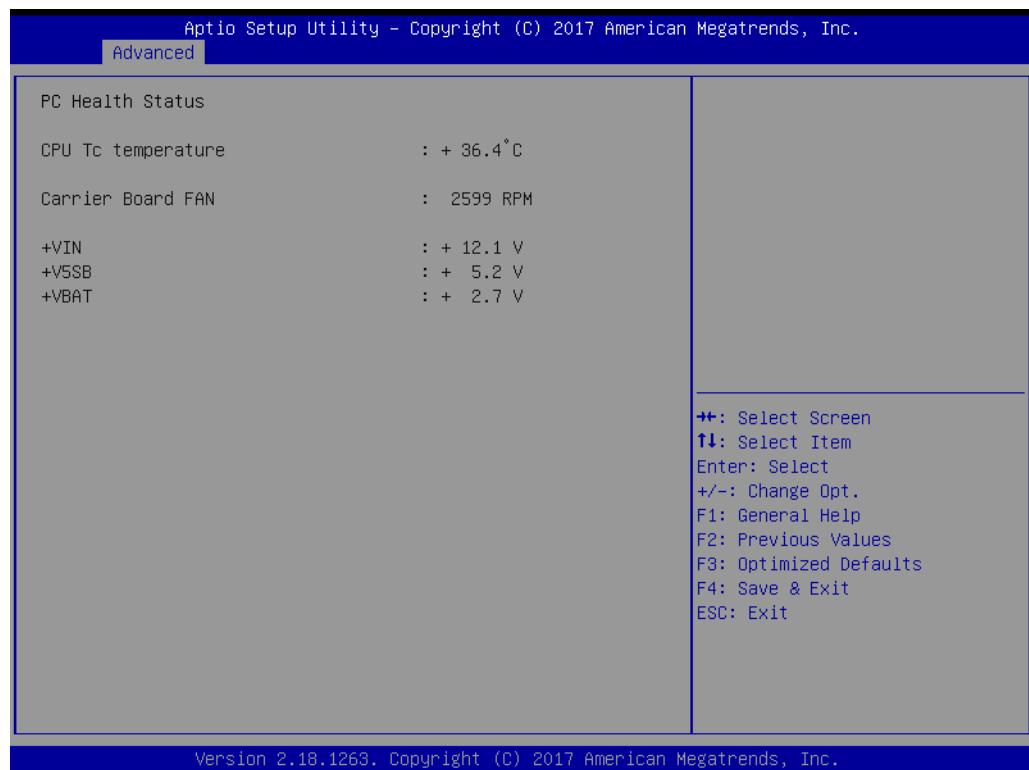

**Figure 3.9 Hardware Monitor**

#### ■ **Hardware Monitor Information**

This item shows Hardware information parameters.

## 3.4 W83627DHGSEC Super IO Configuration



Figure 3.10 W83627DHGSEC Super IO Configuration

- **Serial Port 3 Configuration**  
Set Parameters of Serial Port 3
- **Serial Port 4 Configuration**  
Set Parameters of Serial Port 4
- **Parallel Port Configuration**  
Set Parameters of Parallel Port (LPT/LPTE)

### 3.4.1 Serial Port 3 Configuration

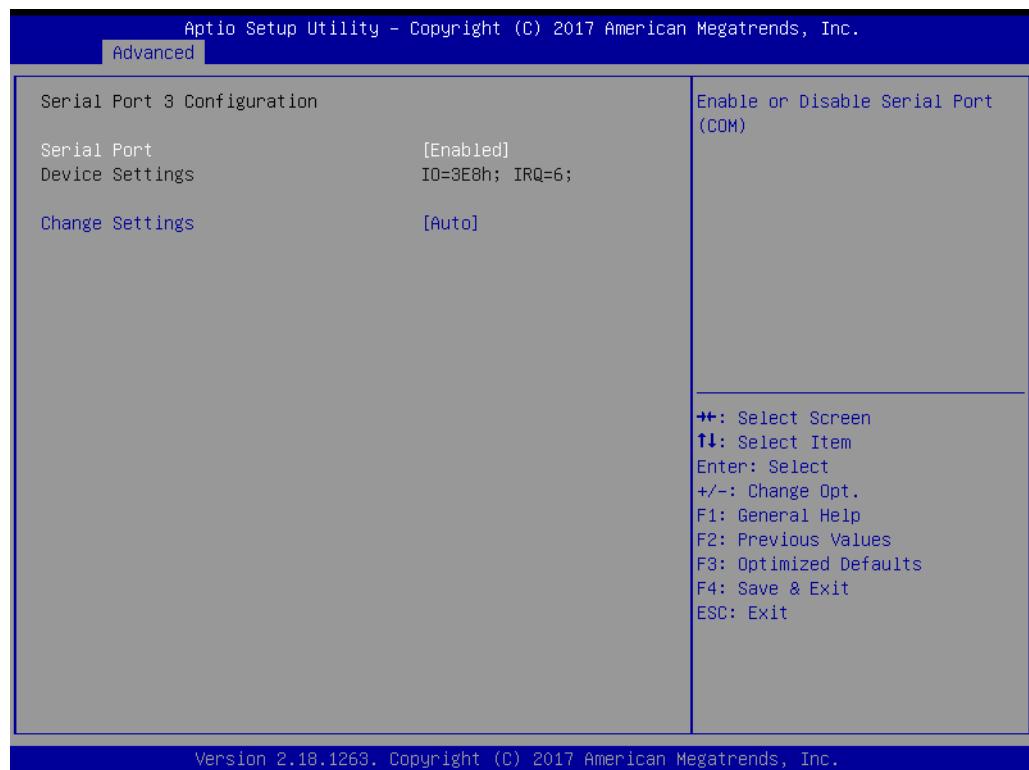


Figure 3.11 Serial Port 3 Configuration

- **Serial Port**

Enable or Disable Serial Port (COM).

- **Change Settings**

Select an optimal setting for Super IO device.

### 3.4.2 Serial Port 4 Configuration

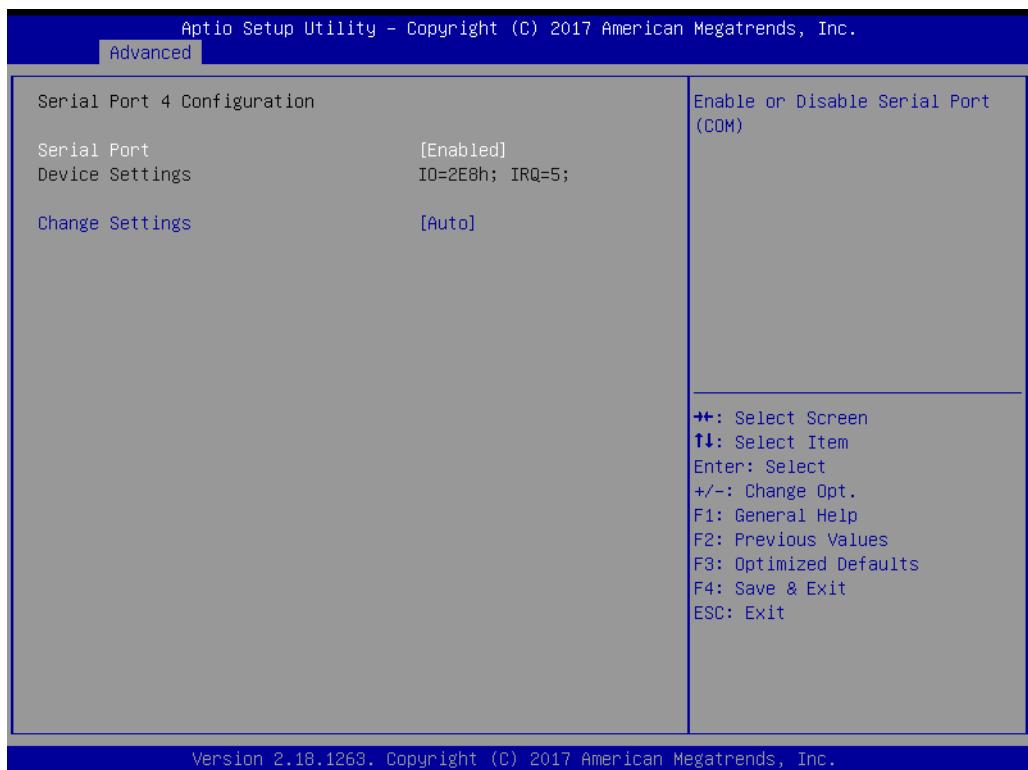


Figure 3.12 Serial Port 4 Configuration

- **Serial Port**  
Enable or Disable Serial Port (COM)
- **Change Settings**  
Select an optimal setting for Super IO device.

### 3.4.3 Parallel Port Configuration



Figure 3.13 Parallel Port Configuration

- **Parallel Port**  
Enable or Disable Parallel Port (LPT/LPTE).
- **Change Settings**  
Select an optimal setting for Super IO device.
- **Device Mode**  
Change the Printer Port mode.

### 3.4.4 Serial Port Console Redirection

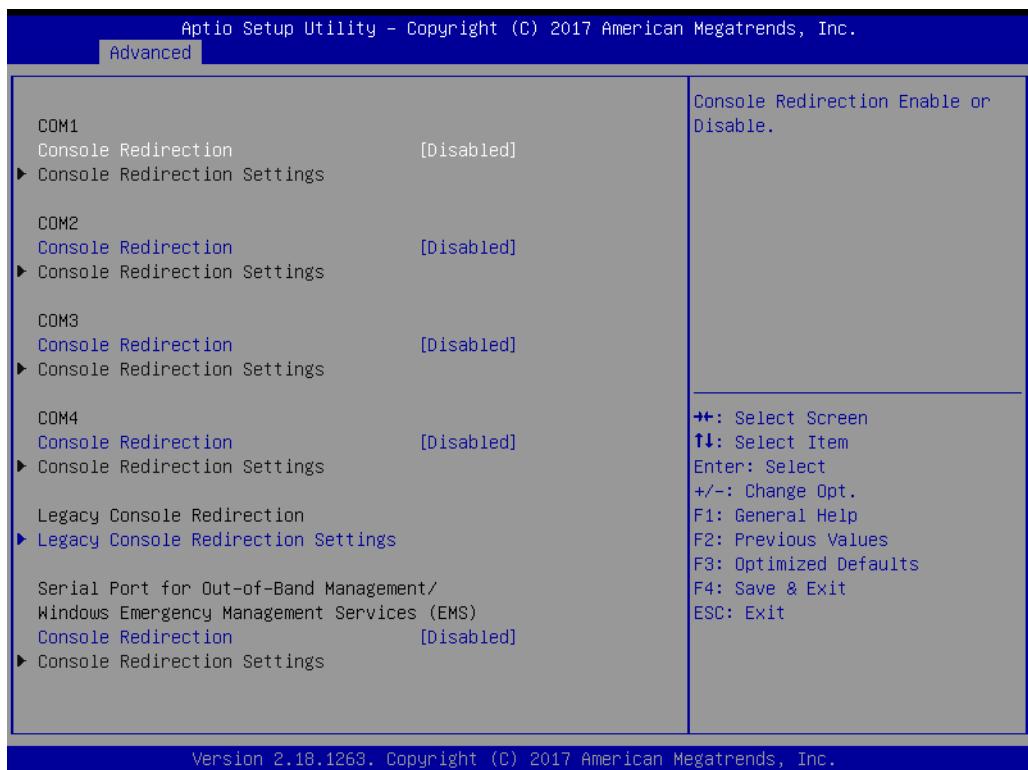


Figure 3.14 Serial Port Console Redirection

- **COM1 Console Redirection**  
Console Redirection Enable or Disable.
- **COM2 Console Redirection**  
Console Redirection Enable or Disable.
- **Legacy Console Redirection Settings**  
Change Legacy Console Redirection Settings.
- **Console Redirection**  
Console Redirection Enable or Disable.

### 3.4.4.1 Legacy Console Redirection Settings



**Figure 3.15 Legacy Console Redirection Settings**

#### ■ Legacy Console Redirection Settings

Select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.

### 3.4.5 CPU Configuration

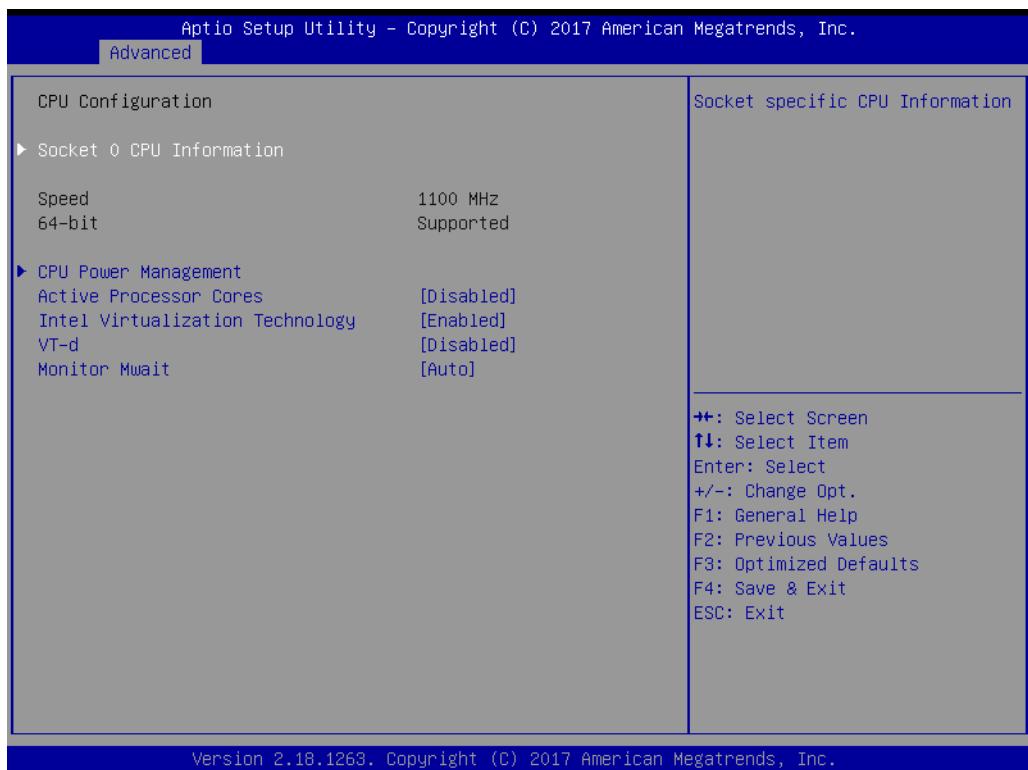


Figure 3.16 CPU Configuration

- **Socket 0 CPU Information**  
Socket specific CPU Information.
- **CPU Power Management**  
CPU Power Management options.
- **Active Processor Cores**  
Number of cores to enable in each processor package.
- **Intel Virtualization Technology**  
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
- **VT-d**  
Enable/Disable CPU VT-d.
- **Monitor Mwait**  
Enable/Disable Monitor Mwait.

### 3.4.6 Socket 0 CPU Configuration

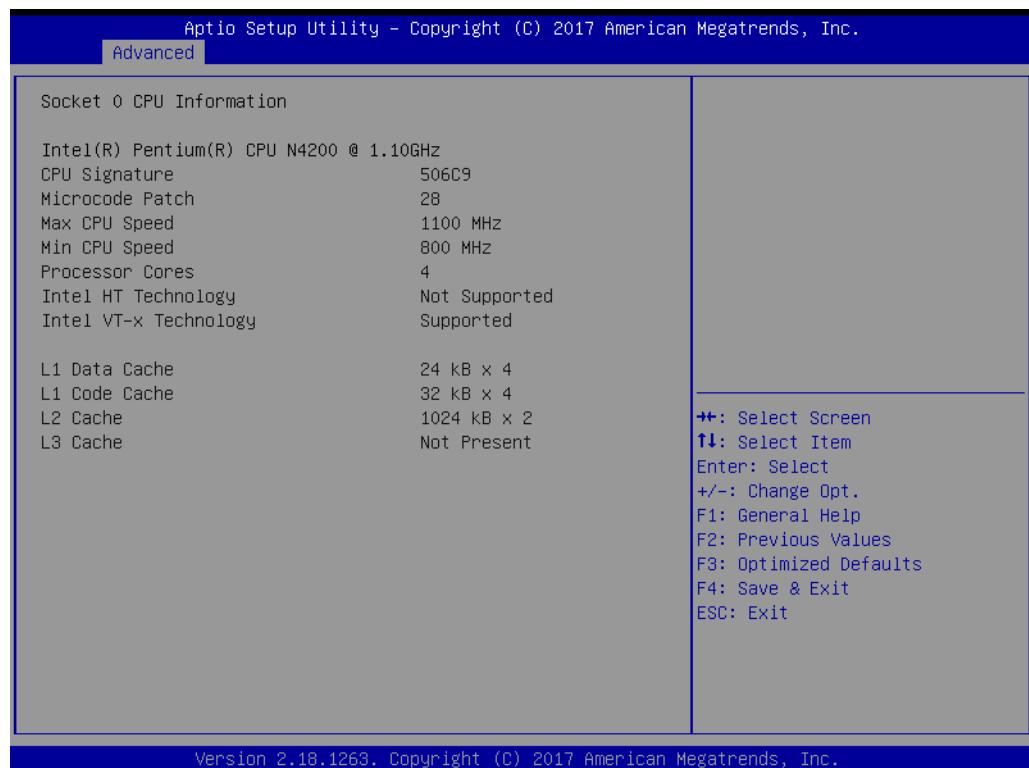


Figure 3.17 Socket 0 CPU Configurations

#### ■ **Socket 0 CPU Information**

Socket specific CPU Information.

### 3.4.7 CPU Power Management

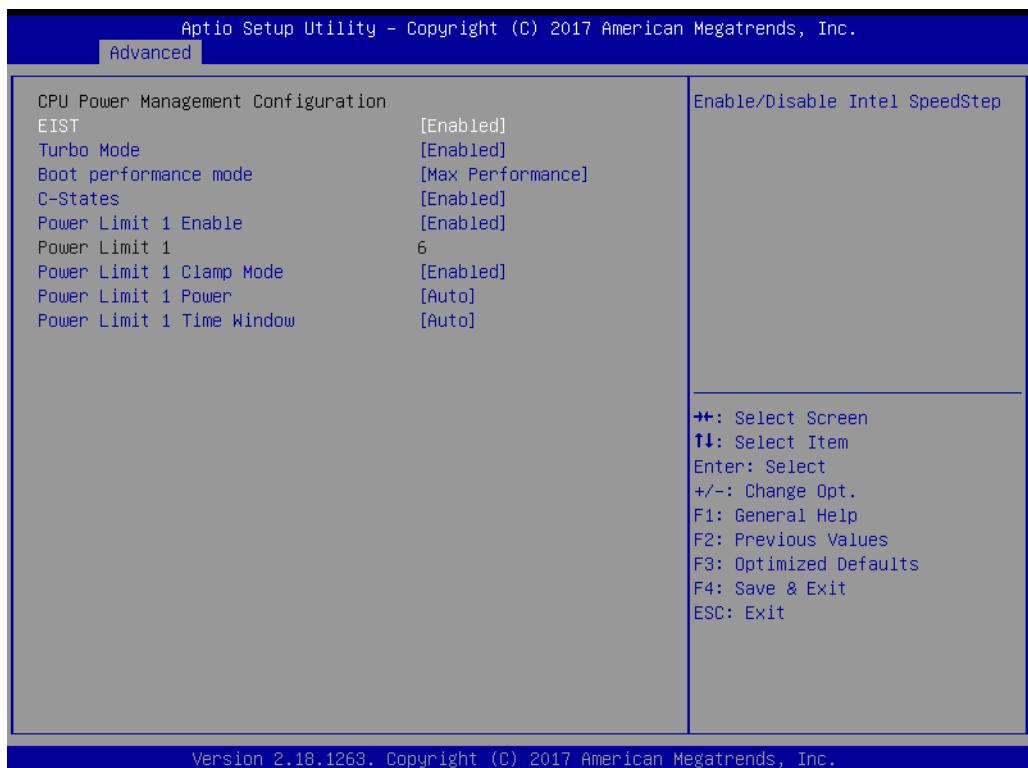


Figure 3.18 Socket 0 CPU Configurations

- **EIST**  
Enable/Disable Intel SpeedStep.
- **Turbo Mode**  
Enable/Disable Turbo Mode.
- **Boot performance mode**  
Select the performance state that the BIOS will set before OS handoff.
- **C-States**  
Enable/Disable C States.
- **Power Limit 1 Enable**  
Enable/Disable Power Limit 1.
- **Power Limit 1 Clamp Mode**  
Enable/Disable Power Limit 1 Clamp Mode.
- **Power Limit 1 Power**  
Power Limit 1 in Watts. Auto will program Power Limit 1 based on silicon default support value.
- **Power Limit 1 Time Window**  
Power Limit 1 Time Window Value in Seconds. Auto will program Power Limit 1 Time Window based on silicon default support value.

### 3.4.8 Network Stack Configuration



Figure 3.19 Network Stack Configuration

#### ■ Network Stack

Enable/Disable UEFI Network Stack.


### 3.4.9 CSM Configuration



Figure 3.20 CSM Configuration

- **CSM Support**  
Enable/Disable CSM Support.
- **GateA20 Active**  
UPON Request- GA20 can be disabled using BIOS services. Always – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.
- **INT19 Trap Response**  
BIOS reaction on INT19 trapping by Option ROM:  
IMMEDIATE- execute the trap right away;  
POSTPONED- execute the trap during legacy boot.
- **Boot option filter**  
This option controls Legacy/UEFI ROMs priority.
- **Network**  
Controls the execution of UEFI and Legacy PXE OpROM.
- **Storage**  
Controls the execution of UEFI and Legacy Storage OpROM.
- **Video**  
Controls the execution of UEFI and Legacy Video OpROM.
- **Other PCI devices**  
Determines OpROM execution policy for devices other than Network, Storage, or Video.

### 3.4.10 NVMe Configuration

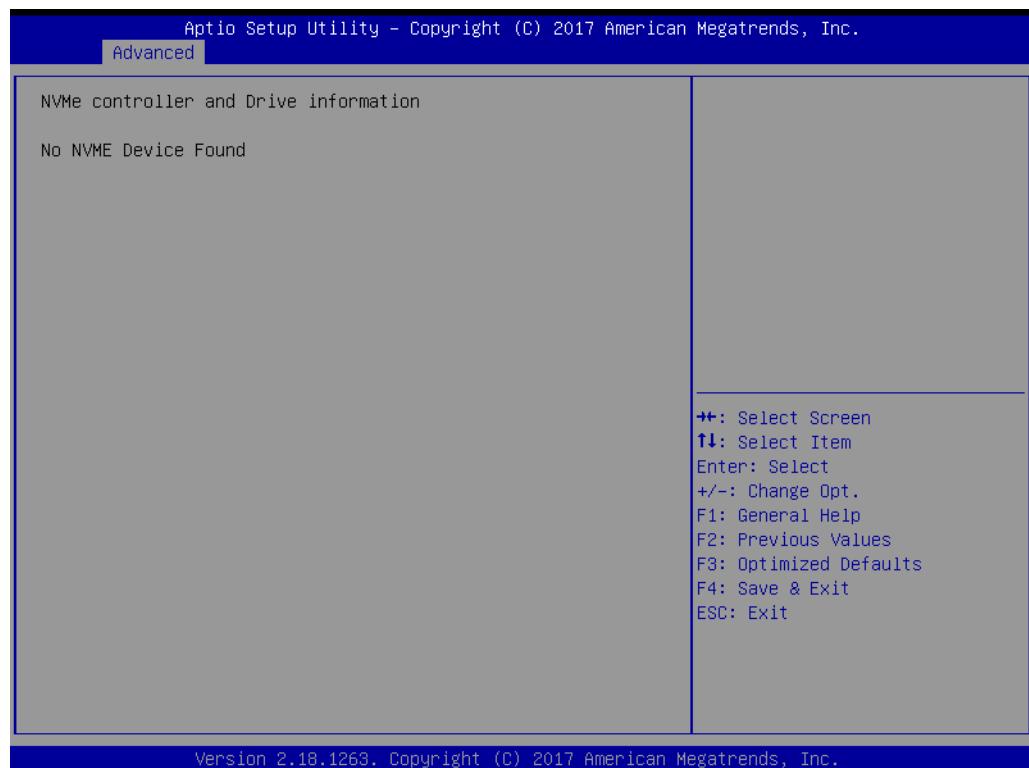

**Figure 3.21 NVMe Configuration**

#### ■ NVMe Configuration

NVMe controller and driver information.

### 3.4.11 SDIO Configuration

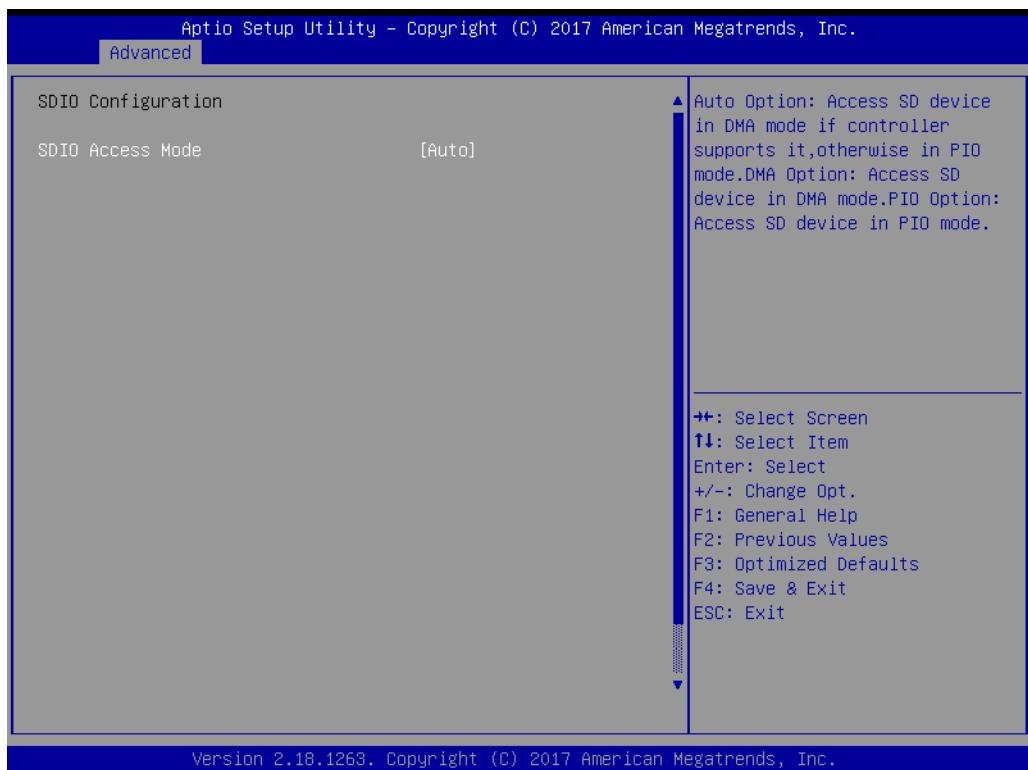


Figure 3.22 SDIO Configuration

#### ■ SDIO Access Mode

Auto option: Access SD device in DMA mode if controller supports it, otherwise in PIO mode. DMA option: Access SD device in DMA mode. PIO Option: Access SD device in PIO mode.

### 3.4.12 USB Configuration

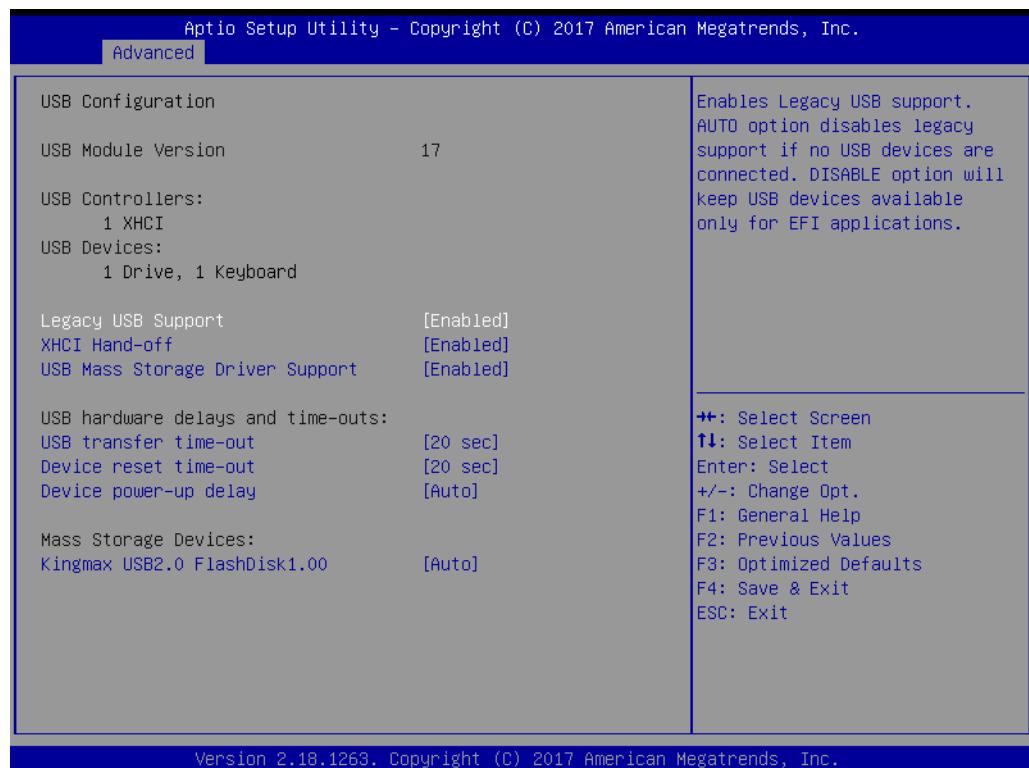


Figure 3.23 USB Configuration

#### ■ Legacy USB Support

Enables Legacy USB support. Auto option disables legacy support if no USB devices are connected. Disable option will keep USB devices available only for EFI applications.

#### ■ XHCI Hand-off

This is a workaround for OSes without XHCI ownership change should be claimed by XHCI driver.

#### ■ USB Mass Storage Driver Support

Enable/Disable USB Mass Storage Driver Support.

#### ■ USB transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

#### ■ Device reset time-out

USB mass storage device Start Unit command time-out.

#### ■ Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller.

'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

### 3.4.13 Platform Trust Technology

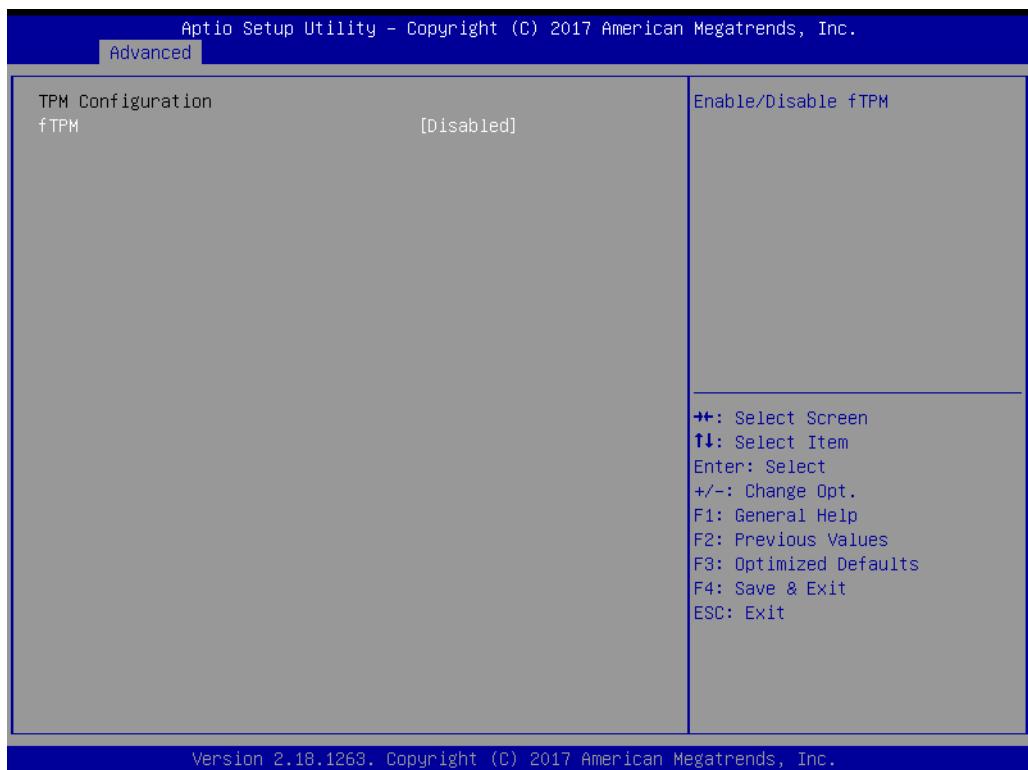


Figure 3.24 Platform Trust Technology

- **fTPM**  
Enable/Disable fTPM

### 3.4.14 Security Configuration

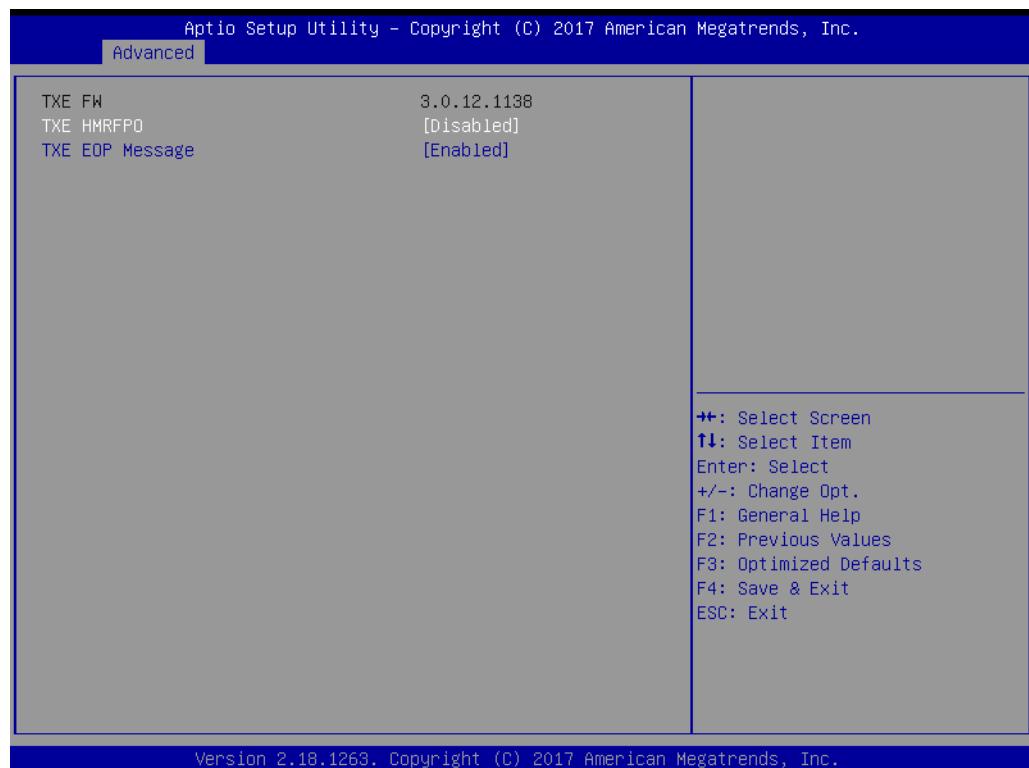


Figure 3.25 Security Configuration

- **TXE HMRFPO**  
Enable/Disable TXE HMRFPO.
- **TXE EOP Message**  
Send EOP Message Before Enter OS.

## 3.5 Chipset

Select the Chipset tab from the SOM-7569 setup screen to enter the Chipset BIOS Setup screen. You can display a Chipset BIOS Setup option by highlighting it using the <Arrow> keys. All Plug and Play BIOS Setup options are described in this section. The Plug and Play BIOS Setup screen is shown below.

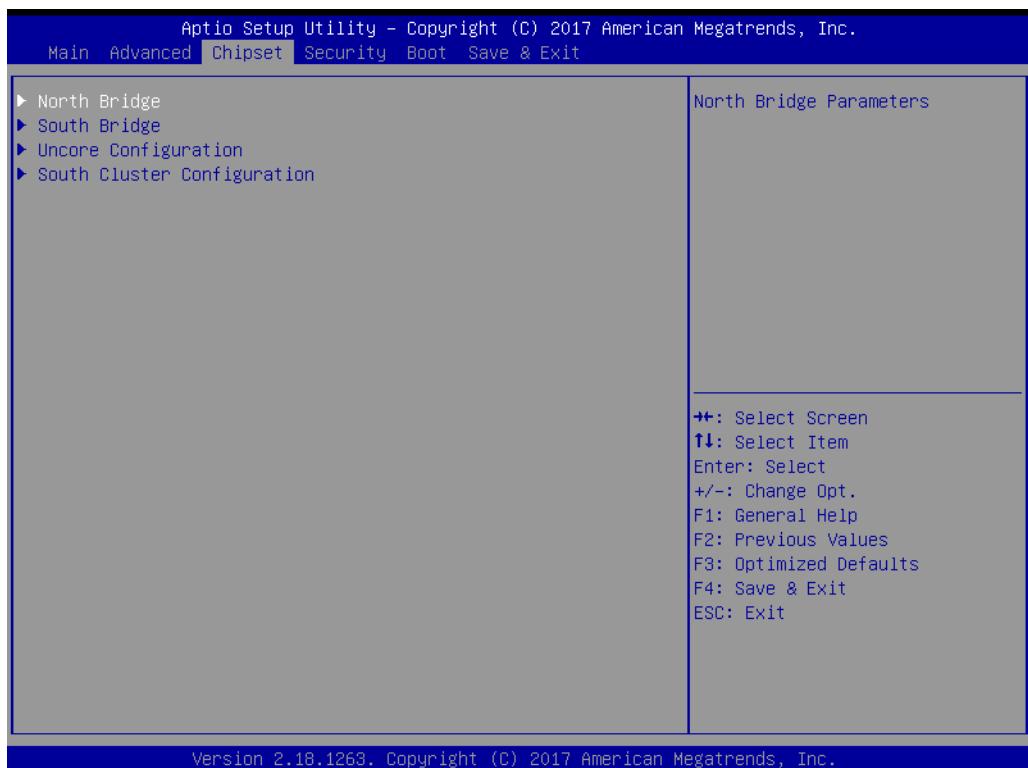


Figure 3.26 Chipset Setup

- **North Bridge**  
North Bridge Parameters.
- **South Bridge**  
South Bridge Parameters.
- **Uncore Configuration**  
Uncore Configuration.
- **South Cluster Configuration**  
South Cluster Configuration.

### 3.5.1 North Bridge

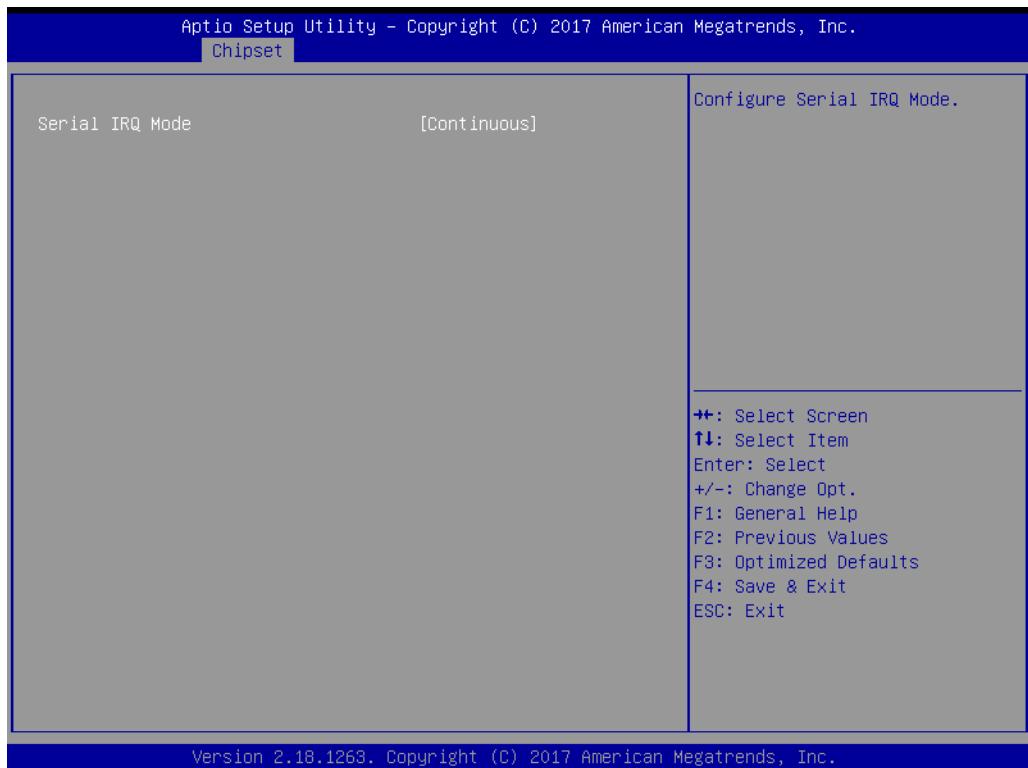


Figure 3.27 North Bridge

#### ■ Above 4GB MMIO BIOS assignment

Enable/Disable above 4GB MemoryMappedIO BIOS assignment. This is disabled automatically when Aperture Size is set to 2048MB.

### 3.5.2 South Bridge



**Figure 3.28 South Bridge**

#### ■ **Serial IRQ Mode**

Configure Serial IRQ Mode.

### 3.5.3 Uncore Configuration



Figure 3.29 Uncore Configuration

- **NXP non-EDID Support**

NXP PTN3460 Support: Enable: Used internal EDID setting; Disable: Get EDID from DDC bus.

- **Color depth and packing format**

Select Color depth and packing format setting.

- **Dual LVDS mode**

Select Dual LVDS mode settings.

- **LCD Panel Type**

Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item.

### 3.5.4 South Cluster Configuration

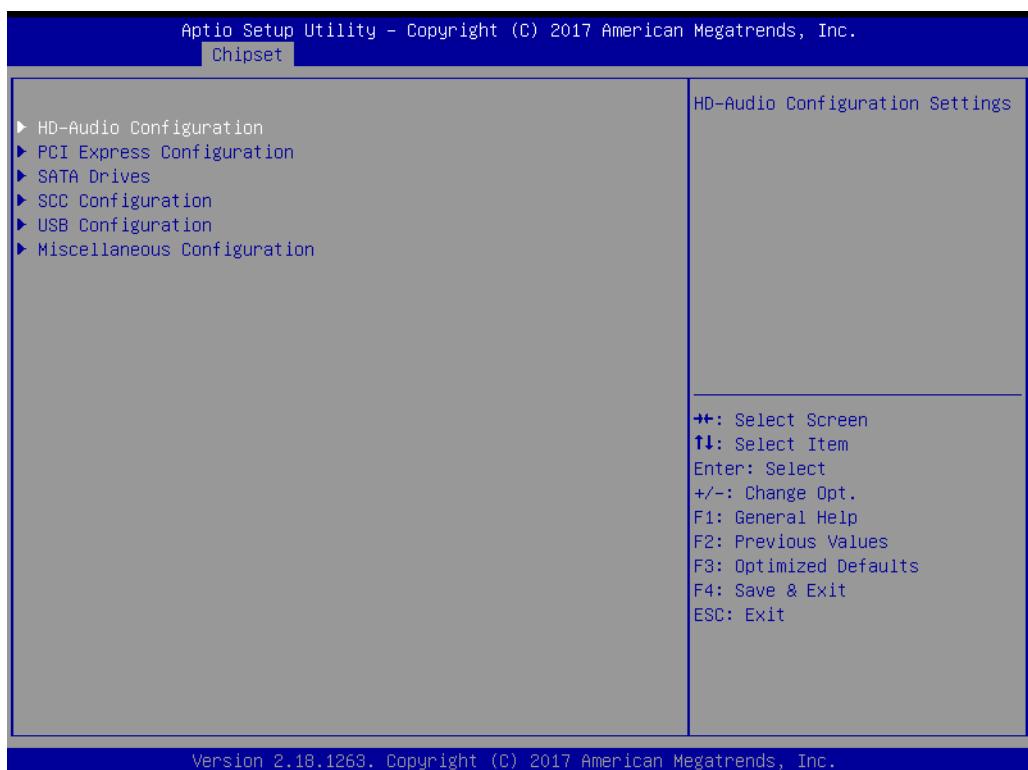


Figure 3.30 South Cluster Configuration

#### ■ **HD-Audio Configuration**

HD-Audio Configuration Settings.

#### ■ **PCI Express Configuration**

PCI Express Configuration Settings.

#### ■ **SATA Drives**

Press <Enter> to select the SATA Device Configuration Setup options.

#### ■ **SCC Configuration**

SCC Configuration Settings.

#### ■ **USB Configuration**

USB Configuration Settings.

#### ■ **Miscellaneous Configuration**

Enable/Disable Misc. Features.

### 3.5.4.1 HD-Audio Configuration

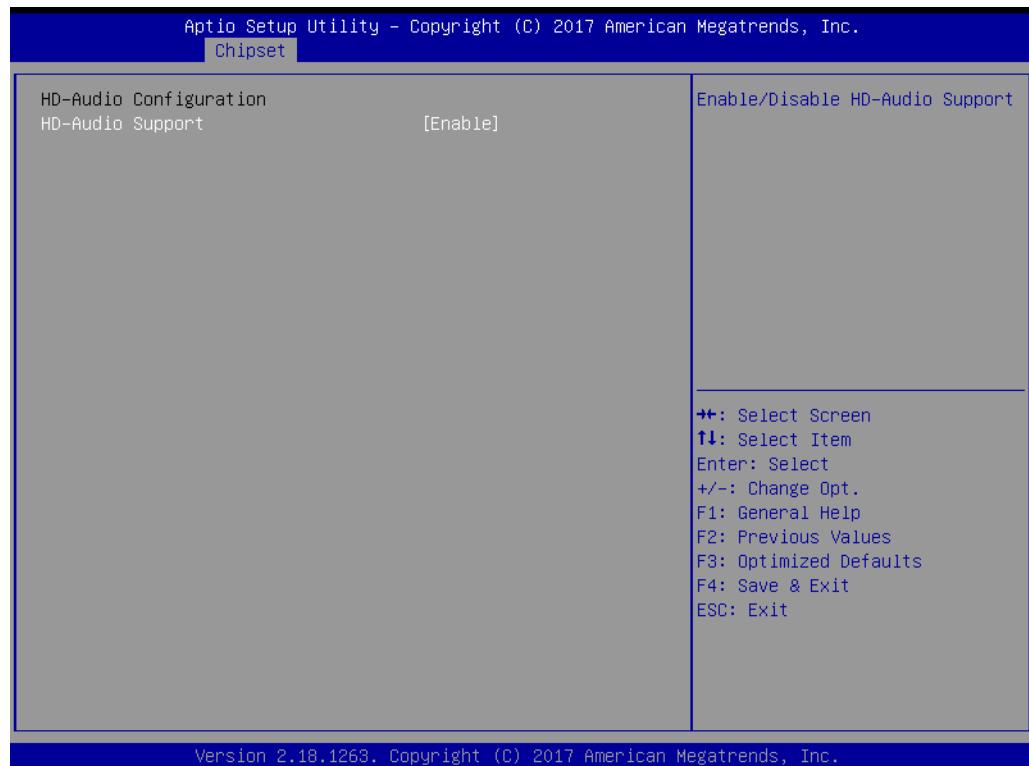


Figure 3.31 HD-Audio Configuration

#### ■ HD-Audio Support

Enable/Disable HD-Audio Support.

### 3.5.4.2 PCI Express Configuration

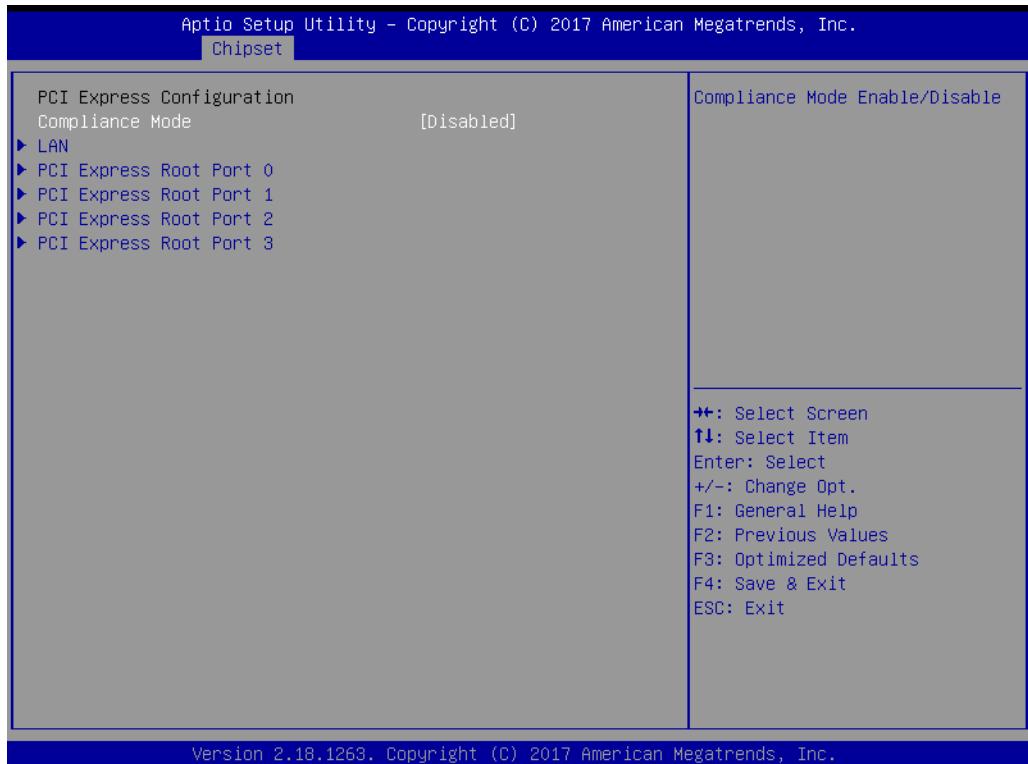


Figure 3.32 PCI Express Configuration

#### ■ Compliance Mode

Compliance Mode Enable/Disable.

#### ■ LAN

Control the PCI Express Root Port.

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

#### ■ PCI Express Root Port 0

Control the PCI Express Root Port.

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

#### ■ PCI Express Root Port 1

Control the PCI Express Root Port.

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

#### ■ PCI Express Root Port 2

Control the PCI Express Root Port.

Auto: To disable unused root port automatically for the most optimum power savings.

---

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

■ **PCI Express Root Port 3**

Control the PCI Express Root Port.

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

### 3.5.4.2.1 LAN



Figure 3.33 LAN

#### ■ LAN

Control the PCI Express Root Port

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

#### ■ ASPM

PCI Express Active State Power Management settings.

#### ■ PCIe Speed

Configure PCIe Speed.

### 3.5.4.2.2 PCI Express Root Port 0 Configuration

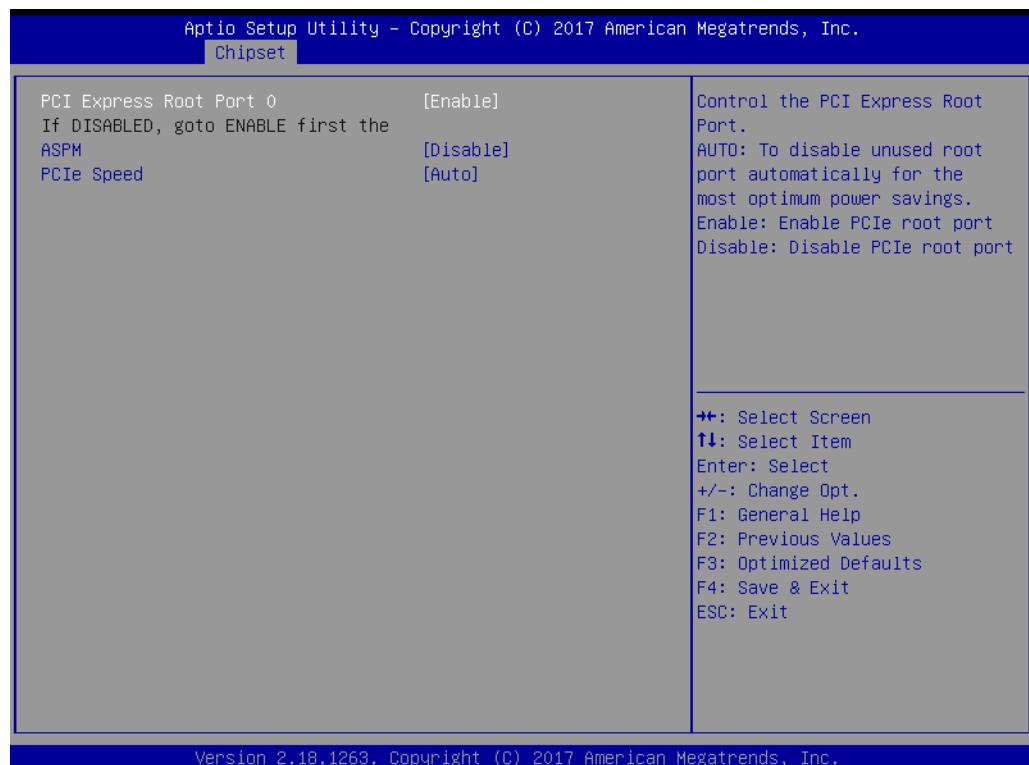


Figure 3.34 PCI Express Root Port 0 Configuration

#### ■ PCI Express Root Port 0

Control the PCI Express Root Port

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

#### ■ ASPM

PCI Express Active State Power Management settings.

#### ■ PCIe Speed

Configure PCIe Speed.

### 3.5.4.2.3 PCI Express Root Port 1 Configuration

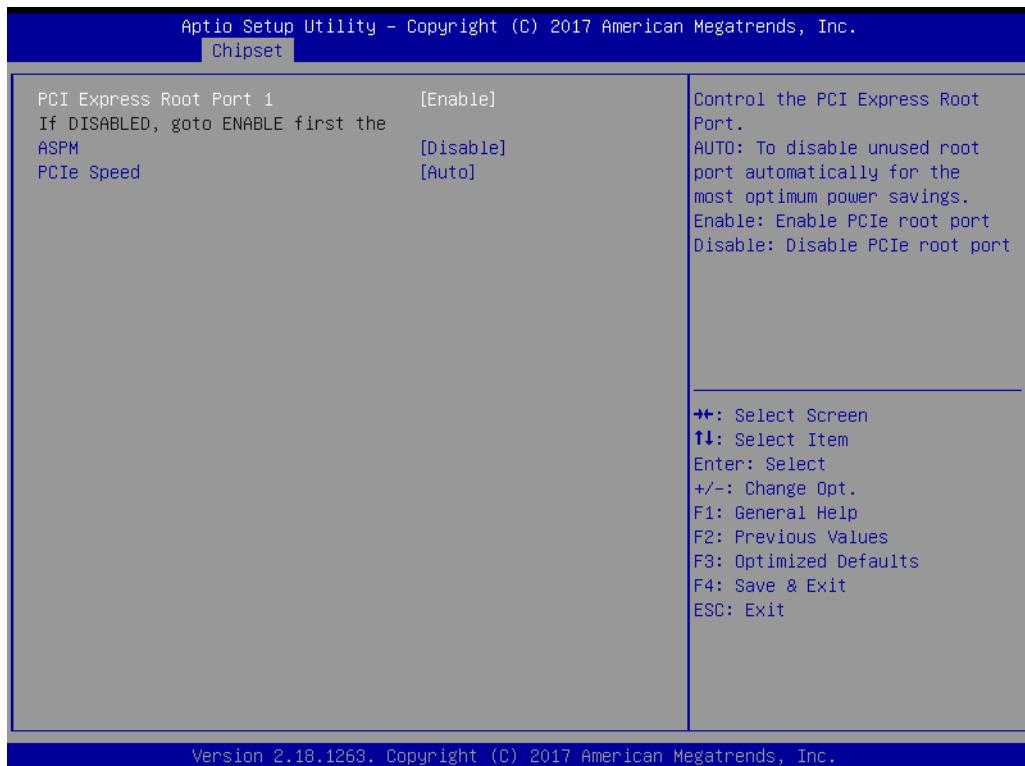


Figure 3.35 PCI Express Root Port 1 Configuration

- **PCI Express Root Port 1**  
Control the PCI Express Root Port  
Auto: To disable unused root port automatically for the most optimum power savings.  
Enable: Enable PCIe root port.  
Disable: Disable PCIe root port.
- **ASPM**  
PCI Express Active State Power Management settings.
- **PCIe Speed**  
Configure PCIe Speed.

### 3.5.4.2.4 PCI Express Root Port 2 Configuration

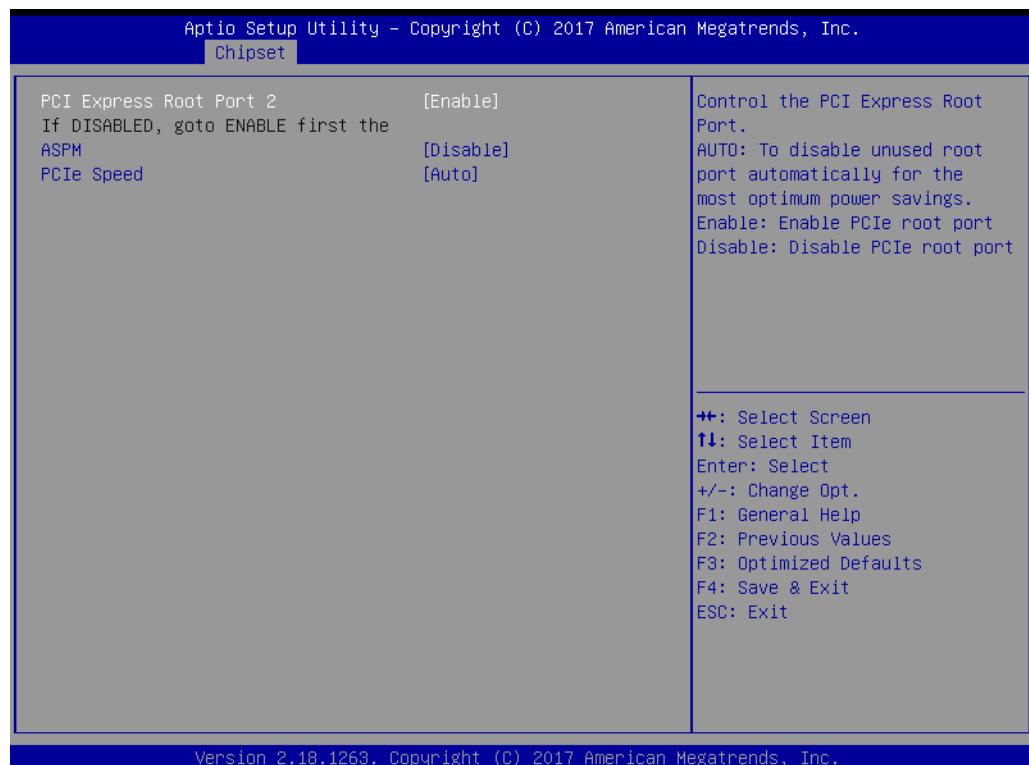


Figure 3.36 PCI Express Root Port 2 Configuration

#### ■ PCI Express Root Port 2

Control the PCI Express Root Port

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

#### ■ ASPM

PCI Express Active State Power Management settings.

#### ■ PCIe Speed

Configure PCIe Speed.

### 3.5.4.2.5 PCI Express Root Port 3 Configuration

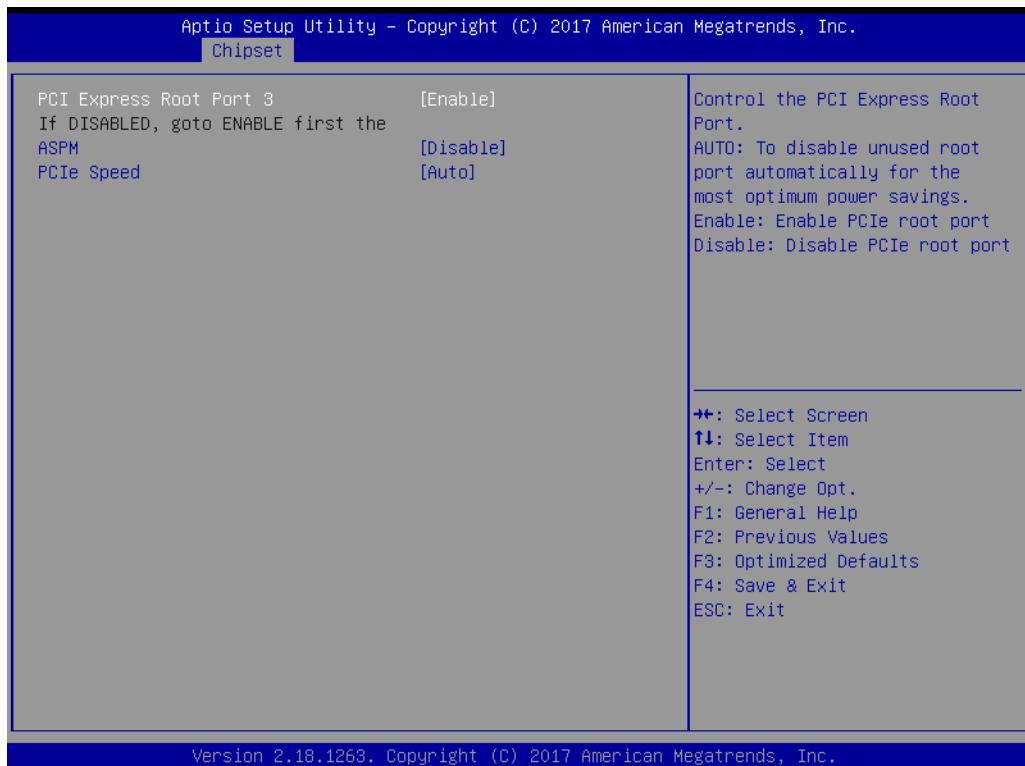


Figure 3.37 PCI Express Root Port 3 Configuration

#### ■ PCI Express Root Port 3

Control the PCI Express Root Port

Auto: To disable unused root port automatically for the most optimum power savings.

Enable: Enable PCIe root port.

Disable: Disable PCIe root port.

#### ■ ASPM

PCI Express Active State Power Management settings.

#### ■ PCIe Speed

Configure PCIe Speed.

### 3.5.4.3 SATA Drives

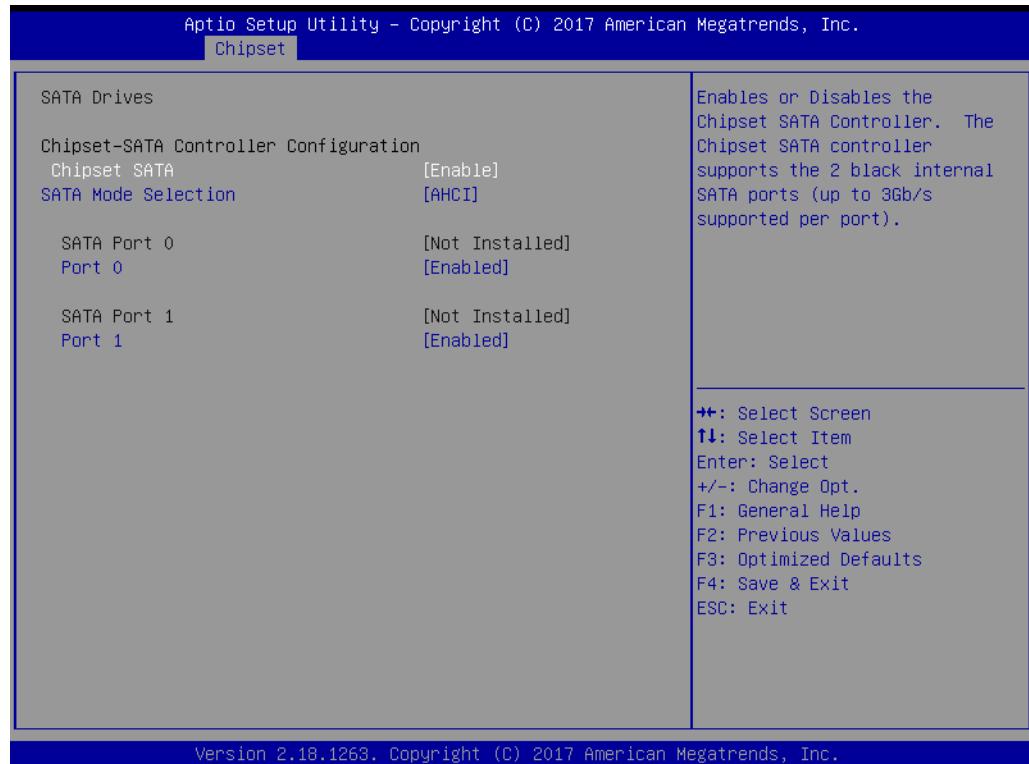


Figure 3.38 SATA Drives

#### ■ **Chipset SATA**

Enables or Disables the chipset SATA controller. The Chipset SATA controller supports the 2 black internal SATA ports (up to 3Gb/s supported per port)

#### ■ **SATA Mode Selection**

Determines how SATA controller(s) operate.

#### ■ **SATA Port 0**

Enable or Disable SATA Port.

#### ■ **SATA Port 1**

Enable or Disable SATA Port.

### 3.5.4.4 SCC Configuration

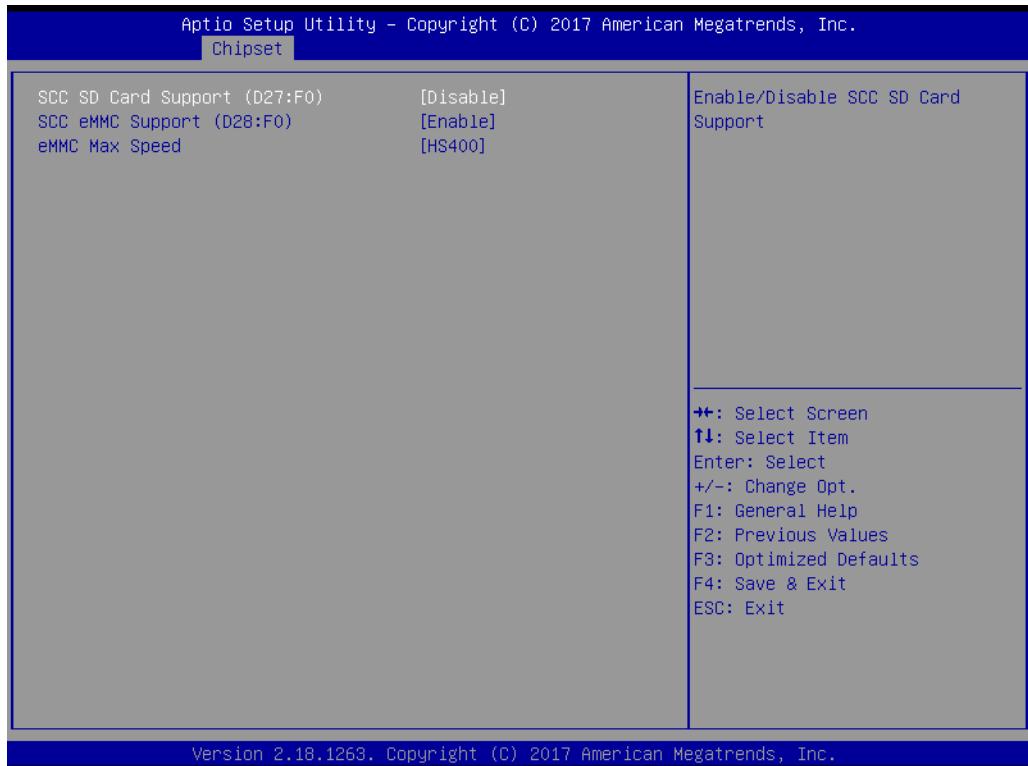


Figure 3.39 SCC Configuration

- **SCC SD Card Support (D27:F0)**  
Enable/Disable SCC SD Card Support
- **SCC eMMC Support (D28:F0)**  
Enable/Disable SCC eMMC Support
- **eMMC Max Speed**  
Select the eMMC max Speed allowed.

### 3.5.4.5 USB Configuration

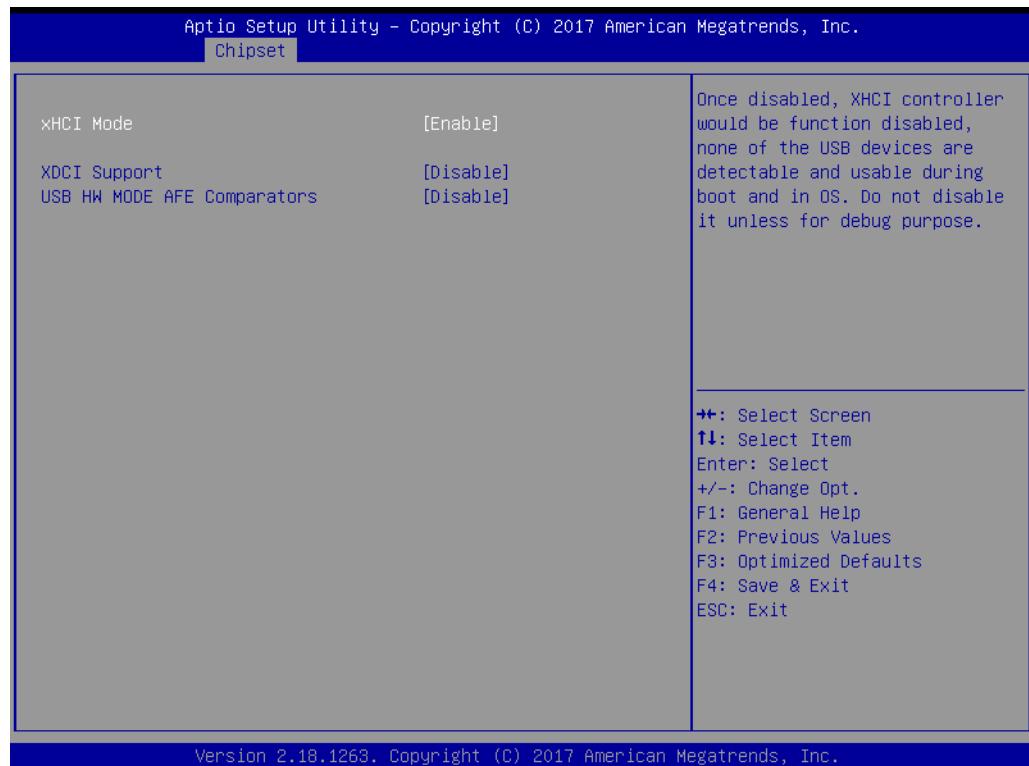


Figure 3.40 USB Configuration

#### ■ **xHCI Mode**

Once disabled, XHCI controller would be function disabled, none of the USB devices are detectable and usable during boot and in OS. Do not disable it unless for debug purpose.

#### ■ **XDCI Support**

Enable/Disable XDCI.

#### ■ **USB HW MODE AFE Comparators**

Enable/Disable USB HW MODE AFE Comparators.

### 3.5.4.6 Miscellaneous Configuration

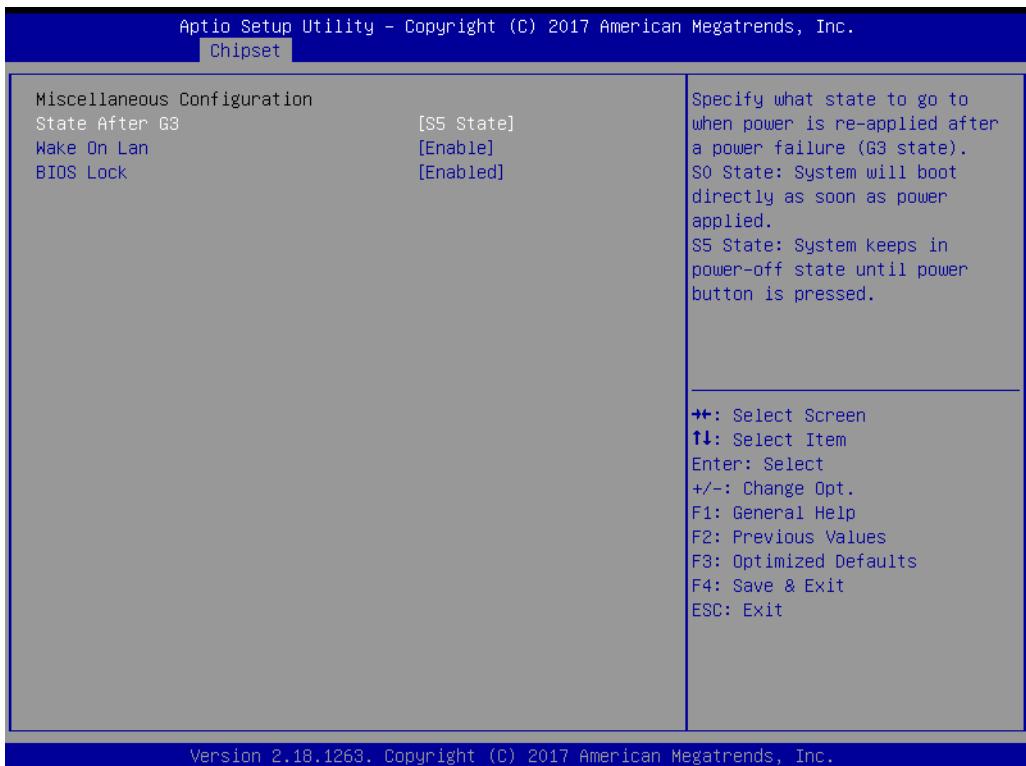


Figure 3.41 Miscellaneous Configuration

#### ■ State After G3

Specify what state to go to when power is re-applied after a power failure (G3 state).

S0 State: System will boot directly as soon as power applied.

S5 State: System keeps in power-off state until power button is pressed.

#### ■ Wake On Lan

Enable or Disable the Wake on Lan.

#### ■ BIOS Lock

Enable/Disable the SC BIOS Lock Enable features. Required to be enabled to ensure SMM protection of flash.

## 3.6 Security Setting

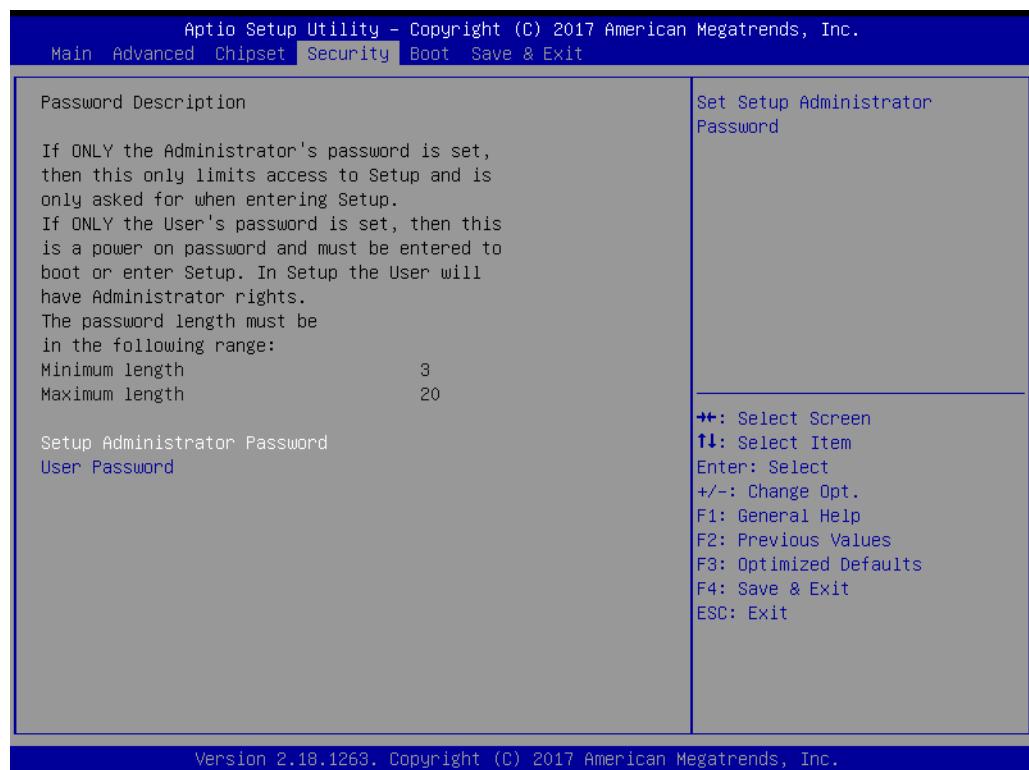


Figure 3.42 Security Setup

Select Security Setup from the SOM-7569 Setup main BIOS setup menu. All Security Setup options, such as password protection is described in this section. To access the sub menu for the following items, select the item and press <Enter>:

- **Change Administrator / User Password:**

Select this option and press <ENTER> to access the sub menu, and then type in the password.

## 3.7 Boot Settings

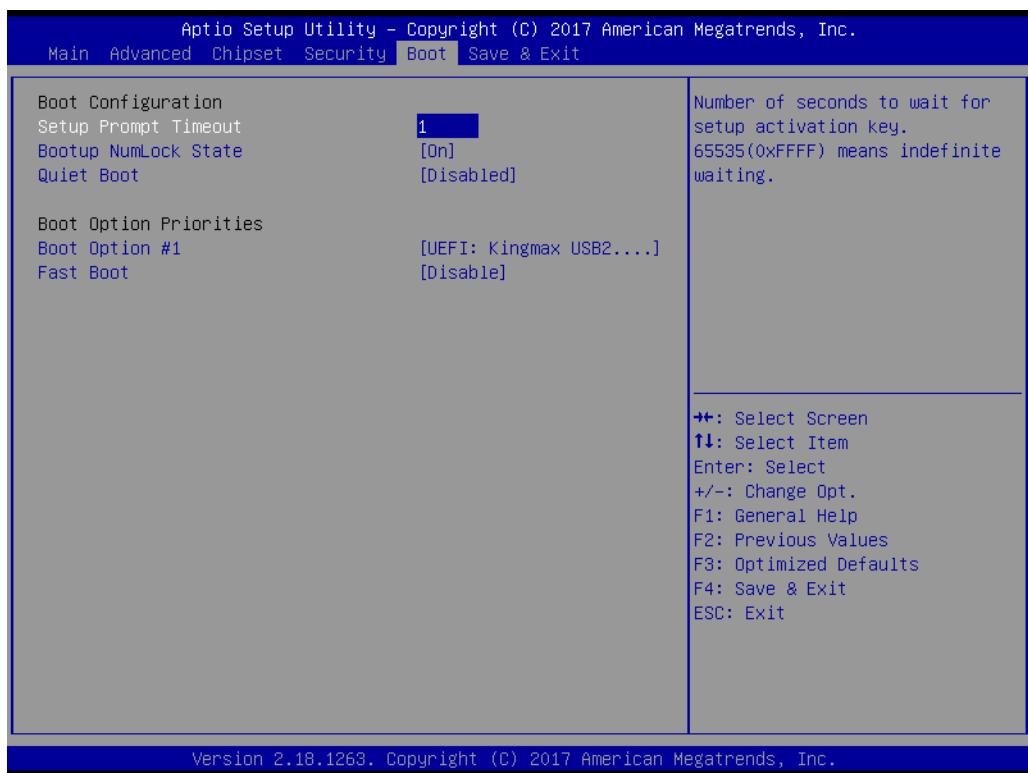


Figure 3.43 Boot Settinga

### ■ Setup Prompt Timeout

This item allows users to select the number of seconds to wait for setup activation key.

Number of seconds to wait for setup activation key.

65535(0xFFFF) means indefinite waiting.

### ■ Bootup NumLock State

Select the keyboard Numlock state.

### ■ Quiet Boot

Enable or Disables Quiet Boot option.

### ■ Fast Boot

Enable or Disable FastBoot features. Most probes are skipped to reduce time cost during boot.

## 3.8 Save & Exit

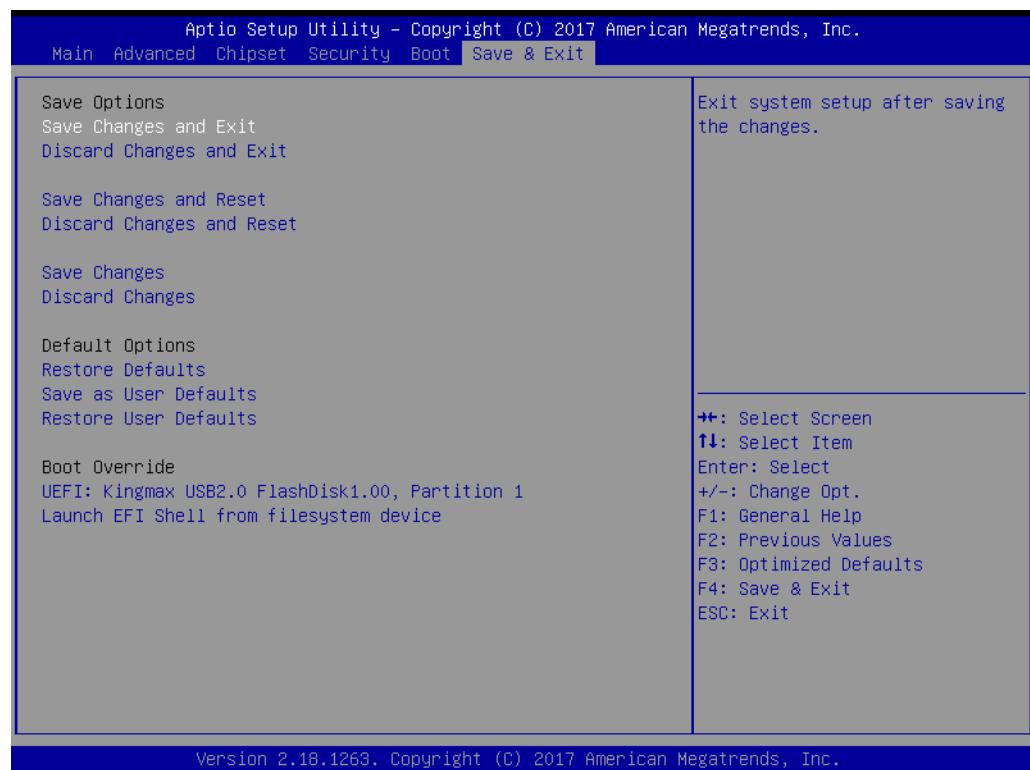


Figure 3.44 Save & Exit

- **Save Changes and Exit**  
Exit system setup after saving the changes.
- **Discard Changes and Exit**  
Exit system setup without saving any changes.
- **Save Changes and Reset**  
Reset the system after saving the changes.
- **Discard Changes and Reset**  
Reset system setup without saving any changes.
- **Save Changes**  
Save Changes done so far to any of the setup options.
- **Discard Changes**  
Discard Changes done so far to any of the setup options.
- **Restore Defaults**  
Restore/Load Default values for all the setup options.
- **Save as User Defaults**  
Save the changes done so far as User Defaults.
- **Restore User Defaults**  
Restore the User Defaults to all the setup options
- **Launch EFI Shell from filesystem device**  
Attempts to Launch EFI Shell application (Shell.efi) from one of the available filesystem devices.

# Chapter 4

## S/W Introduction & Installation

Sections include:

- S/W Introduction
- Driver Installation
- Advantech iManager

## **4.1 S/W Introduction**

The mission of Advantech Embedded Software Services is to "Enhance quality of life with Advantech platforms and Microsoft Windows embedded technology." We enable Windows Embedded software products on Advantech platforms to more effectively support the embedded computing community. Customers are freed from the hassle of dealing with multiple vendors (Hardware suppliers, System integrators, Embedded OS distributor) for projects. Our goal is to make Windows Embedded Software solutions easily and widely available to the embedded computing community.

## **4.2 Driver Installation**

The Intel Chipset Software Installation (CSI) utility installs the Windows INF files that outline to the operating system how the chipset components will be configured.

### **4.2.1 Windows Driver Setup**

To install the drivers on a windows-based operation system, please connect to internet and browse the website <http://support.advantech.com.tw> and download the drivers that you want to install and follow Driver Setup instructions to complete the installation.

### **4.2.2 Other OS**

To install the drivers for Linux or other OS, please connect to the Internet and browse the website <http://support.advantech.com.tw> to download the setup file.

## **4.3 Advantech iManager**

Advantech's platforms come equipped with iManager, a micro controller that provides embedded features for system integrators. Embedded features have been moved from the OS/BIOS level to the board level, to increase reliability and simplify integration. iManager runs whether the operating system is running or not; it can count the boot times and running hours of the device, monitor device health, and provide an advanced watchdog to handle errors just as they happen. iManager also comes with a secure & encrypted EEPROM for storing important security keys or other customer defined information. All embedded functions are configured through API and provide corresponding utilities to demonstrate. These APIs comply with PICMG EAPI (Embedded Application Programmable Interface) specification. This makes these embedded features easier to integrate, speed up development schedules, and provides software continuity while upgrading hardware. More details of how to use the APIs and utilities, please refer to Advantech iManager 2.0 Software API User Manual.

Control	Monitor
<b>GPIO</b>  <p>General Purpose Input/Output is a flexible parallel interface that allows a variety of custom connections. It allows users to monitor the level of signal input or set the output status to switch on/off a device. Our API also provides Programmable GPIO, which allows developers to dynamically set the GPIO input or output status.</p>	<b>Watchdog</b>  <p>A watchdog timer (WDT) is a device that performs a specific operation after a certain period of time if something goes wrong and the system does not recover on its own. A watchdog timer can be programmed to perform a warm boot (restarting the system) after a certain number of seconds.</p>
<b>SMBus</b>  <p>SMBus is the System Management Bus defined by Intel® Corporation in 1995. It is used in personal computers and servers for low-speed system management communications. The SMBus API allows a developer to interface with an embedded system environment and transfer serial messages using the SMBus protocols, allowing multiple simultaneous device control.</p>	<b>Hardware Monitor</b>  <p>The Hardware Monitor (HWM) API is a system health supervision API that inspects certain condition indexes, such as fan speed, temperature and voltage.</p>
<b>PC</b>  <p>PC is a bi-directional two wire bus that was developed by Philips for use in their televisions in the 1980s. The PC API allows a developer to interface with an embedded system environment and transfer serial messages using the PC protocols, allowing multiple simultaneous device control.</p>	<b>Hardware Control</b>  <p>The Hardware Control API allows developers to set the PWM (Pulse Width Modulation) value to adjust fan speed or other devices; it can also be used to adjust the LCD brightness.</p>
<b>Display</b>  <b>Brightness Control</b>  <p>The Brightness Control API allows a developer to interface with an embedded device to easily control brightness.</p>	<b>Power Saving</b>  <b>CPU Speed</b>  <p>Make use of Intel SpeedStep technology to reduce power consumption. The system will automatically adjust the CPU Speed depending on system loading.</p>
 <b>Backlight</b>  <p>The Backlight API allows a developer to control the backlight (screen) on/off in an embedded device.</p>	 <b>System Throttling</b>  <p>Refers to a series of methods for reducing power consumption in computers by lowering the clock frequency. These APIs allow the user to lower the clock from 87.5% to 12.5%.</p>



# Appendix A

## Pin Assignments

This appendix gives you the information about the hardware pin assignment of the SOM-7569 COM Express Mini CPU Module.

Sections include:

- SOM-7569 Type 10 Pin Assignment

## A.1 SOM-7569 Type 10 Pin Assignment

This section gives SOM-7569 pin assignment on COM Express connector which is compliant with COM.0 R 2.1 Type 10 pin-out definitions. For more details about how to use these pins and get a design reference guide, please contact Advantech for design guide, checklist, reference schematic, and other hardware/software support.

**Table A.1: SOM-7569 Row A,B**

A1	GND	B1	GND
A2	GBE0_MDI3-	B2	GBE0_ACT#
A3	GBE0_MDI3+	B3	LPC_FRAME#
A4	GBE0_LINK100#	B4	LPC_AD0
A5	GBE0_LINK1000#	B5	LPC_AD1
A6	GBE0_MDI2-	B6	LPC_AD2
A7	GBE0_MDI2+	B7	LPC_AD3
A8	GBE0_LINK#	B8	N/A
A9	GBE0_MDI1-	B9	N/A
A10	GBE0_MDI1+	B10	LPC_CLK
A11	GND	B11	GND
A12	GBE0_MDI0-	B12	PWRBTN#
A13	GBE0_MDI0+	B13	SMB_CK
A14	N/A	B14	SMB_DAT
A15	SUS_S3#	B15	SMB_ALERT#
A16	SATA0_TX+	B16	SATA1_TX+
A17	SATA0_TX-	B17	SATA1_TX-
A18	SUS_S4#	B18	SUS_STAT#
A19	SATA0_RX+	B19	SATA1_RX+
A20	SATA0_RX-	B20	SATA1_RX-
A21	GND	B21	GND
A22	USB_SSRX0-	B22	USB_SSTX0-
A23	USB_SSRX0+	B23	USB_SSTX0+
A24	SUS_S4#	B24	PWR_OK
A25	USB_SSRX1-	B25	USB_SSTX1-
A26	USB_SSRX1+	B26	USB_SSTX1+
A27	BATLOW#	B27	WDT
A28	(S)ATA_ACT#	B28	N/A
A29	AC/HDA_SYNC	B29	N/A
A30	AC/HDA_RST#	B30	AC/HDA_SDIN0
A31	GND	B31	GND
A32	AC/HDA_BITCLK	B32	SPKR
A33	AC/HDA_SDOUT	B33	I2C_CK
A34	BIOS_DIS0#	B34	I2C_DAT
A35	THRMTrip#	B35	THR#
A36	USB6-	B36	USB7-
A37	USB6+	B37	USB7+
A38	USB_6_7_OC#	B38	USB_4_5_OC#
A39	USB4-	B39	USB5-
A40	USB4+	B40	USB5+

**Table A.1: SOM-7569 Row A,B**

A41	GND	B41	GND
A42	USB2-	B42	USB3-
A43	USB2+	B43	USB3+
A44	USB_2_3_OC#	B44	USB_0_1_OC#
A45	USB0-	B45	USB1-
A46	USB0+	B46	USB1+
A47	VCC_RTC	B47	EXCD1_PERST#
A48	EXCD0_PERST#	B48	EXCD1_CPPE#
A49	EXCD0_CPPE#	B49	SYS_RESET#
A50	LPC_SERIRQ	B50	CB_RESET#
A51	GND	B51	GND
A52	N/A	B52	N/A
A53	N/A	B53	N/A
A54	GPIO	B54	GPO1
A55	N/A	B55	N/A
A56	N/A	B56	N/A
A57	GND	B57	GPO2
A58	PCIE_TX3+	B58	PCIE_RX3+
A59	PCIE_TX3-	B59	PCIE_RX3-
A60	GND	B60	GND
A61	PCIE_TX2+	B61	PCIE_RX2+
A62	PCIE_TX2-	B62	PCIE_RX2-
A63	GPIO1	B63	GPO3
A64	PCIE_TX1+	B64	PCIE_RX1+
A65	PCIE_TX1-	B65	PCIE_RX1-
A66	GND	B66	WAKE0#
A67	GPIO2	B67	WAKE1#
A68	PCIE_TX0+	B68	PCIE_RX0+
A69	PCIE_TX0-	B69	PCIE_RX0-
A70	GND	B70	GND
A71	LVDS_A0+	B71	DDI0_PAIR0+
A72	LVDS_A0-	B72	DDI0_PAIR0-
A73	LVDS_A1+	B73	DDI0_PAIR1+
A74	LVDS_A1-	B74	DDI0_PAIR1-
A75	LVDS_A2+	B75	DDI0_PAIR2+
A76	LVDS_A2-	B76	DDI0_PAIR2-
A77	LVDS_VDD_EN	B77	N/A
A78	LVDS_A3+	B78	N/A
A79	LVDS_A3-	B79	LVDS_BKLT_EN
A80	GND	B80	GND
A81	LVDS_A_CK+	B81	DDI0_PAIR3+
A82	LVDS_A_CK-	B82	DDI0_PAIR3-
A83	LVDS_I2C_CK	B83	LVDS_BKLT_CTRL
A84	LVDS_I2C_DAT	B84	VCC_5V_SBY
A85	GPIO3	B85	VCC_5V_SBY
A86	RSVD	B86	VCC_5V_SBY
A87	N/A	B87	VCC_5V_SBY

**Table A.1: SOM-7569 Row A,B**

A88	PCIE_CLK_REF+	B88	BIOS_DIS1#
A89	PCIE_CLK_REF-	B89	DDI0_HPD
A90	GND	B90	GND
A91	SPI_POWER	B91	N/A
A92	SPI_MISO	B92	N/A
A93	GPO0	B93	N/A
A94	SPI_CLK	B94	N/A
A95	SPI_MOSI	B95	DDI0_DDC_AUX_SEL
A96	TPM_PP	B96	RSVD
A97	TYPE10#	B97	SPI_CS#
A98	SER0_TX	B98	DDI0_CTRLCLK_AUX+
A99	SER0_RX	B99	DDI0_CTRLCLK_AUX-
A100	GND	B100	GND
A101	SER1_TX	B101	FAN_PWMOUT
A102	SER1_RX	B102	FAN_TACHIN
A103	LID#	B103	SLEEP#
A104	VCC_12V	B104	VCC_12V
A105	VCC_12V	B105	VCC_12V
A106	VCC_12V	B106	VCC_12V
A107	VCC_12V	B107	VCC_12V
A108	VCC_12V	B108	VCC_12V
A109	VCC_12V	B109	VCC_12V
A110	GND	B110	GND

# Appendix **B**

## Watchdog Timer

This appendix gives you the information about the watchdog timer programming on the SOM-7569 COM Express Mini CPU Module. Sections include:

- Watchdog Timer Programming

## B.1 Programming the Watchdog Timer

Trigger Event	Note
IRQ	IRQ5, 7, 14 (BIOS setting default disable)**
NMI	N/A
SCI	Power button event
Power Off	Support
H/W Restart	Support
WDT Pin Activate	Support

\*\* WDT new driver support automatically select available IRQ number from BIOS, and then set to EC. Only Win10 support it.

In other OS, it will still use IRQ number from BIOS setting as usual.

For details, please refer to iManager & Software API User Manual.

# Appendix C

## Programming GPIO

This Appendix gives the illustration of the General Purpose Input and Output pin setting.

Sections include:

- System I/O ports

---

## C.1 GPIO Register

GPIO Byte Mapping	H/W Pin Name
BIT0	GPO0
BIT1	GPO1
BIT2	GPO2
BIT3	GPO3
BIT4	GPIO
BIT5	GPI1
BIT6	GPI2
BIT7	GPI3

For details, please refer to iManager & Software API User Manual.

# **Appendix D**

## **System Assignments**

This appendix gives you the information about the system resource allocation on the SOM-7569 COM Express Mini CPU Module.

Sections include:

- System I/O ports
- Interrupt Assignments
- 1st MB Memory Map

## D.1 System I/O Ports

**Table D.1: System I/O ports**

<b>Addr.Range(Hex)</b>	<b>Device</b>
0000-006F	PCI Express Root Complex
0020-0021	Programmable interrupt controller
0024-0025	Programmable interrupt controller
0028-0029	Programmable interrupt controller
002C-002D	Programmable interrupt controller
002E-002F	Motherboard resources
0030-0031	Programmable interrupt controller
0034-0035	Programmable interrupt controller
0038-0039	Programmable interrupt controller
003C-003D	Programmable interrupt controller
0040-0043	System timer
004E-004F	Motherboard resources
0050-0053	System timer
0060-006F	Motherboard resources
0061-0061	Motherboard resources
0062-0062	Microsoft ACPI-Compliant Embedded Controller
0063-0063	Motherboard resources
0065-0065	Motherboard resources
0066-0066	Microsoft ACPI-Compliant Embedded Controller
0067-0067	Motherboard resources
0070-0070	Motherboard resources
0070-0077	System CMOS/real time clock
0078-0CF7	PCI Express Root Complex
0080-008F	Motherboard resources
0092-0092	Motherboard resources
00A0-00A1	Programmable interrupt controller
00A4-00A5	Programmable interrupt controller
00A8-00A9	Programmable interrupt controller
00AC-00AD	Programmable interrupt controller
00B0-00B1	Programmable interrupt controller
00B2-00B3	Motherboard resources
00B4-00B5	Programmable interrupt controller
00B8-00B9	Programmable interrupt controller
00BC-00BD	Programmable interrupt controller
0280-028F	Motherboard resources
0290-029F	Motherboard resources
0299-029A	Motherboard resources
029E-02AD	Motherboard resources
02A0-02BF	Motherboard resources
02C0-02DF	Motherboard resources
02E8-02EF	Communications Port (COM4)
02F0-02E7	Motherboard resources
02F8-02FF	Communications Port (COM2)

**Table D.1: System I/O ports**

<b>Addr.Range(Hex)</b>	<b>Device</b>
0378-037F	Printer Port (LPT1)
03E8-03EF	Communications Port (COM3)
03F8-03FF	Communications Port (COM1)
0400-047F	Motherboard resources
04D0-04D1	Programmable interrupt controller
0500-05EF	Motherboard resources
0600-061F	Motherboard resources
0680-069F	Motherboard resources
0D00-FFFF	PCI Express Root Complex
164E-164F	Motherboard resources
E000-EFFF	Intel(R) Celeron(R)/Pentium(R)Processor PCI Express Root Port – 5AD7
F000-F03F	Intel(R) HD Graphics
F040-F05F	Intel(R) Celeron(R)/Pentium(R) Processor SMBus - 5AD4
F060-F07F	Standard SATA AHCI Controller
F080-F083	Standard SATA AHCI Controller
F090-F097	Standard SATA AHCI Controller

## D.2 Interrupt Assignments

**Table D.2: Interrupt Assignments**

Interrupt#	Interrupt Source
IRQ 0	System timer
IRQ 3	Communications Port (COM2)
IRQ 4	Communications Port (COM1)
IRQ 5	Communications Port (COM4)
IRQ 6	Communications Port (COM3)
IRQ 8	System CMOS/real time clock
IRQ 14	GPIO Controller
IRQ 54~511	Microsoft ACPI-Compliant System
IRQ 25	High Definition Audio Controller
IRQ 39	SDA Standard Compliant SD Host Controller
IRQ FFFFFFFF0 (-16)	Intel® USB 3.0 eXtensible Host Controller - 1.0(Microsoft)
IRQ FFFFFFFF1 (-15)~	Intel(R) I210 Gigabit Network Connection
IRQ FFFFFFFF6 (-10)~	
IRQ FFFFFFFF7 (-9)	Intel® Trusted Execution Engine Interface
IRQ FFFFFFFF8 (-8)	Intel(R) HD Graphics
IRQ FFFFFFFF9 (-7)	Standard SATA AHCI Controller
IRQ FFFFFFFFA (-6)	Intel(R) Celeron(R)/Pentium(R)Processor PCI Express Root Port – 5AD7
IRQ FFFFFFFFB (-5)	Intel(R) Celeron(R)/Pentium(R)Processor PCI Express Root Port – 5ADB
IRQ FFFFFFFFC (-4)	Intel(R) Celeron(R)/Pentium(R)Processor PCI Express Root Port – 5ADA
IRQ FFFFFFFFD (-3)	Intel(R) Celeron(R)/Pentium(R)Processor PCI Express Root Port – 5AD9
IRQ FFFFFFFFE (-2)	Intel(R) Celeron(R)/Pentium(R)Processor PCI Express Root Port – 5AD8

## D.3 1st MB Memory Map

**Table D.3: 1st MB Memory Map**

Addr. Range (Hex)	Device
0xA0000-0xBFFFF	PCI Express Root Complex
0xC0000-0xDFFFF	PCI Express Root Complex
0xE0000-0xFFFFF	PCI Express Root Complex
0x7B800001-0x7BFFFFFF	PCI Express Root Complex
0x7C000001-0x7FFFFFFF	PCI Express Root Complex
0x80000000-0x80FFFFFF	Intel(R) HD Graphics
0x81100000-0x813FFFFFF	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port – 5AD7
0x81200000-0x812FFFFFF	Intel(R) I210 Gigabit Network Connection
0x81300000-0x81303FFF	Intel(R) I210 Gigabit Network Connection
0x81400000-0x8140FFFF	Intel® USB 3.0 eXtensible Host Controller - 1.0(Microsoft)
0x81410000-0x81413FFF	High Definition Audio Controller
0x81414000-0x81415FFF	Standard SATA AHCI Controller
0x81416000-0x814160FF	Intel(R) Celeron(R)/Pentium(R) Processor SMBUS – 5AD4
0x81417000-0x81417FFF	SDA Standard Compliant SD Host Controller
0x81418000-0x81418FFF	SDA Standard Compliant SD Host Controller
0x81419000-0x814197FF	Standard SATA AHCI Controller
0x8141A000-0x8141A0FF	Standard SATA AHCI Controller
0x8141D000-0x8141DFFF	Intel(R) Trusted Execution Engine Interface
0x90000000-0x9FFFFFFF	Intel(R) HD Graphics
0xD0C00000-0xD0C00653	GPIO Controller
0xE0000000-0xFFFFFFFF	Motherboard resources
0xE0000000-0xFFFFFFFF	PCI Express Root Complex
0xFE000000-0xFFFFFFFF	Motherboard resources
0xFED00000-0xFED003FF	High precision even timer
0xFED01000-0xFED01FFF	Motherboard resources
0xFED03000-0xFED03FFF	Motherboard resources
0xFED06000-0xFED06FFF	Motherboard resources
0xFED08000-0xFED09FFF	Motherboard resources
0xFED1C000-0xFED1CFFF	Motherboard resources
0xFED80000-0xFEDBFFFF	Motherboard resources
0xFEE00000-0xFEEFFFFFF	Motherboard resources

**ADVANTECH**

*Enabling an Intelligent Planet*

**[www.advantech.com](http://www.advantech.com)**

**Please verify specifications before quoting. This guide is intended for reference purposes only.**

**All product specifications are subject to change without notice.**

**No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission from the publisher.**

**All brand and product names are trademarks or registered trademarks of their respective companies.**

**© Advantech Co., Ltd. 2022**

Our company network supports you worldwide with offices in Germany, Austria, Switzerland, the UK and the USA. For more information please contact:

## Headquarters

### Germany



### FORTEC Elektronik AG

Augsburger Str. 2b  
82110 Germering

Phone: +49 89 894450-0  
E-Mail: [info@fortecag.de](mailto:info@fortecag.de)  
Internet: [www.fortecag.de](http://www.fortecag.de)

## Fortec Group Members

### Austria



### Distec GmbH Office Vienna

Nuschinggasse 12  
1230 Wien

Phone: +43 1 8673492-0  
E-Mail: [info@distec.de](mailto:info@distec.de)  
Internet: [www.distec.de](http://www.distec.de)

### Germany



### Distec GmbH

Augsburger Str. 2b  
82110 Germering

Phone: +49 89 894363-0  
E-Mail: [info@distec.de](mailto:info@distec.de)  
Internet: [www.distec.de](http://www.distec.de)

### Switzerland



### ALTRAC AG

Bahnhofstraße 3  
5436 Würenlos

Phone: +41 44 7446111  
E-Mail: [info@altrac.ch](mailto:info@altrac.ch)  
Internet: [www.altrac.ch](http://www.altrac.ch)

### United Kingdom



### Display Technology Ltd.

Osprey House, 1 Osprey Court  
Hichingbrooke Business Park  
Huntingdon, Cambridgeshire, PE29 6FN

Phone: +44 1480 411600  
E-Mail: [info@displaytechnology.co.uk](mailto:info@displaytechnology.co.uk)  
Internet: [www.displaytechnology.co.uk](http://www.displaytechnology.co.uk)

### USA



### Apollo Display Technologies, Corp.

87 Raynor Avenue,  
Unit 1Ronkonkoma,  
NY 11779

Phone: +1 631 5804360  
E-Mail: [info@apollodisplays.com](mailto:info@apollodisplays.com)  
Internet: [www.apollodisplays.com](http://www.apollodisplays.com)