



OUR GLOBAL  
COMPETENCE  
CENTRES

 APOLLO DISPLAY  
TECHNOLOGIES



 DISTEC



 DISPLAY  
TECHNOLOGY




# Manual

## iBase

### IB956

11th Gen Intel® Core™ / Celeron® 3.5" Single Board Computer

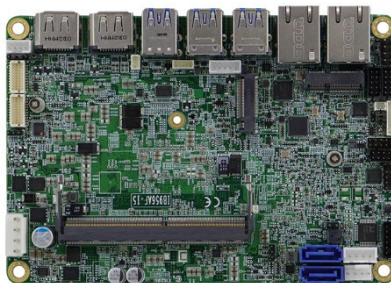

---

The information contained in this document has been carefully researched and is, to the best of our knowledge, accurate. However, we assume no liability for any product failures or damages, immediate or consequential, resulting from the use of the information provided herein. Our products are not intended for use in systems in which failures of product could result in personal injury. All trademarks mentioned herein are property of their respective owners. All specifications are subject to change without notice.

---

# **IB956**

**11th Generation Intel®  
Core™ i7/i5/i3/ Celeron®  
3.5" Disk-Size SBC**

## **User's Manual**

Version 1.0  
(November 2021)

## **Copyright**

© 2021 IBASE Technology, Inc. All rights reserved.

No part of this publication may be reproduced, copied, stored in a retrieval system, translated into any language or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without the prior written consent of IBASE Technology, Inc. (hereinafter referred to as "IBASE").

## **Disclaimer**

IBASE reserves the right to make changes and improvements to the products described in this document without prior notice. Every effort has been made to ensure the information in the document is correct; however, IBASE does not guarantee this document is error-free.

IBASE assumes no liability for incidental or consequential damages arising from misapplication or inability to use the product or the information contained herein, nor for any infringements of rights of third parties, which may result from its use.

## **Trademarks**

All the trademarks, registrations and brands mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

## Compliance



This product has passed CE Class B tests for environmental specifications and limits. This product is in accordance with the directives of the European Union (EU). In a domestic environment, this product may cause radio interference in which case users may be required to take adequate measures.



This product has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications.

## WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive of for waste electrical and electronic equipment (WEEE - 2012/19/EU). Instead, it should be disposed of by returning it to a municipal recycling collection point. Check local regulations for disposal of electronic products.

## Green IBASE



This product is compliant with the current RoHS restrictions and prohibits use of the following substances in concentrations exceeding 0.1% by weight (1000 ppm) except for cadmium, limited to 0.01% by weight (100 ppm).

- Lead (Pb)
- Mercury (Hg)
- Cadmium (Cd)
- Hexavalent chromium (Cr6+)
- Polybrominated biphenyls (PBB)
- Polybrominated diphenyl ether (PBDE)

## Important Safety Information

### Environmental conditions:

- Use this product in environments with ambient temperatures between 0°C and 60°C.
- Do not leave this product in an environment where the storage temperature may be below -20° C or above 80° C. To prevent from damages, the product must be used in a controlled environment.

### Care for your iBASE products:

- Before cleaning the PCB, unplug all cables and remove the battery.
- Clean the PCB with a circuit board cleaner or degreaser, or use cotton swabs and alcohol.
- Vacuum the dust with a computer vacuum cleaner to prevent the fan from being clogged.



### WARNING

### Attention during use:

- Do not use this product near water.
- Do not spill water or any other liquids on this product.
- Do not place heavy objects on the top of this product.

### Anti-static precautions

- Wear an anti-static wrist strap to avoid electrostatic discharge.
- Place the PCB on an anti-static kit or mat.
- Hold the edges of PCB when handling.
- Touch the edges of non-metallic components of the product instead of the surface of the PCB.
- Ground yourself by touching a grounded conductor or a grounded bit of metal frequently to discharge any static.



### CAUTION

There is danger of explosion if the internal lithium-ion battery is replaced by an incorrect type. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions or recycle them at a local recycling facility or battery collection point.

## Warranty Policy

- **IBASE standard products:**

24-month (2-year) warranty from the date of shipment. If the date of shipment cannot be ascertained, the product serial numbers can be used to determine the approximate shipping date.

- **3<sup>rd</sup>-party parts:**

12-month (1-year) warranty from delivery for the 3<sup>rd</sup>-party parts that are not manufactured by IBASE, such as CPU, CPU cooler, memory, storage devices, power adapter, panel and touchscreen.

- \* PRODUCTS, HOWEVER, THAT FAIL DUE TO MISUSE, ACCIDENT, IMPROPER INSTALLATION OR UNAUTHORIZED REPAIR SHALL BE TREATED AS OUT OF WARRANTY AND CUSTOMERS SHALL BE BILLED FOR REPAIR AND SHIPPING CHARGES.

## Technical Support & Services

1. Visit the IBASE website at [www.ibase.com.tw](http://www.ibase.com.tw) to find the latest information about the product.
2. If you need any further assistance from your distributor or sales representative, prepare the following information of your product and elaborate upon the problem.
  - Product model name
  - Product serial number
  - Detailed description of the problem
  - The error messages in text or in screenshots if there is any
  - The arrangement of the peripherals
  - Software in use (such as OS and application software, including the version numbers)
3. If repair service is required, you can download the RMA form at <http://www.ibase.com.tw/english/Supports/RMAService/>. Fill out the form and contact your distributor or sales representative.

# Table of Contents

---

|                  |  |          |
|------------------|--|----------|
| <b>Chapter 1</b> | <b>General Information .....</b>                           | <b>1</b> |
| 1.1              | Introduction .....   | 2        |
| 1.2              | Features .....   | 2        |
| 1.3              | Packing List .....   | 3        |
| 1.4              | Optional Accessories .....                                 | 3        |
| 1.5              | Specifications .....                                       | 4        |
| 1.6              | Block Diagram .....  | 6        |
| 1.7              | Board Pictures .....                                       | 7        |
| 1.8              | Dimensions .....   | 8        |
| <b>Chapter 2</b> | <b>Hardware Configuration .....</b>                        | <b>9</b> |
| 2.1              | Essential Installations .....                              | 10       |
| 2.2              | Setting the Jumpers .....                                  | 11       |
| 2.3              | Jumper & Connector Locations .....                         | 12       |
| 2.4              | Jumpers Quick Reference .....                              | 13       |
| 2.4.1            | Clear RTC Data (JP2) .....                                 | 13       |
| 2.4.2            | Clear CMOS Data (JP3) .....                                | 14       |
| 2.4.3            | LVDS Panel Power / Brightness Selections (JP4 / JP5) ..... | 15       |
| 2.4.4            | AT / ATX Selection (JP6) .....                             | 16       |
| 2.5              | Connectors Quick Reference .....                           | 17       |
| 2.5.1            | SATA Connectors (CN1, CN2) .....                           | 18       |
| 2.5.2            | DP Connectors (CN9, CN10) .....                            | 19       |
| 2.5.3            | SATA Power Connector (J1) .....                            | 20       |
| 2.5.4            | Audio Connector (J3) .....                                 | 21       |
| 2.5.5            | DC-In Connector (J4) .....                                 | 22       |
| 2.5.6            | USB2 #7 #8 (J8) .....                                      | 23       |
| 2.5.7            | Digital I/O Connector (J9) .....                           | 24       |
| 2.5.8            | LVDS Connector (J12 - 2nd, J18 - 1st) .....                | 25       |
| 2.5.9            | M.2 M-Key 2280 (J14) .....                                 | 25       |
| 2.5.10           | COM2 RS-232 Port (J15) .....                               | 27       |
| 2.5.11           | COM1 RS-232/422/485 Port (J16) .....                       | 28       |
| 2.5.12           | Front Panel Setting Connector (J22) .....                  | 29       |
| 2.5.13           | LVDS Backlight Connector (J23) .....                       | 30       |
| 2.5.14           | CPU Fan Power Connector (CPU_FAN1) .....                   | 31       |
| 2.5.15           | Smart Battery (J20) .....                                  | 32       |



|                  |  |           |
|------------------|--|-----------|
| <b>Chapter 3</b> | <b>Drivers Installation .....</b>                              | <b>33</b> |
| 3.1              | Introduction .....   | 34        |
| 3.2              | Intel® Chipset Software Installation Utility .....             | 34        |
| 3.3              | VGA Driver Installation.....                                   | 36        |
| 3.4              | HD Audio Driver Installation .....                             | 37        |
| 3.5              | LAN Driver Installation .....                                  | 38        |
| 3.6              | Intel® Management Engine Components Drivers Installation ..... | 40        |
| <b>Chapter 4</b> | <b>BIOS Setup.....</b>   | <b>43</b> |
| 4.1              | Introduction.....  | 44        |
| 4.2              | BIOS Setup.....  | 44        |
| 4.3              | Main Settings.....   | 45        |
| 4.4              | Advanced Settings.....   | 46        |
| 4.5              | Chipset Settings .....   | 60        |
| 4.6              | Security Settings.....   | 64        |
| 4.7              | Boot Settings .....  | 67        |
| 4.8              | Save & Exit Settings .....                                     | 68        |
| <b>Appendix</b>  | <b>.....</b>   | <b>69</b> |
| A.               | I/O Port Address Map .....                                     | 70        |
| B.               | Interrupt Request Lines (IRQ) .....                            | 71        |
| C.               | Watchdog Timer Configuration .....                             | 72        |
| D.               | Onboard Connector Reference Types.....                         | 76        |

This page is intentionally left blank.

# Chapter 1

## General Information

The information provided in this chapter includes:

- Features
- Packing List
- Optional Accessories
- Specifications
- Block Diagram
- Board Pictures
- Board Dimensions

## 1.1 Introduction

IB956 is a 3.5" disk-size single board computer based on the platform of 11th Gen Intel® Core™ i7/i5/i3/ Celeron® processor and Intel® QM580E/HM570E chipsets. It features one DDR4 SO-DIMM socket with 32GB capacity and display interfaces including DisplayPort, and 24-bit dual-channel LVDS. With two RJ45 for Gigabit Ethernet, the I/O on board also include 6x USB3.1, 2x USB2.0, 2x SATA III, 2x COM, and 2x M.2 sockets.

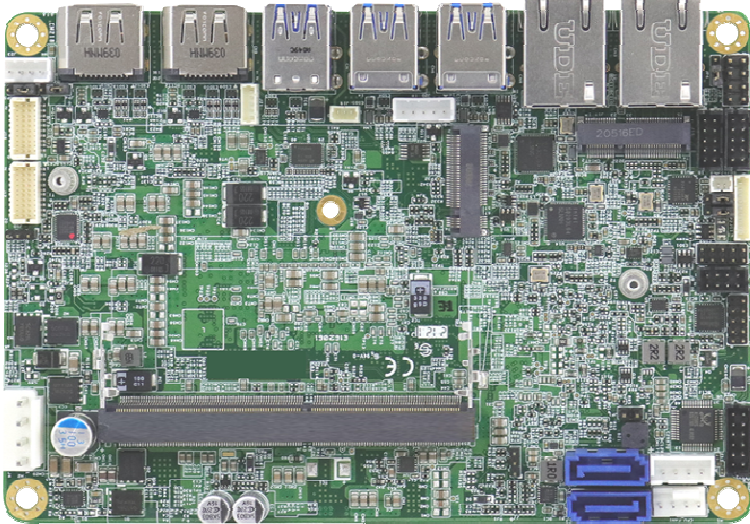


Photo of IB956

## 1.2 Features

- Onboard 11th Gen Intel® Core™ i7/i5/i3 processor
- 1x DDR4 SO-DIMM, Max.32GB
- DisplayPort and 24-bit dual-channel LVDS interface
- 2x Intel® 2.5 Gigabit LAN
- 6x USB3.1, 2x USB2.0, 2x SATA III, 2x COM, 2x M.2
- Watchdog timer, Digital I/O, iAMT (15)\*, TPM (2.0)

\*iAMT (15) for IB956AF only

## 1.3 Packing List


Your IB956 package should include the items listed below. If any of the items below is missing, contact the distributor or dealer from whom you purchased the product.

- IB956 SBC x 1
- Disk (including chipset drivers and flash memory utility) x 1
- This User's Manual x 1

## 1.4 Optional Accessories

IBASE provides the following optional accessories:

- Cable Kit (IB92)  
Including:
  - DC-In power cable (PW595) x 1
  - COM ports cable (PK1H) x 1
  - SATA & HDD power cable (SATA-53A) x 1
- Audio cable (Audio-18)
- USB 2.0 cable (USB29)
- Heat spreader (HSIB956-1)
- Heat sink (HSIB956-A)

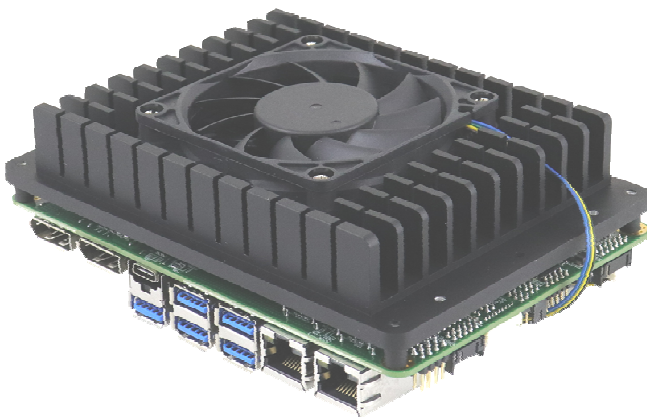


## 1.5 Specifications

| Model                               | IB956AF-i7  | IB956AF-i5            | IB956EF-i3            |
|-------------------------------------|---|-----------------------|-----------------------|
| <b>CPU</b>                          | Intel Core i7-11850HE   | Intel Core i5-11500HE | Intel Core i3-11100HE |
| <b>CPU Speed</b>                    | 2.6GHz~4.7GHz   | 2.6GHz~4.5GHz         | 2.4GHz~4.4GHz         |
| <b>Smart Cache</b>                  | 24MB  | 12MB                  | 8MB                   |
| <b>Chipset</b>                      | Intel® QM580E   | Intel® QM580E         | Intel® HM570E         |
| <b>Form Factor</b>                  | 3.5" disk-size SBC  |                       |                       |
| <b>Operating System</b>             | Windows 10<br>Linux Ubuntu / Fedora   |                       |                       |
| <b>Memory</b>                       | 1 x DDR4-3200 SO-DIMM, Max. 32GB  |                       |                       |
| <b>Storage</b>                      | NVMe  |                       |                       |
| <b>Graphics</b>                     | Processor Integrated Graphics   |                       |                       |
| <b>Network</b>                      | <b>1st LAN</b><br>IB956AF: Intel® I225-LM 2.5G<br>IB956EF: Intel® I225-V 2.5G<br><b>2nd LAN</b><br>IB956AF: Intel® I225-V 2.5G<br>IB956EF: Intel® I225-V 2.5G |                       |                       |
| <b>Super I/O</b>                    | Fintek F81804U-I  |                       |                       |
| <b>Audio Codec &amp; Controller</b> | Built-in HD with Realtek AL888S-VD2-GR  |                       |                       |
| <b>Power Requirement</b>            | +12V (- 10 % tolerance) ~ +24V (+10 % tolerance) DC-in  |                       |                       |
| <b>TPM</b>                          | 2.0   |                       |                       |
| <b>Watchdog Timer</b>               | Yes (256 segments, 0, 1, 2...255 sec / min)   |                       |                       |
| <b>BIOS</b>                         | AMI BIOS  |                       |                       |
| <b>H/W Monitor</b>                  | Yes   |                       |                       |
| <b>Dimensions</b>                   | 102.22 x 147.01 mm (4.02" x 5.8")   |                       |                       |
| <b>RoHS 2</b>                       | Yes   |                       |                       |
| <b>Certification</b>                | CE, FCC Class B   |                       |                       |

| <b>I/O Ports</b>         |  |
|--------------------------|--|
| <b>Display</b>           | <ul style="list-style-type: none"> <li>• 3x DisplayPort (2x DP connector &amp; Type-C)</li> <li>• 24-bit dual-channel LVDS</li> </ul>                                      |
| <b>LAN</b>               | 2 x RJ45 for 2.5 Gigabit Ethernet  |
| <b>USB</b>               | <ul style="list-style-type: none"> <li>• 2x USB2.0 (Pin-header)</li> <li>• QM580E: 6x USB3.1 (GEN2)</li> <li>• HM570E: 4x USB3.1 (GEN2), 2x USB3.1(GEN1)</li> </ul>        |
| <b>Serial</b>            | <ul style="list-style-type: none"> <li>• 1x RS232/422/485</li> <li>• 1x RS232 (COM2)</li> </ul>  |
| <b>SATA</b>              | 2 x SATA III   |
| <b>Audio</b>             | Built-in HD audio with Realtek ALC888S   |
| <b>Digital IO</b>        | 4-In & 4-Out   |
| <b>Expansion Slots</b>   | <ul style="list-style-type: none"> <li>• 1x M.2 (M-Key, Type:2280, Supports NVMe with PCIe(4x) signal only)</li> <li>• 1x M.2 (E-Key, Type:2230, Supports CNVi)</li> </ul> |
| <b>Environment</b>       |  |
| <b>Temperature</b>       | <ul style="list-style-type: none"> <li>• Operation: 0 ~ 60 °C (32 ~ 140 °F)</li> <li>• Storage: -20 ~ 80 °C (-4 ~ 176 °F)</li> </ul>                                       |
| <b>Relative Humidity</b> | 0 ~ 90 %, non-condensing at 60 °C  |

All specifications are subject to change without prior notice.


## 1.6 Block Diagram

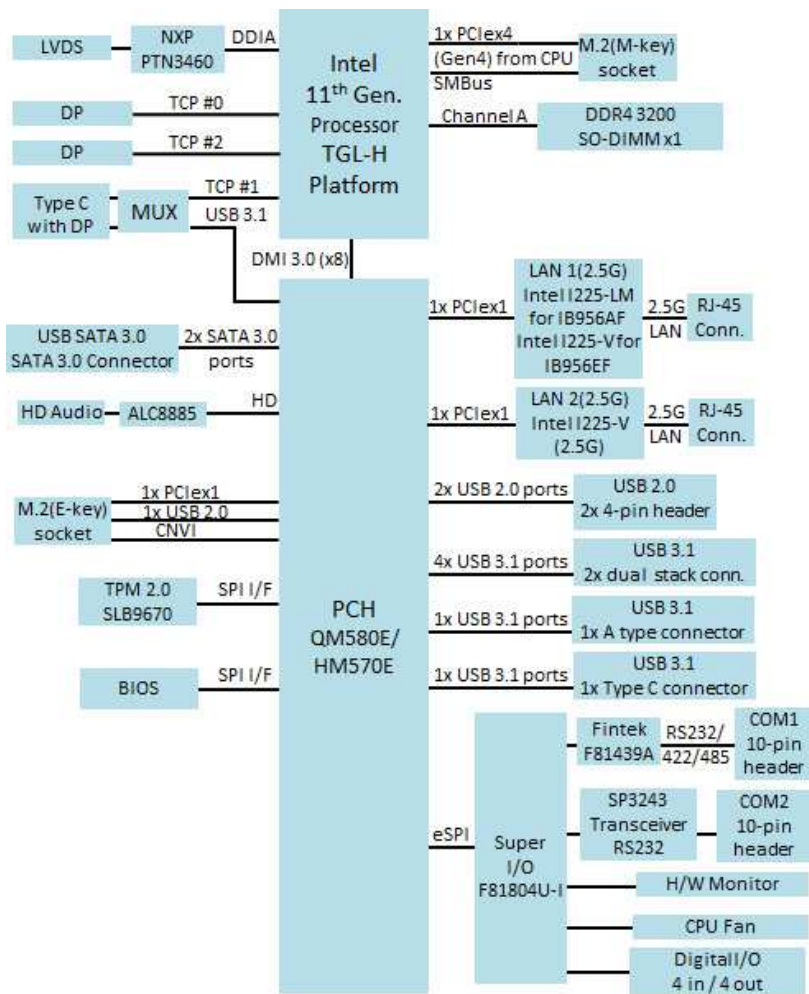




## 1.7 Board Pictures

### Top View

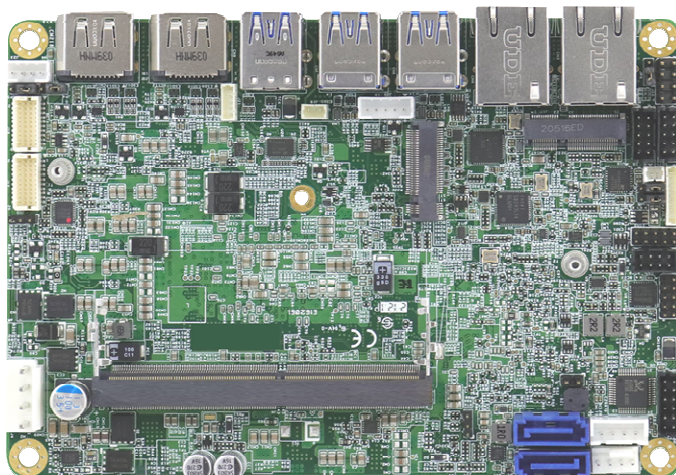


### Bottom View

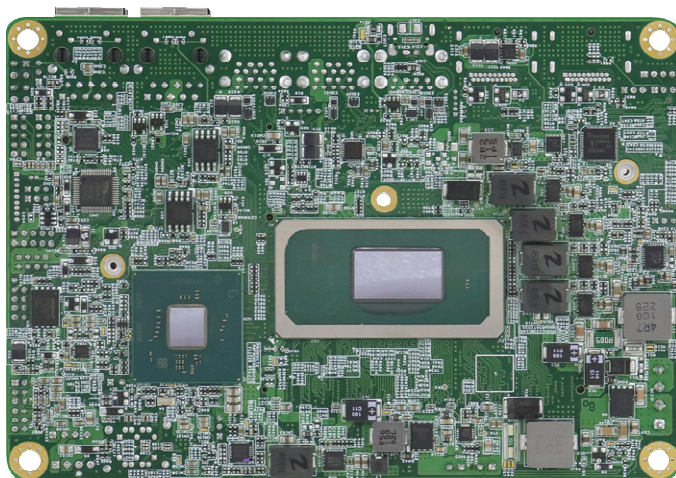


\* The photos above are for reference only. Some minor components may differ.

**I/O View**

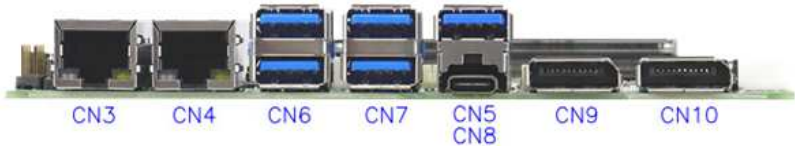

| Connector          | Function      |
|--------------------|---------------|
| CN3, CN4           | 2.5 GbE Ports |
| CN6, CN7, CN8, CN5 | USB 3.1 Ports |
| CN9, CN10          | DisplayPort   |

**1.8 Dimensions**

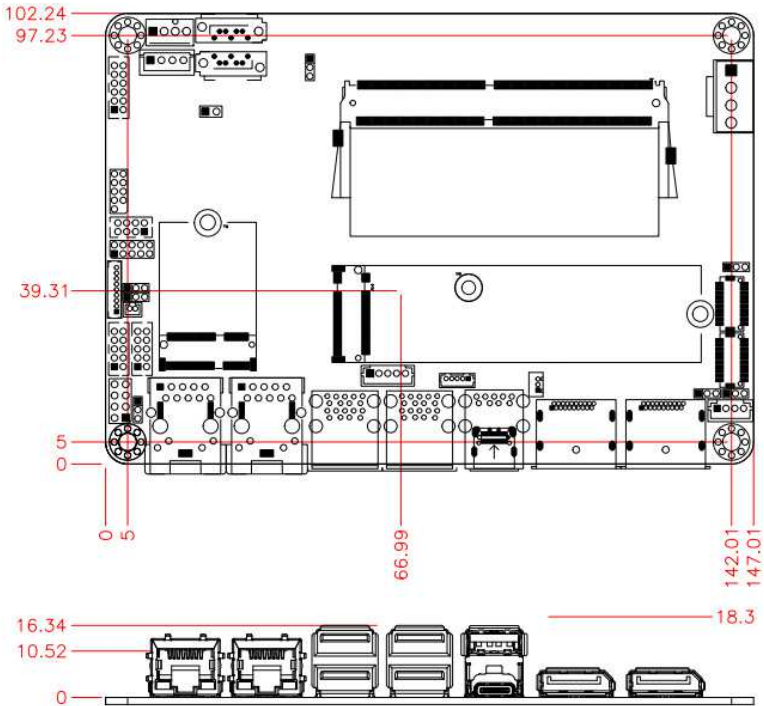

# Chapter 2

## Hardware Configuration


This section provides information on jumper settings and connectors on the IB956 in order to set up a workable system. On top of that, you will also need to install crucial pieces such as the CPU and the memory before using the product. The topics covered are:

- Essential installations
- Jumpers and connectors

## 2.1 Essential Installations

### 2.1.1 Installing the Memory

The IB956 supports one DDR4 memory socket. To install the modules, locate the memory slot on the board and perform the following steps:

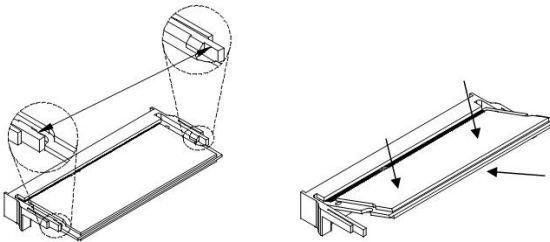

1. Align the key of the memory module with that on the memory slot and insert the module slantwise.
2. Gently push the module in an upright position until the clips of the slot close to hold the module in place when the module touches the bottom of the slot.


To remove the module, press the clips outwards with both hands, and the module will pop-up.

## 2.2 Setting the Jumpers


Set up and configure your IB956 by using jumpers for various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your use.

### 2.2.1 How to Set Jumpers

Jumpers are short-length conductors consisting of several metal pins with a non-conductive base mounted on the circuit board. Jumper caps are used to have the functions and features enabled or disabled. If a jumper has 3 pins, you can connect either PIN1 to PIN2 or PIN2 to PIN3 by shorting.






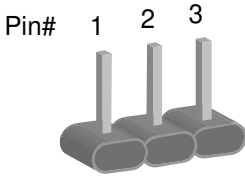


A 3-pin jumper



A jumper cap


Refer to the illustration below to set jumpers.
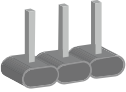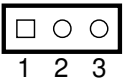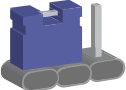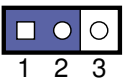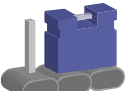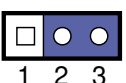
| Pin closed | Jumper  | Setting   |
|------------|---|---|
| Open       |    |    |
| 1-2        |  |  |
| 2-3        |  |  |

When two pins of a jumper are encased in a jumper cap, this jumper is **closed**, i.e. turned **On**.

When a jumper cap is removed from two jumper pins, this jumper is **open**, i.e. turned **Off**.


## 2.3 Jumper & Connector Locations

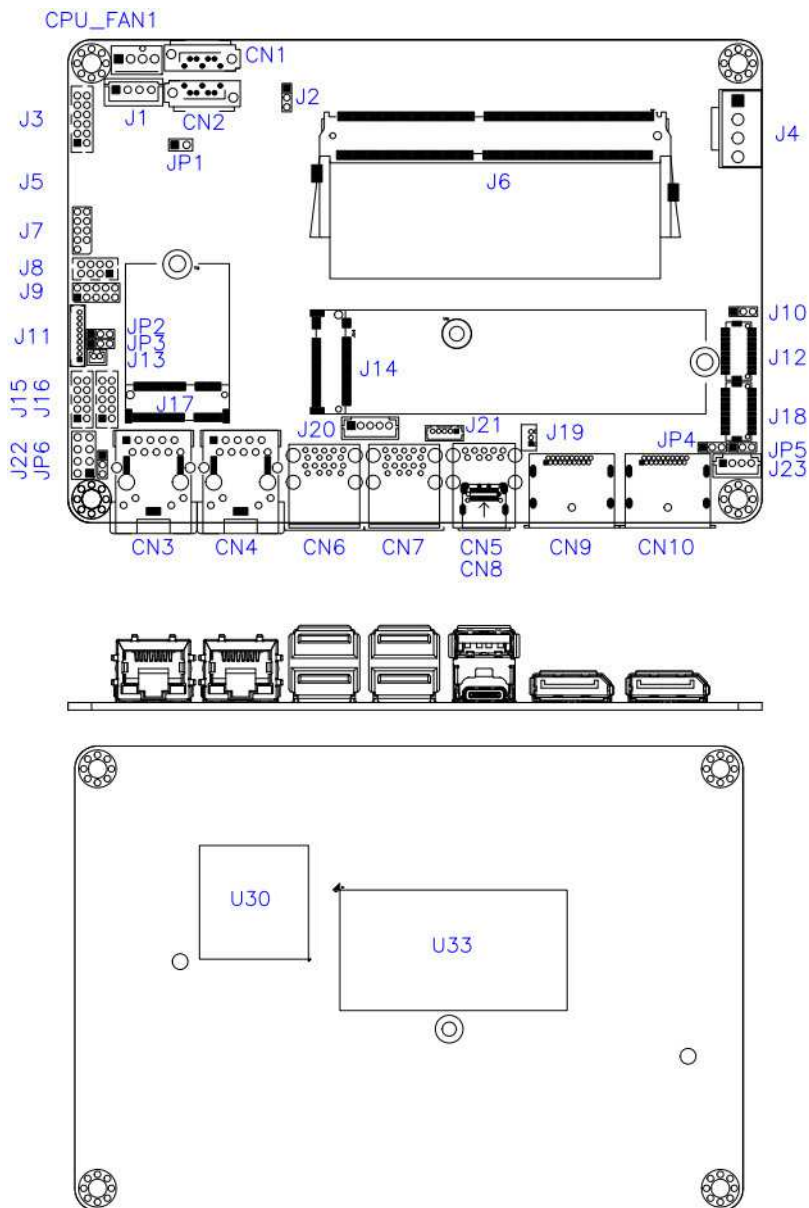



## 2.4 Jumpers Quick Reference


| Function                                 | Jumper                                  |
|--|---|
| Clear RTC Data                           | JP2                                     |
| Clear CMOS Data                          | JP3                                     |
| AT/ATX Selection                         | JP6                                     |
| LVDS Panel Power / Brightness Selections | JP4 (For power)<br>JP5 (For brightness) |

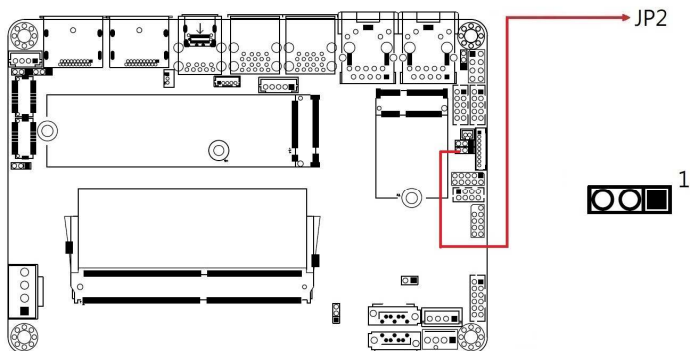

### 2.4.1 Clear RTC Data (JP2)



| Function            | Pin closed | Setting   |
|---------------------|------------|---|
| Normal<br>(default) | 1-2        | 1  |
| Clear RTC           | 2-3        | 1  |

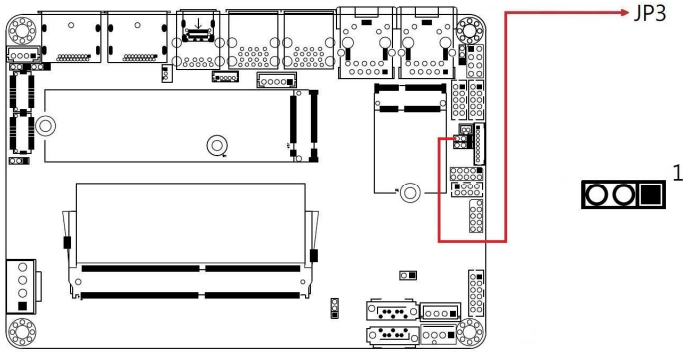
## 2.4.2 Clear CMOS Data (JP3)



| Function            | Pin closed | Setting   |
|---------------------|------------|---|
| Normal<br>(default) | 1-2        | 1  |
| Clear CMOS          | 2-3        | 1  |




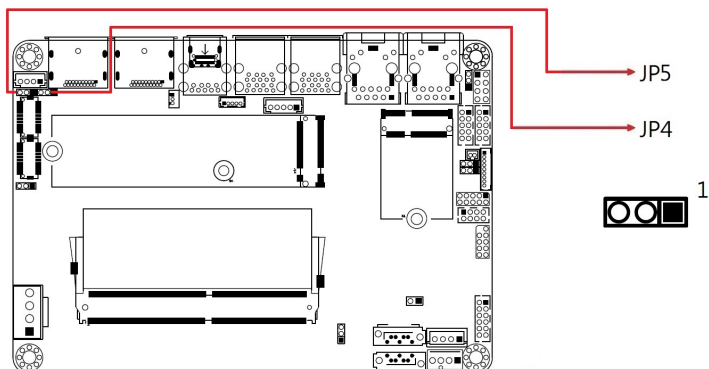

### 2.4.3 LVDS Panel Power / Brightness Selections (JP4 / JP5)



| Jumper                  | Function       | Pin closed | Setting |
|-------------------------|----------------|------------|---------|
| JP4<br>(For power)      | 3.3V (default) | 1-2        | 1       |
|                         | 5V             | 2-3        | 1       |
| JP5<br>(For Brightness) | 3.3V (default) | 1-2        | 1       |
|                         | 5V             | 2-3        | 1       |

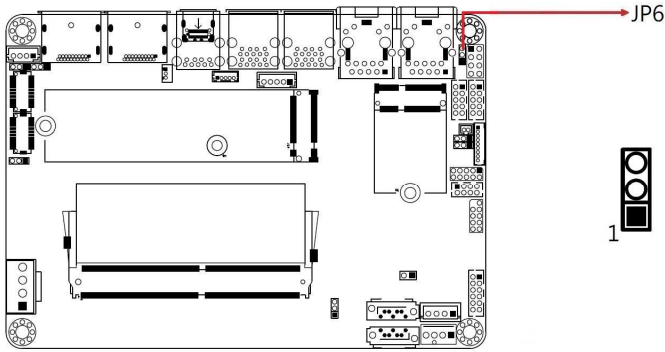**2.4.4 AT / ATX Selection (JP6)**




| Function | Pin closed | Setting   |
|----------|------------|---|
| ATX      | 1-2        | 1  |
| AT       | 2-3        | 1  |

## 2.5 Connectors Quick Reference


| Function                               | Connector |
|--|-----------|
| SPI Flash Connector (factory use only) | J7        |
| eSPI Debug (Factory use only)          | J11       |
| Battery Connector                      | J13       |
| DDR4 UDIMM CH-A                        | J6        |
| M.2 M-Key 2280                         | J14       |
| USB Type C Connector                   | CN8       |
| USB 3.1 Connector                      | CN5       |
| Dual USB 3.1 Ports                     | CN6, CN7  |
| Two 2.5 GbE Ports                      | CN3, CN4  |
| M.2 E-Key with CNVi                    | J17       |
| SATA Connectors                        | CN1, CN2  |
| SATA Power Connector                   | J1        |
| DP Connectors                          | CN9, CN10 |
| Audio Connector                        | J3        |
| USB2 #7 #8                             | J8        |
| DC-In Connector                        | J4        |
| LVDS CHA Connector (1st, 2nd)          | J18, J12  |
| LVDS Backlight Connector               | J23       |
| Digital I/O Connector                  | J9        |
| Front Panel Setting Connector          | J22       |
| COM1, COM2 Serial Ports                | J15, J16  |
| CPU Fan Power Connector                | CPU_FAN1  |
| Smart Battery                          | J20       |

## 2.5.1 SATA Connectors (CN1, CN2)

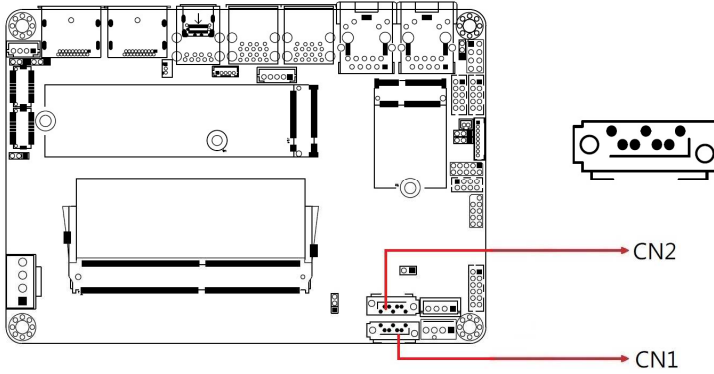


| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | Ground     | 5   | RX-        |
| 2   | TX+        | 6   | RX+        |
| 3   | TX-        | 7   | Ground     |
| 4   | Ground     |     |            |

### 2.5.2 DP Connectors (CN9, CN10)

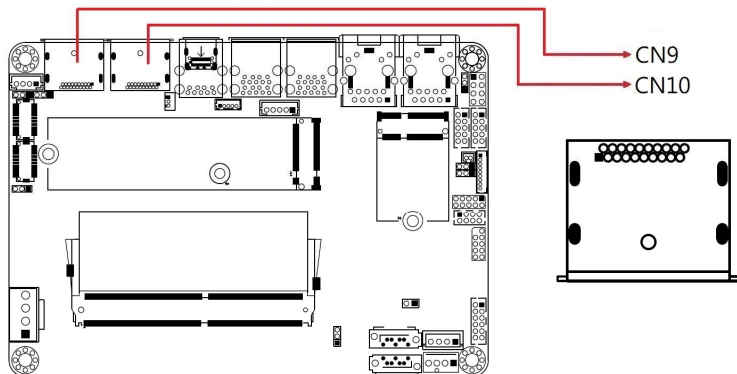

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | LAN0_P     | 11  | GND        |
| 2   | GND        | 12  | LAN3_N     |
| 3   | LAN0_N     | 13  | CONFIG     |
| 4   | LAN1_P     | 14  | GND        |
| 5   | GND        | 15  | AUXP       |
| 6   | LAN1_N     | 16  | GND        |
| 7   | LAN2_P     | 17  | AUXN       |
| 8   | GND        | 18  | Hot Plug   |
| 9   | LAN2_N     | 19  | GND        |
| 10  | LAN3_P     | 20  | +5V        |


### 2.5.3 SATA Power Connector (J1)

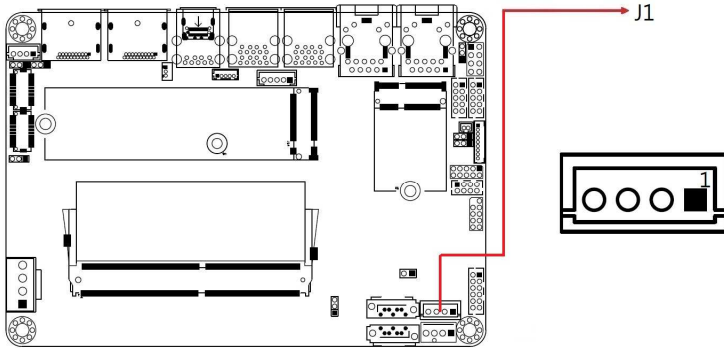

Remarks: E-CALL\_0110-071-040

| Pin | Assignment |
|-----|------------|
| 1   | +5V        |
| 2   | GND        |
| 3   | GND        |
| 4   | +12V       |


## 2.5.4 Audio Connector (J3)

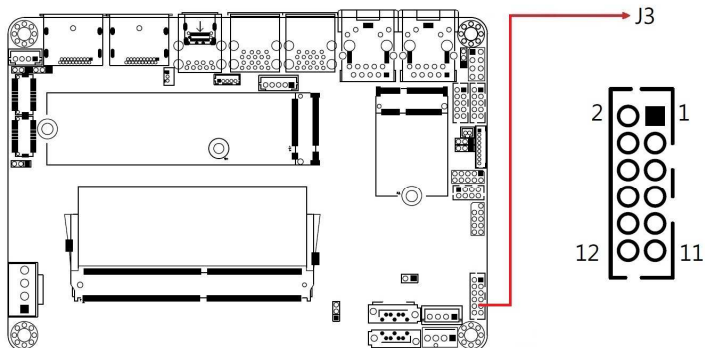

Remarks: HK\_DF11-12S-PA66H

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | LINE OUT_L | 2   | LINE OUT_R |
| 3   | FRONT_JD   | 4   | GND        |
| 5   | LINE IN_L  | 6   | LINE IN_R  |
| 7   | LINE_JD    | 8   | GND        |
| 9   | MIC_L      | 10  | MIC_R      |
| 11  | MIC_JD     | 12  | GND        |


## 2.5.5 DC-In Connector (J4)

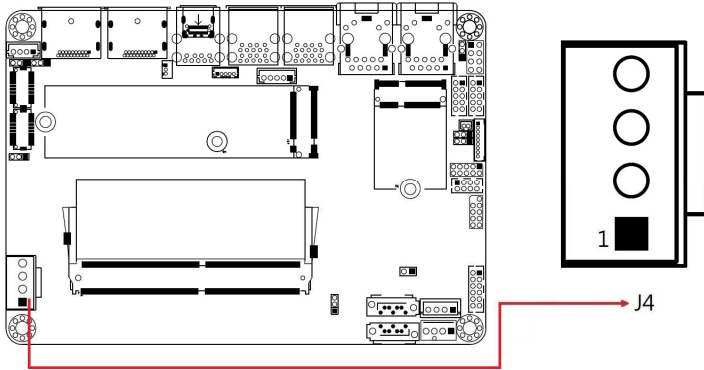

| Pin | Assignment |
|-----|------------|
| 1   | +12V~+24V  |
| 2   | +12V~+24V  |
| 3   | GND        |
| 4   | GND        |




### 2.5.6 USB2 #7 #8 (J8)

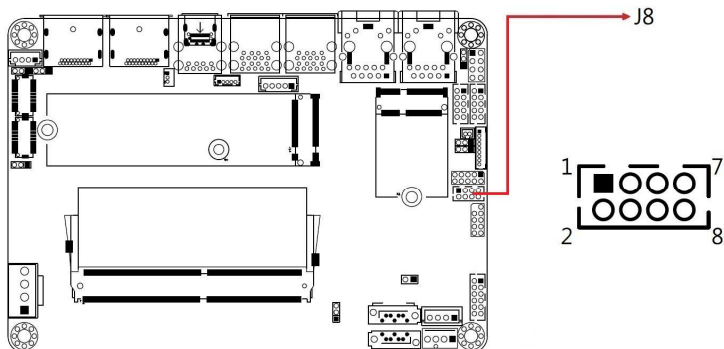

Remarks: HK\_DF11-8S-PA66H

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | +5V        | 2   | GND        |
| 3   | USB_PN     | 4   | USB_PP     |
| 5   | USB_PP     | 6   | USB_PN     |
| 7   | GND        | 8   | +5V        |


## 2.5.7 Digital I/O Connector (J9)

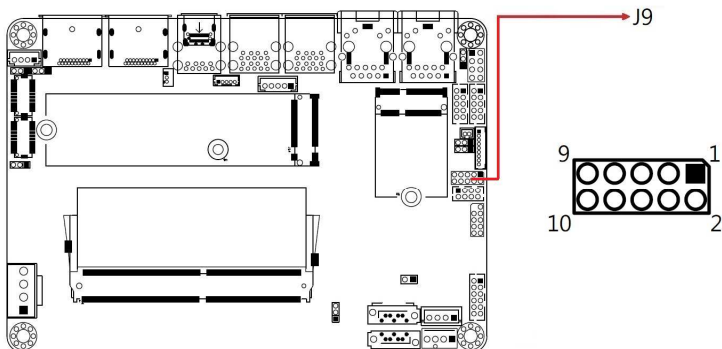

Remarks: 4 in, 4 out

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | Ground     | 2   | +5V        |
| 3   | Out3       | 4   | Out1       |
| 5   | Out2       | 6   | Out0       |
| 7   | IN3        | 8   | IN1        |
| 9   | IN2        | 10  | IN0        |


### 2.5.8 LVDS Connector (J12 - 2nd, J18 - 1st)

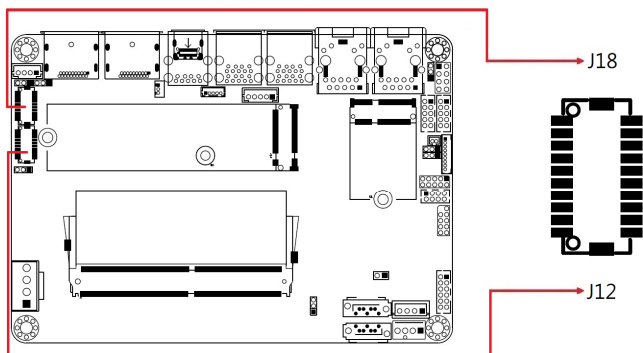

Remarks: Hirose DF20G-20DP-1V(56)

| Pin | Assignment   | Pin | Assignment   |
|-----|--------------|-----|--------------|
| 1   | TX0P         | 2   | TX0N         |
| 3   | GND          | 4   | GND          |
| 5   | TX1P         | 6   | TX1N         |
| 7   | GND          | 8   | GND          |
| 9   | TX2P         | 10  | TX2N         |
| 11  | GND          | 12  | GND          |
| 13  | CLKP         | 14  | CLKN         |
| 15  | GND          | 16  | GND          |
| 17  | TX3P         | 18  | TX3N         |
| 19  | +3.3V or +5V | 20  | +3.3V or +5V |


### 2.5.9 M.2 M-Key 2280 (J14)

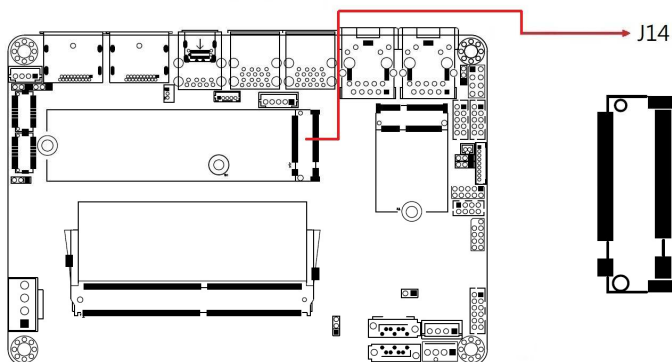

M.2 M-Key 2280 (J14)


| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | GND        | 2   | +3.3V      |
| 3   | GND        | 4   | +3.3V      |
| 5   | PERn3      | 6   | NC         |
| 7   | PERp3      | 8   | NC         |
| 9   | GND        | 10  | HDD_LED#   |
| 11  | PETn3      | 12  | +3.3V      |
| 13  | PETp3      | 14  | +3.3V      |
| 15  | GND        | 16  | +3.3V      |
| 17  | PERn2      | 18  | +3.3V      |
| 19  | PERp2      | 20  | NC         |
| 21  | GND        | 22  | NC         |
| 23  | PETn2      | 24  | NC         |
| 25  | PETp2      | 26  | NC         |
| 27  | GND        | 28  | NC         |
| 29  | PERn1      | 30  | NC         |
| 31  | PERp1      | 32  | NC         |
| 33  | GND        | 34  | NC         |
| 35  | PETn1      | 36  | NC         |
| 37  | PETp1      | 38  | NC         |
| 39  | GND        | 40  | NC         |
| 41  | PERn0      | 42  | NC         |
| 43  | PERp0      | 44  | NC         |
| 45  | GND        | 46  | NC         |
| 47  | PETn0      | 48  | NC         |
| 49  | PETp0      | 50  | PERST#     |
| 51  | GND        | 52  | CLKREQ#    |
| 53  | REFCLKn    | 54  | PEWAKE#    |
| 55  | REFCLKp    | 56  | NC         |
| 57  | GND        | 58  | NC         |
|     | M-KEY      |     | M-KEY      |
| 67  | NC         | 68  | SUSCLK     |
| 69  | NC         | 70  | +3.3V      |
| 71  | GND        | 72  | +3.3V      |
| 73  | GND        | 74  | +3.3V      |
| 75  | GND        |     |            |

### 2.5.10 COM2 RS-232 Port (J15)

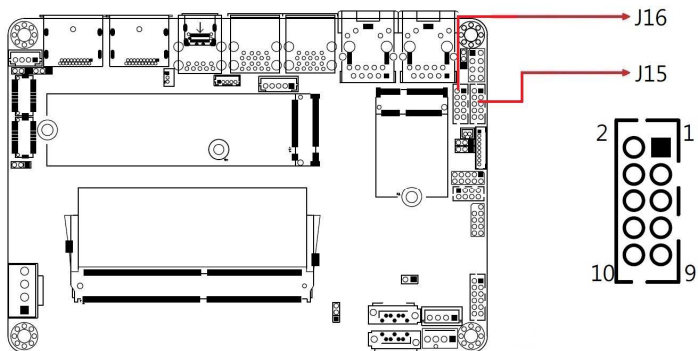

| Pin | Signal Name         | Pin | Signal Name         |
|-----|---------------------|-----|---------------------|
| 1   | Data carrier detect | 2   | Receive data        |
| 3   | Transmit data       | 4   | Data terminal ready |
| 5   | Ground              | 6   | Data set ready      |
| 7   | Request to send     | 8   | Clear to send       |
| 9   | Ring indicator      | 10  | Key                 |


### 2.5.11 COM1 RS-232/422/485 Port (J16)

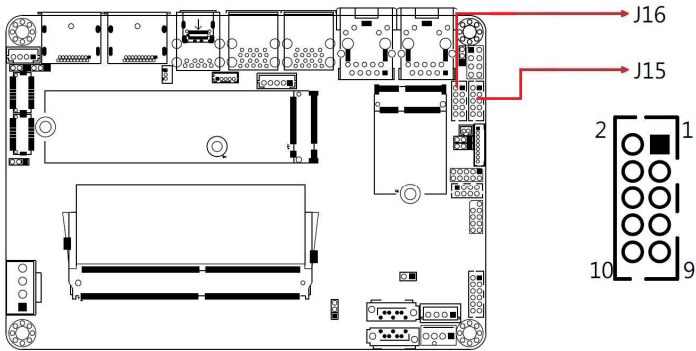

Remarks: HK\_DF11-10S-PA66H

| Pin | Assignment |        |        |
|-----|------------|--------|--------|
|     | RS-232     | RS-422 | RS-485 |
| 1   | DCD        | TX-    | DATA-  |
| 2   | RX         | TX+    | DATA+  |
| 3   | TX         | RX+    | NC     |
| 4   | DTR        | RX-    | NC     |
| 5   | Ground     | Ground | Ground |
| 6   | DSR        | NC     | NC     |
| 7   | RTS        | NC     | NC     |
| 8   | CTS        | NC     | NC     |
| 9   | RI         | NC     | NC     |
| 10  | NC         | NC     | NC     |

## 2.5.12 Front Panel Setting Connector (J22)

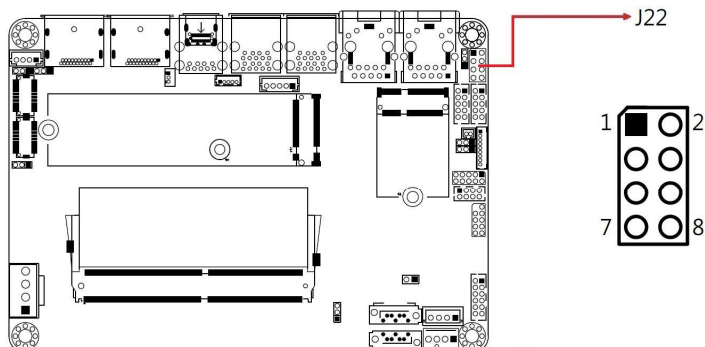


\* E-CALL\_0126-01-203-080

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | Power BTN  | 2   | Power BTN  |
| 3   | HDD LED+   | 4   | HDD LED-   |
| 5   | Reset BTN  | 6   | Reset BTN  |
| 7   | Power LED+ | 8   | Power LED- |

This connector provides interfaces for the following functions.

- ATX Power ON Switch (Pins 1 and 2)**  
 The 2 pins make an “ATX Power Supply On/Off Switch” for the system that connects to the power switch on the case. When pressed, the power switch will force the system to power on. When pressed again, it will power off the system.
- Hard Disk Drive LED Connector (Pins 3 and 4)**  
 This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.
- Reset Switch (Pins 5 and 6)**  
 The reset switch allows you to reset the system without turning the main power switch off and then on again. Orientation is not required when making a connection to this header.
- Power LED: Pins 7 and 8**  
 This connector connects to the system power LED on control panel. This LED will light when the system turns on.

### 2.5.13 LVDS Backlight Connector (J23)

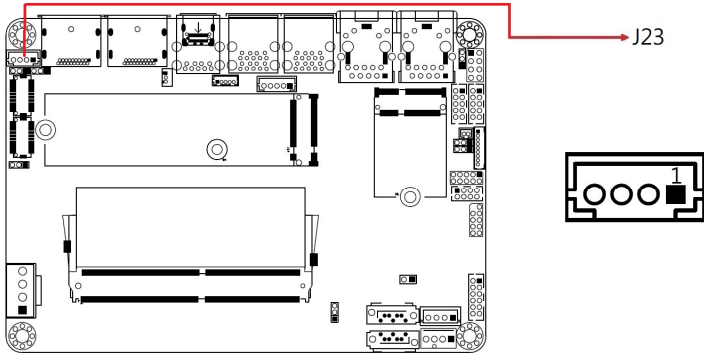


Remarks: E-CALL\_0110-161-040

| Pin | Assignment         |
|-----|--------------------|
| 1   | +12V               |
| 2   | Backlight Enable   |
| 3   | Brightness Control |
| 4   | Ground             |




## 2.5.14 CPU Fan Power Connector (CPU\_FAN1)

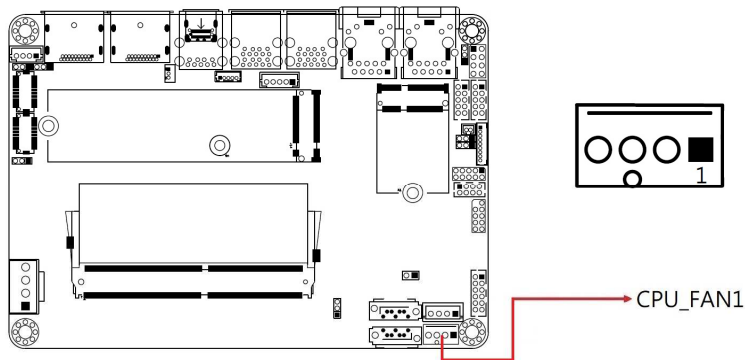

Remarks: PWM only

| Pin | Assignment         |
|-----|--------------------|
| 1   | Ground             |
| 2   | +12V               |
| 3   | Rotation detection |
| 4   | Control            |

## 2.5.15 Smart Battery (J20)

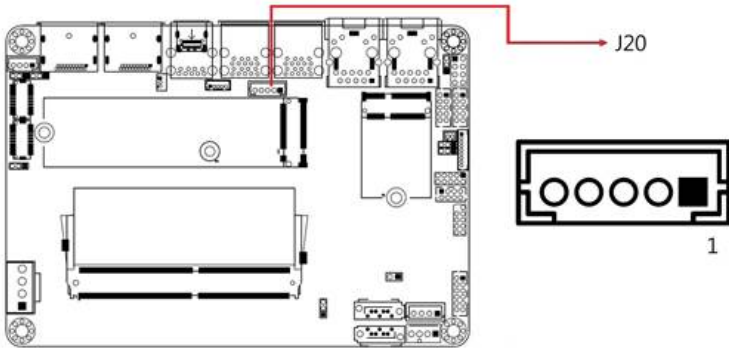

Remarks: JST B5B-PH-K-S

| Pin | Assignment |
|-----|------------|
| 1   | RST#       |
| 2   | ICHSWI#    |
| 3   | Ground     |
| 4   | SMB_DATA   |
| 5   | SMB_CLK    |

# Chapter 3

## Drivers Installation

This chapter introduces installation of the following drivers:

- Intel® Chipset Software Installation Utility
- VGA Driver
- HD Audio Driver
- LAN Driver
- Intel® Management Engine Drivers

## 3.1 Introduction

This section describes the installation procedures for software and drivers. The software and drivers are included with the motherboard. If you find anything missing, please contact the distributor where you made the purchase. The contents of this section include the following:

---

**Note:** After installing your Windows operating system, you must install the Intel® Chipset Software Installation Utility first before proceeding with the drivers installation.

---

## 3.2 Intel® Chipset Software Installation Utility

The Intel® Chipset drivers should be installed first before the software drivers to install INF files for Plug & Play function for Intel chipset components. Follow the instructions below to complete the installation.

1. Insert the drivers disk in the disk drive. Click **Intel** on the left pane and then **Intel(R) TigerLake-H Chipset Drivers** on the right pane.



2. Click **Intel(R) Chipset Software Installation Utility**.



3. When the *Welcome* screen to the Intel® Chipset Device Software appears, click **Next** to continue.
4. Accept the software license agreement and proceed with the installation process.
5. On the *Readme File Information* screen, click **Install**.
6. After completing the installation, click **Finish** to complete the setup process.

### 3.3 VGA Driver Installation

1. Insert the drivers disk in the disk drive. Click **Intel** on the left pane and then **Intel(R) TigerLake-H Chipset Drivers** on the right pane.



2. Click **Intel(R) HD Graphics Driver**.



3. When the *Welcome* screen appears, click **Next** to continue.
4. Click **Yes** to accept the license agreement.
5. On the *Readme File Information* screen, click **Next** until the installation starts.
6. When Setup is Complete, click **Finish**.

### 3.4 HD Audio Driver Installation

1. Insert the drivers disk in the disk drive. Click **Intel** on the left pane and then **Intel(R) TigerLake-H Chipset Drivers** on the right pane.



2. Click **Realtek High Definition Audio Driver**.



3. On the *Welcome* screen of the InstallShield Wizard, click **Next**.
4. Click **Next** until the installation starts.
5. After the installation, click **Finish** to restart the computer for changes to take effect.

### 3.5 LAN Driver Installation

1. Insert the drivers disk in the disk drive. Click **Intel** on the left pane and then **Intel(R) TigerLake-H Chipset Drivers** on the right pane.




2. Click **Intel(R) PRO LAN Network Drivers..**




3. On the *Network Connections* screen, click **Install Drivers and Software.**



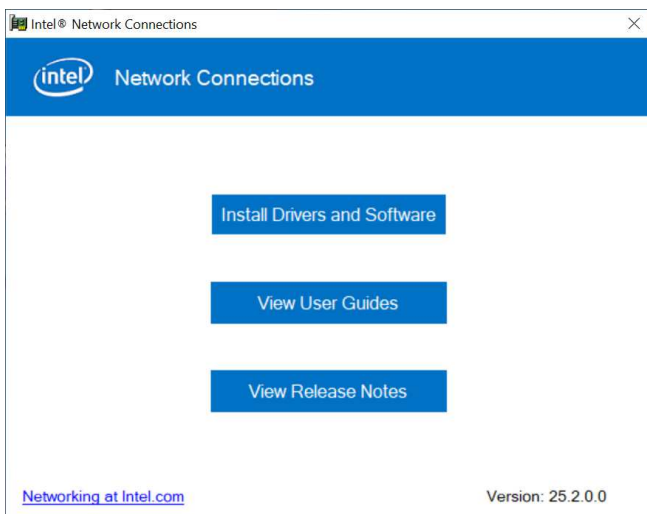

4. When the *Welcome to the install wizard for Intel(R) Network Connections* screen appears, click **Next**.

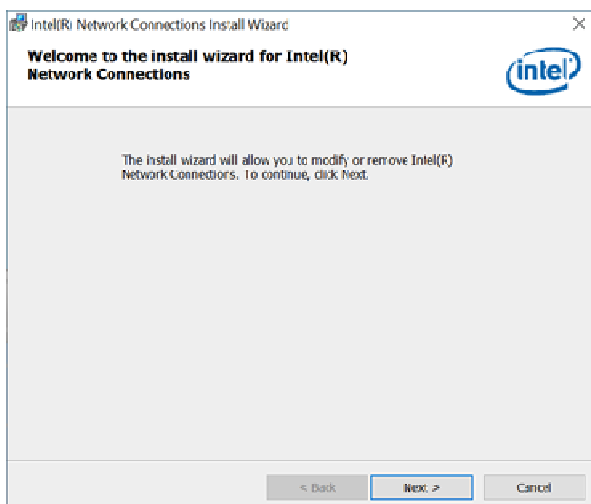

5. On the next screen, accept the license agreement and click **Next**.
6. On the *Setup Options* screen, click the checkbox to select the desired driver(s) for installation. Then click **Next** to continue.
7. On the *Ready to Install the Program* screen, click **Install** to begin the installation. When the Install wizard has completed, click **Finish**.

### 3.6 Intel® Management Engine Components Drivers Installation


1. Insert the disk enclosed in the package with the board. Click **Intel** on the left pane and then **Intel(R) TigerLake-H Chipset Drivers** on the right pane.



2. Click Intel(R) ME Drivers.



3. When the Welcome screen appears, click Next.

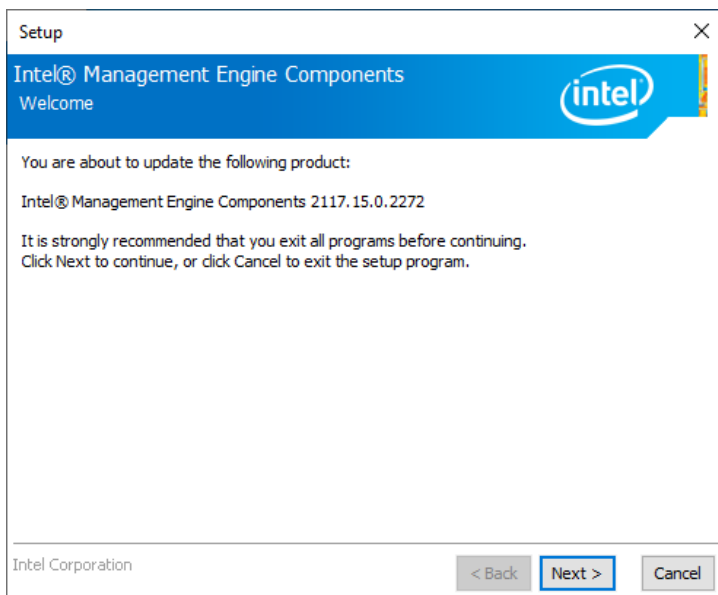

4. Accept the license agreement and click Next.
5. After Intel Management Engine Components have been successfully installed, click Finish.

This page is intentionally left blank.

# Chapter 4

## BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

- Main Settings
- Advanced Settings
- Chipset Settings
- Security Settings
- Boot Settings
- Save & Exit

## 4.1 Introduction

The BIOS (Basic Input/Output System) installed in the ROM of your computer system supports Intel® processors. The BIOS provides critical low-level support for standard devices such as disk drives, serial ports and parallel ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

## 4.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Press the <Del> key immediately allows you to enter the Setup utility. If you are a little bit late pressing the <Del> key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup.

If you still need to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again.

The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```

In general, press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help, and <Esc> to quit.

When you enter the BIOS Setup utility, the *Main Menu* screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

---

**Warning:** It is strongly recommended that you avoid making any changes to the chipset defaults.


These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could make the system unstable and crash in some cases.

---

### 4.3 Main Settings




| BIOS Setting | Description   |
|--------------|---|
| System Date  | Sets the date. Use the <Tab> key to switch between the data elements. |
| System Time  | Set the time. Use the <Tab> key to switch between the data elements.  |

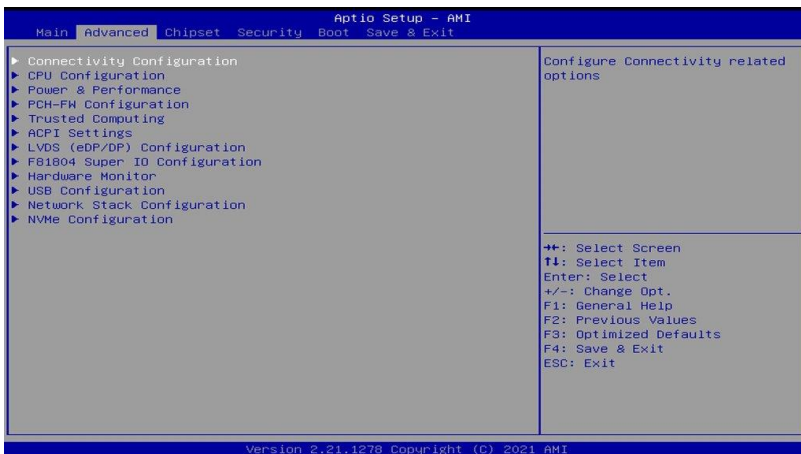


## 4.4 Advanced Settings

This section allows you to configure system features according to your preference.

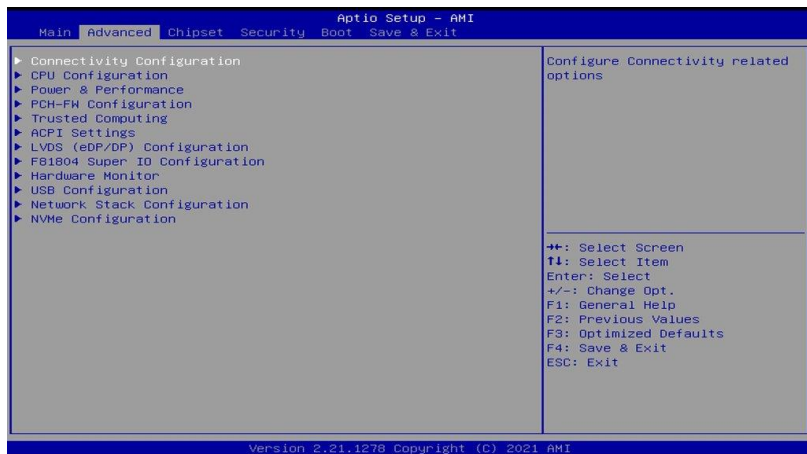




### 4.4.1 Connectivity Configuration

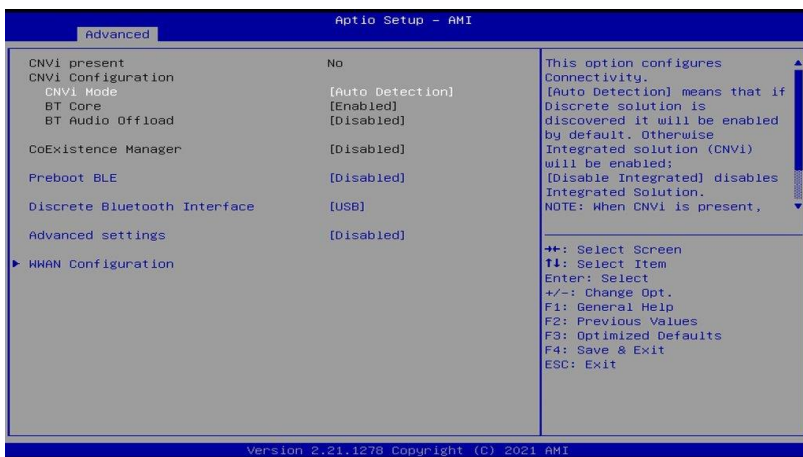

| BIOS Setting              | Description   |
|---------------------------|---|
| CNVi Mode                 | This option configures Connectivity.<br><b>Auto Detection</b> – means that if Discrete solution is discovered it will be enabled by default. Otherwise Integrated solution (CNVi) will be enabled;<br><b>Disable Integrated</b> – disables Integrated Solution. |
| Preboot BLE               | This will be used to enable Preboot Bluetooth function.   |
| Discrete Bluetooth Module | Serial IO UART0 needs to be enabled to select BT Module.<br>Default: Disabled   |
| Advanced Settings         | Configure ACPI objects for wireless devices<br>Default: Disabled  |
| WWAN Configuration        | Configure WWAN related options.<br>WWAN Device: enable or disable M.2 WWAN device   |
| WWAN Reset Workaround     | Default: Enabled  |


## 4.4.2 CPU Configuration

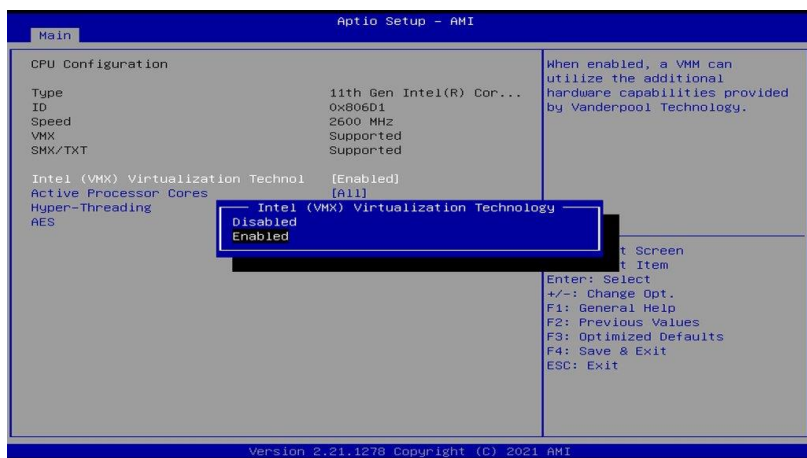

This section displays the type, ID and speed of the CPU.



| BIOS Setting                          | Description   |
|---------------------------------------|---|
| Intel (VMX) Virtualization Technology | When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. |
| Active Processor Cores                | Number of cores to enable in each processor package   |
| Hyper-Threading                       | Options; Enabled or Disabled  |
| AES                                   | Enable/Disable AES (Advanced Encryption Standard)   |

### 4.4.3 Power & Performance

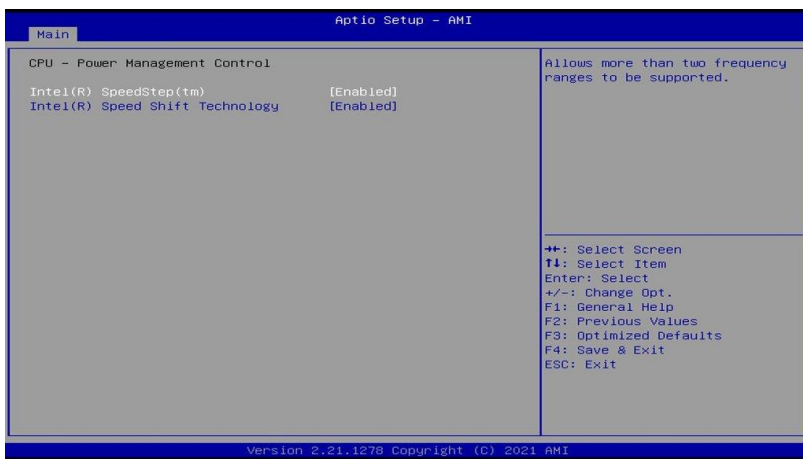


| BIOS Setting                 | Description  |
|------------------------------|--|
| Intel Speedstep              | Allows more than two frequency ranges to be supported  |
| Intel Speed Shift Technology | Enable/Disable Intel Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states. |

## 4.4.4 PCH-FW Configuration

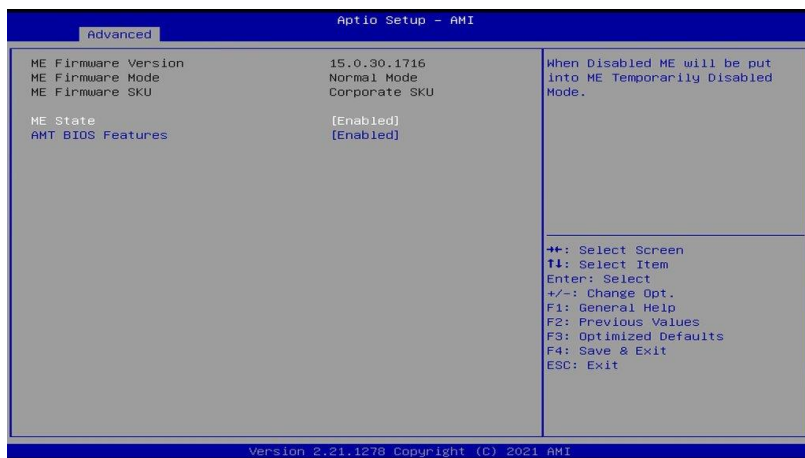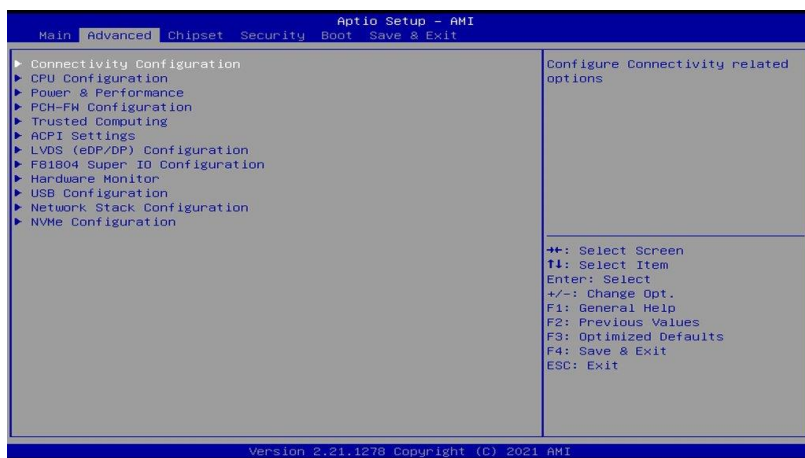


| BIOS Setting      | Description  |
|-------------------|--|
| ME State          | When disabled, ME will be put into ME Temporarily Disabled Mode.   |
| AMT BIOS Features | When disabled, AMT BIOS Features are no longer supported and user is no longer able to access MEBx Setup. Note: This option does not disable Manageability Features in FW. |

### 4.4.5 Trusted Computing

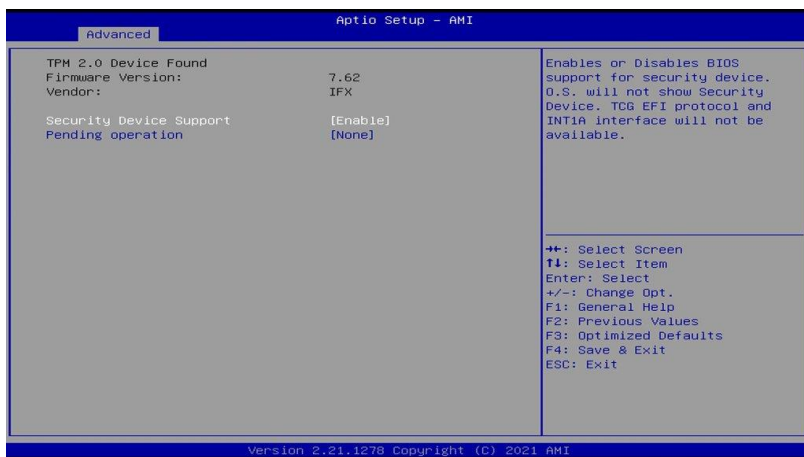



| BIOS Setting            | Description  |
|-------------------------|--|
| Security Device Support | Enables / Disables BIOS support for security device. OS will not show security device. TCG EFI protocol and INT1A interface will not be available. |
| Pending operation       | Schedule an operation for the security device.<br>Note: Your computer will reboot during restart in order to change state of security device.      |

## 4.4.6 ACPI Settings

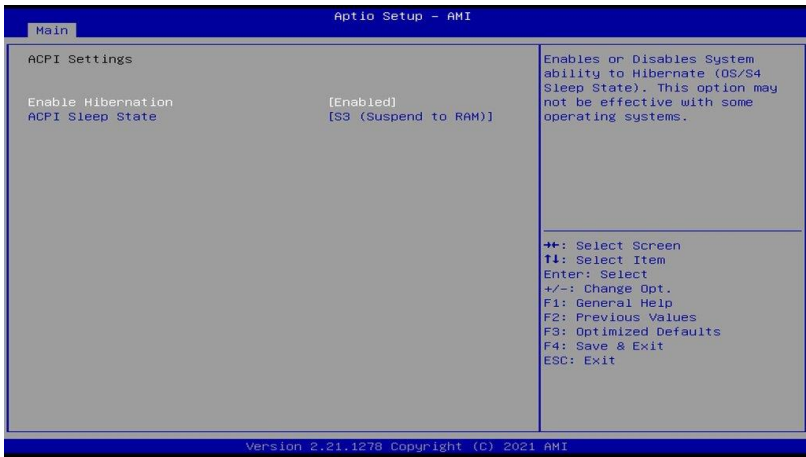

| BIOS Setting       | Description  |
|--------------------|--|
| Enable Hibernation | Enables / Disables the system ability to hibernate (OS/S4 Sleep State). This option may be not effective with some OS. |
| ACPI Sleep State   | Select the highest ACPI sleep state the system will enter when SUSPEND button is pressed.                              |

## 4.4.7 LVDS Configuration

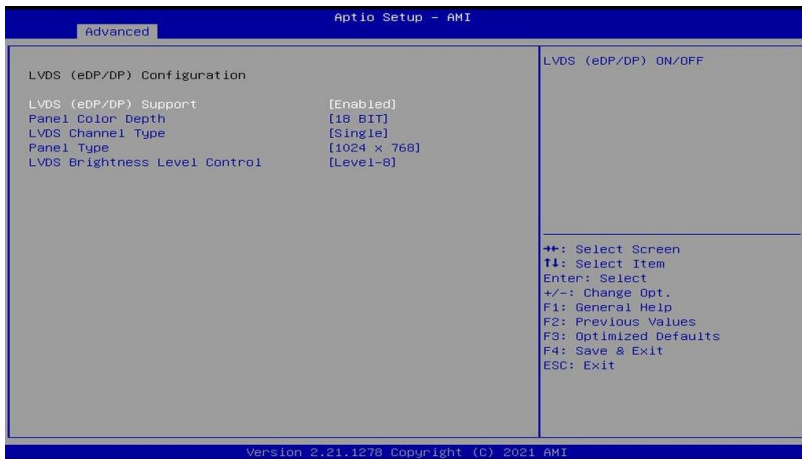
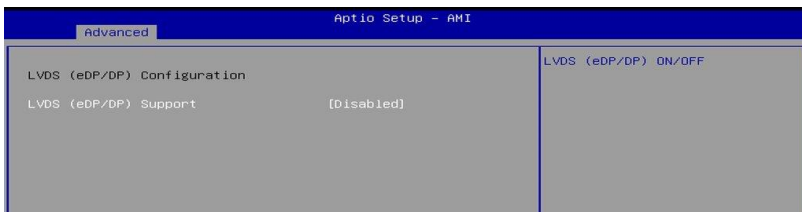


| BIOS Setting                  | Description  |
|-------------------------------|--|
| LVDS (eDP/DP) Support         | LVDS (eDP/DP) ON/OFF   |
| Panel Color Depth             | Selects the panel color depth.<br>Options: 18 bit, 24bit (VESA/JEIDA)  |
| LVDS Channel Type             | Chooses the LVDS as single or dual channel.  |
| Panel Type                    | Panel Type (Resolution) Options: 640 x 480, 800 x 600, 1024 x 768, 1280 x 768, 1280 x 800, 1280 x 960, 1280 x 1024, 1366 x 768, 1440 x 900, 1600 x 900, 1600 x 1200, 1680 x 1050, 1920 x 1080, 1920 x 1200 |
| LVDS Brightness Level Control | Options: Level-1 to Level-8  |



## 4.4.8 F81804 Super IO Configuration





| BIOS Setting               | Description   |
|----------------------------|---|
| Serial Ports Configuration | Sets parameters of serial ports.<br>Enables / Disables the serial port and select an optimal setting for the Super IO device. |

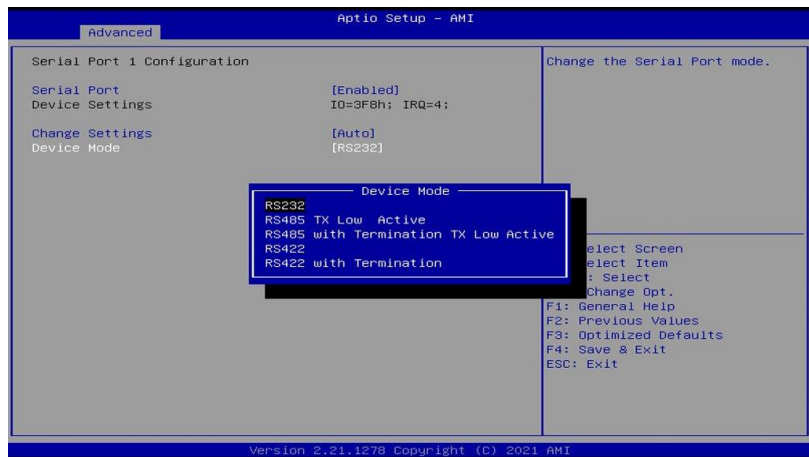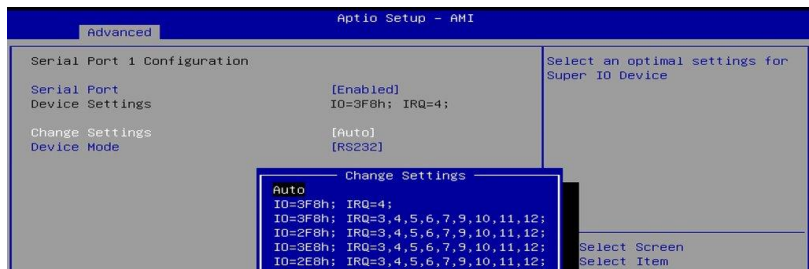



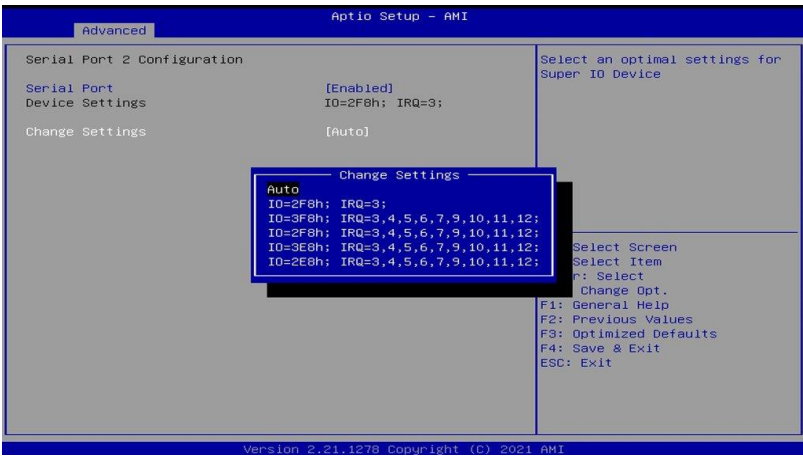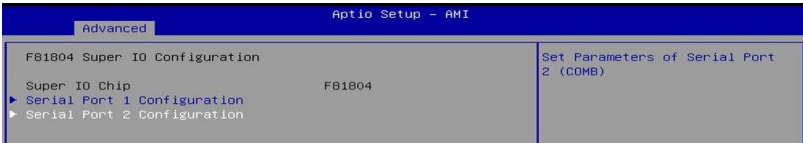


## 4.4.9 Hardware Monitor

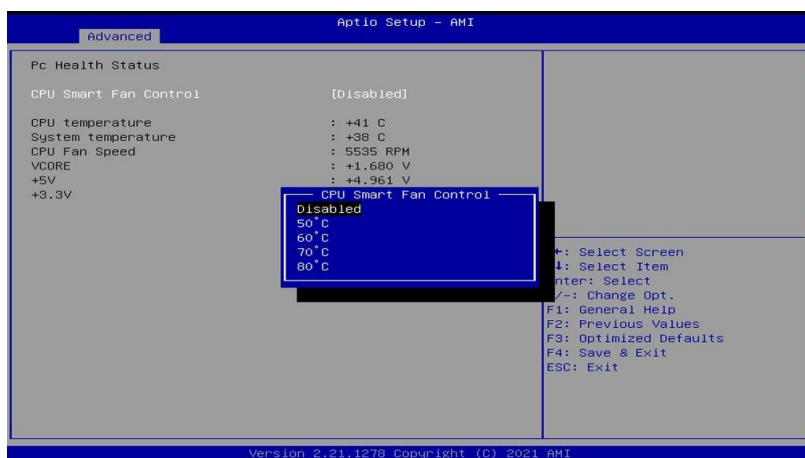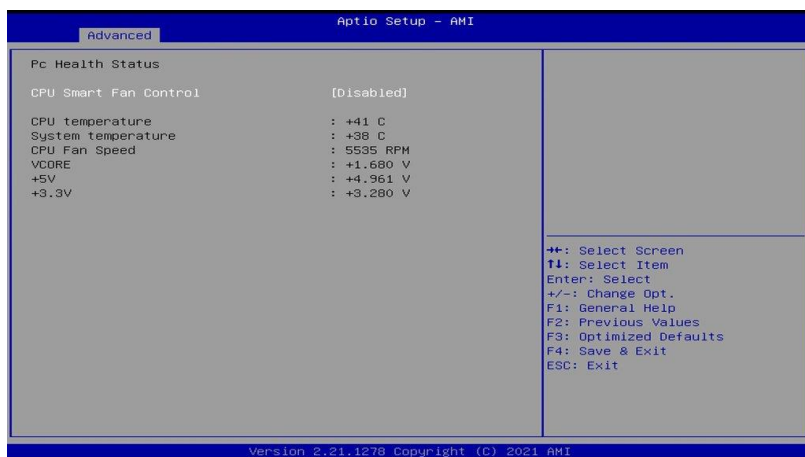


| BIOS Setting              | Description   |
|---------------------------|---|
| CPU Fan Smart Fan Control | Enables / Disables smart fan control.   |
| Temperatures / Voltages   | These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status. |

### 4.4.10 USB Configuration

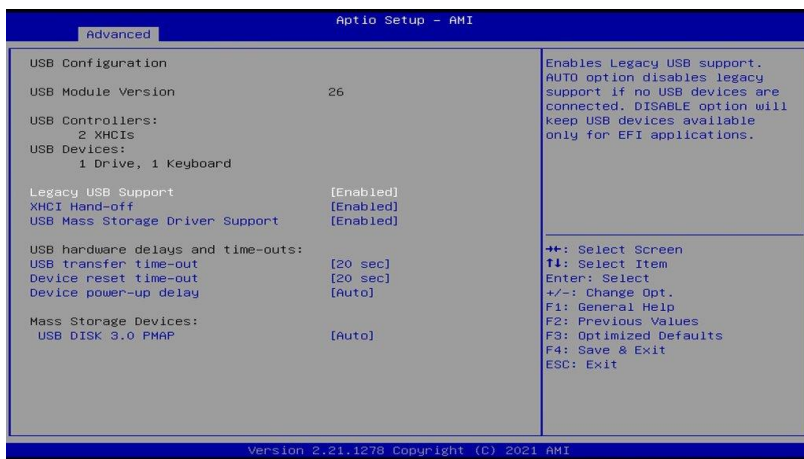



| BIOS Setting                    | Description  |
|---------------------------------|--|
| Legacy USB Support              | <ul style="list-style-type: none"> <li>• <b>Enabled</b> enables Legacy USB support.</li> <li>• <b>Auto</b> disables legacy support if there is no USB device connected.</li> <li>• <b>Disabled</b> keeps USB devices available only for EFI applications.</li> </ul> |
| XHCI Hand-off                   | This is a workaround for OSES without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.   |
| USB Mass Storage Driver Support | Enables / Disables the support for USB mass storage driver.  |
| USB Transfer time-out           | The time-out value (1 / 5 / 10 / 20 secs) for Control, Bulk, and Interrupt transfers.  |
| Device reset time-out           | Gives seconds (10 / 20 / 30 / 40 secs) to delay execution of Start Unit command to USB mass storage device.  |
| Device power-up delay           | Max.time the device will take before it properly reports itself to the Host Controller. ' <b>Auto</b> ' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.  |
| Mass Storage Devices            | Mass storage device emulation type. AUTO enumerates devices according to their media format. Optical drives are emulated as CDROM, drives with no medial will be emulated according to a drive type.   |

## 4.4.11 Network Stack Configuration

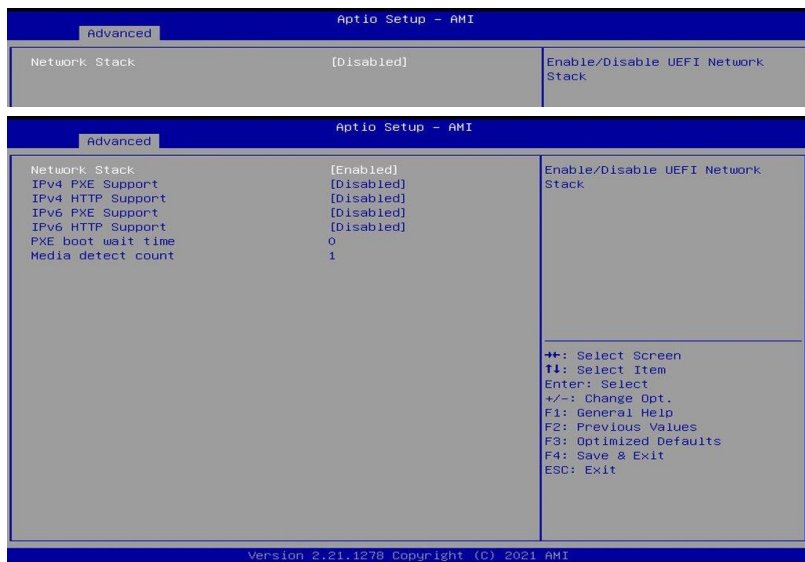


| BIOS Setting       | Description  |
|--------------------|--|
| Network Stack      | Enable/Disable UEFI Network Stack  |
| IPv4 PXE Support   | If disabled, IPv4 PXE boot support will not be available.  |
| IPv4 HTTP Support  | If disabled, IPv4 HTTP boot support will not be available.   |
| IPv6 PXE Support   | If disabled, IPv6 PXE boot support will not be available.  |
| IPv6 HTTP Support  | If disabled, IPv6 HTTP boot support will not be available.   |
| PXE boot wait time | Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value |
| Media detect count | Number of times the presence of media will be checked. Use either +/- numeric keys to set the value.         |

### 4.4.12 NVMe Configuration

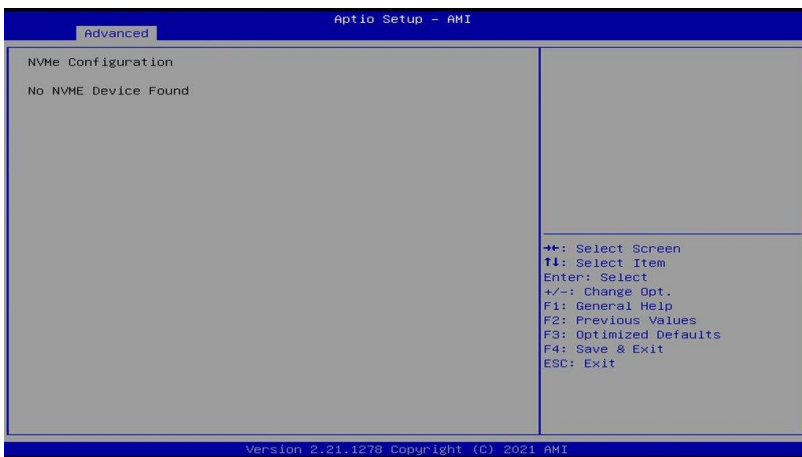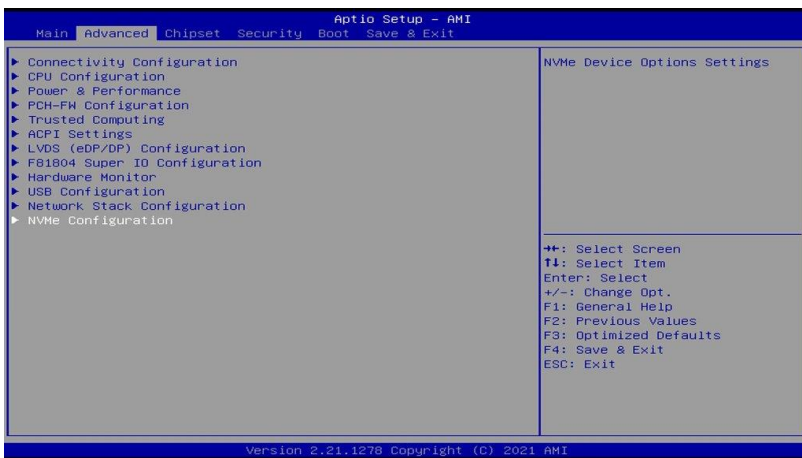





## 4.5 Chipset Settings

### 4.5.1 System Agent (SA) Configuration




#### 4.5.1.1. Graphics Configuration:

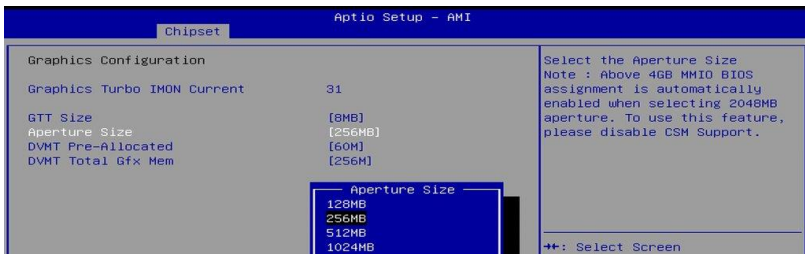


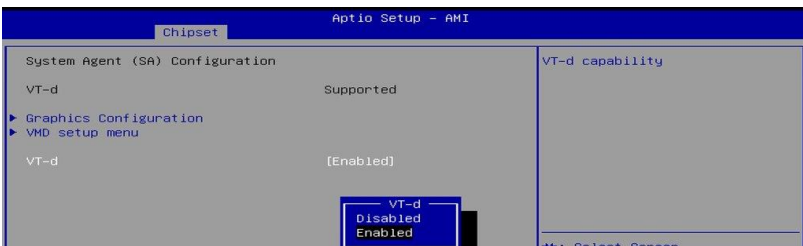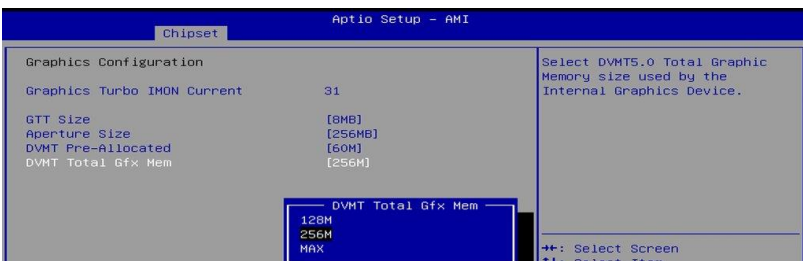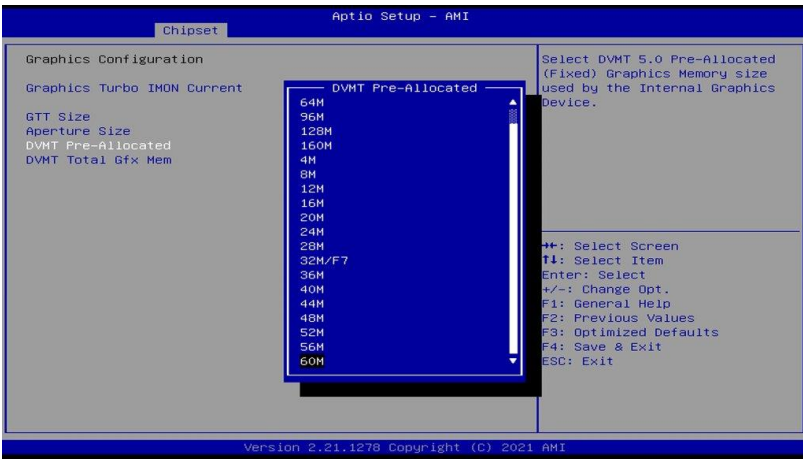

## 4.5.2 PCH-IO Configuration




### 4.5.2.1 SATA and RST Configuration:

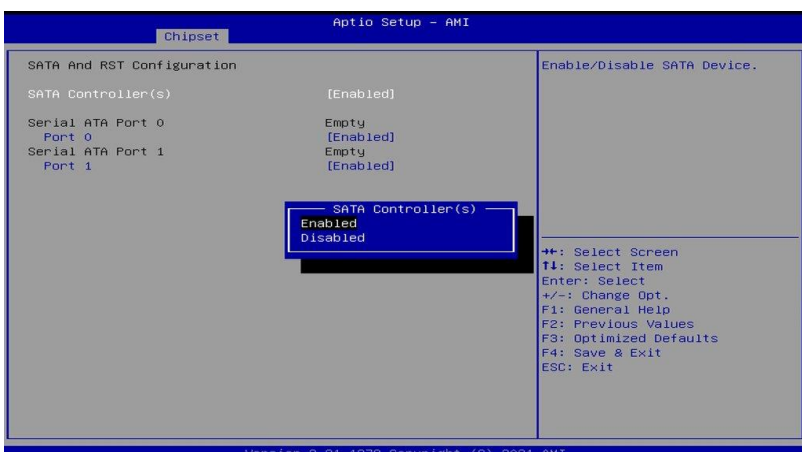

| BIOS Setting                 | Description  |
|------------------------------|--|
| SATA and RST Configuration   | SATA device options and settings   |
| SATA Controller(s)           | Enables / Disables the Serial ATA.   |
| Power-On after Power failure | Specify what state to go to when power is re-applied after a power failure (G3 state). |



### 4.5.2.2 SATA and RST Configuration:

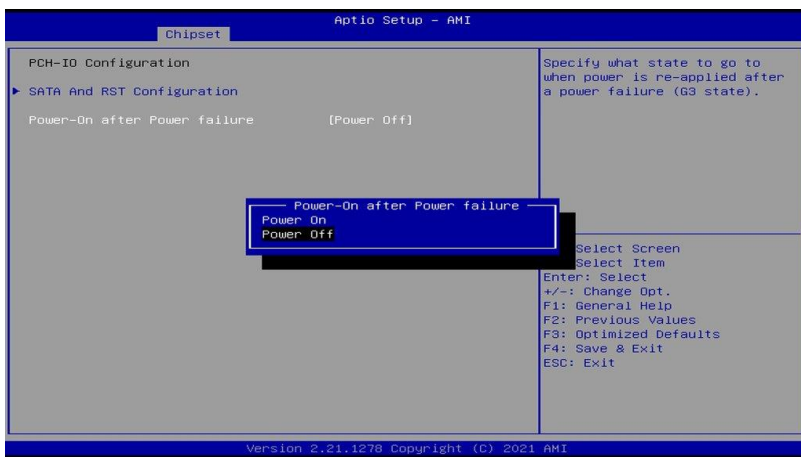


| BIOS Setting                 | Description  |
|------------------------------|--|
| Power-On after Power failure | Specify what state to to when power is re-applied after a power failure (G3 state) |

## 4.6 Security Settings




| BIOS Setting                 | Description   |
|------------------------------|---|
| Setup Administrator Password | Sets an administrator password for the setup utility.   |
| User Password                | Sets a user password.   |
| Secure Boot                  | Secure Boot feature is Active if Secure Boot is enabled. Platform Key(PK) is enrolled and the system is in user mode. The mode change requires platform reset.        |
| Secure Boot Mode             | Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication |

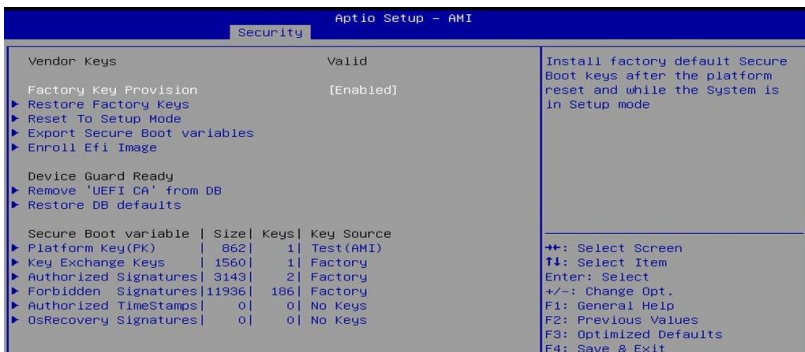


| BIOS Setting         | Description  |
|----------------------|--|
| Secure Boot          | Secure Boot feature is Active if Secure Boot is enabled. Platform Key (PK) Is enrolled and the system is in User mode. The mode change requires platform reset.        |
| Secure Boot Mode     | Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication. |
| Restore Factory Keys | Forces system to user mode. Install factory default Secure Boot key databases.   |
| Reset to Setup Mode  | Delete all Secure Boot key databases from NVRAM  |
| Key Management       | Enables expert users to modify Secure Boot Policy variables without full authentication.   |

| Aptio Setup - AMI  |                                       |  |
|--|---------------------------------------|--|
| Security   |                                       |  |
| Vendor Keys  | Valid                                 | Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device  |
| <ul style="list-style-type: none"> <li>Factory Key Provision [Enabled]</li> <li>▶ Restore Factory Keys</li> <li>▶ Reset To Setup Mode</li> <li>▶ Export Secure Boot variables</li> <li>▶ Enroll Efi Image</li> </ul> |                                       |  |
| Aptio Setup - AMI  |                                       |  |
| Security   |                                       |  |
| Vendor Keys  | Valid                                 | Allow the image to run in Secure Boot mode.  |
| <ul style="list-style-type: none"> <li>Factory Key Provision [Enabled]</li> <li>▶ Restore Factory Keys</li> <li>▶ Reset To Setup Mode</li> <li>▶ Export Secure Boot variables</li> <li>▶ Enroll Efi Image</li> </ul> |                                       | Enroll SHA256 Hash certificate of a PE Image into Authorized Signature Database (db)   |
| Aptio Setup - AMI  |                                       |  |
| Security   |                                       |  |
| Vendor Keys  | Valid                                 | Device Guard ready system must not list 'Microsoft UEFI CA' Certificate in Authorized Signature database (db)  |
| <ul style="list-style-type: none"> <li>Factory Key Provision [Enabled]</li> <li>▶ Restore Factory Keys</li> <li>▶ Reset To Setup Mode</li> <li>▶ Export Secure Boot variables</li> <li>▶ Enroll Efi Image</li> </ul> |                                       |  |
| Device Guard Ready   |                                       |  |
| ▶ Remove 'UEFI CA' from DB   | Remove 'UEFI CA' from DB              |  |
| Aptio Setup - AMI  |                                       |  |
| Security   |                                       |  |
| Vendor Keys  | Valid                                 | Restore DB variable to factory defaults  |
| <ul style="list-style-type: none"> <li>Factory Key Provision [Enabled]</li> <li>▶ Restore Factory Keys</li> <li>▶ Reset To Setup Mode</li> <li>▶ Export Secure Boot variables</li> <li>▶ Enroll Efi Image</li> </ul> |                                       |  |
| Device Guard Ready   |                                       |  |
| ▶ Remove 'UEFI CA' from DB   | Restore DB defaults                   |  |
| ▶ Restore DB defaults  | Press 'Yes' to proceed 'No' to cancel |  |
| Secure Boot variable   Size  |                                       |  |
| ▶ Platform Key(PK)   86  |                                       | Select Screen  |
| ▶ Key Exchange Keys   156  | Yes No                                | Select Item  |
| Aptio Setup - AMI  |                                       |  |
| Security   |                                       |  |
| Vendor Keys  | Valid                                 | Enroll Factory Defaults or load certificates from a file:  |
| <ul style="list-style-type: none"> <li>Factory Key Provision [Enabled]</li> <li>▶ Restore Factory Keys</li> <li>▶ Reset To Setup Mode</li> <li>▶ Export Secure Boot variables</li> <li>▶ Enroll Efi Image</li> </ul> |                                       | 1.Public Key Certificate:<br>a)EFI_SIGNATURE_LIST<br>b)EFI_CERT_X509 (DER)<br>c)EFI_CERT_RSA2048 (bin)<br>d)EFI_CERT_SHAXXX<br>2.Authenticated UEFI Variable<br>3.EFI PE/COFF Image(SHA256)<br>Key Source:<br>Factory,External,Mixed |
| Device Guard Ready   |                                       |  |
| ▶ Remove 'UEFI CA' from DB   |                                       |  |
| ▶ Restore DB defaults  |                                       |  |
| Secure Boot variable   Size   Keys   Key Source  |                                       |  |
| ▶ Platform Key(PK)   362   1   Test (AMI)  |                                       | ++: Select Screen  |
| ▶ Key Exchange Keys   1560   1   Factory   |                                       | !1: Select Item  |
| ▶ Authorized Signatures   3143   2   Factory   |                                       | Enter: Select  |
| ▶ Forbidden Signatures   11936   186   Factory   |                                       | +/-: Change Opt.   |
| ▶ Authorized TimeStamps   0   0   No Keys  |                                       | F1: General Help   |
| ▶ OSRecovery Signatures   0   0   No Keys  |                                       | F2: Previous Values  |
|  |                                       | F3: Optimized Defaults   |
|  |                                       | F4: Save & Exit  |
|  |                                       | ESC: Exit  |
| Version 2.21.1278 Copyright (C) 2021 AMI   |                                       |  |


# 4.7 Boot Settings

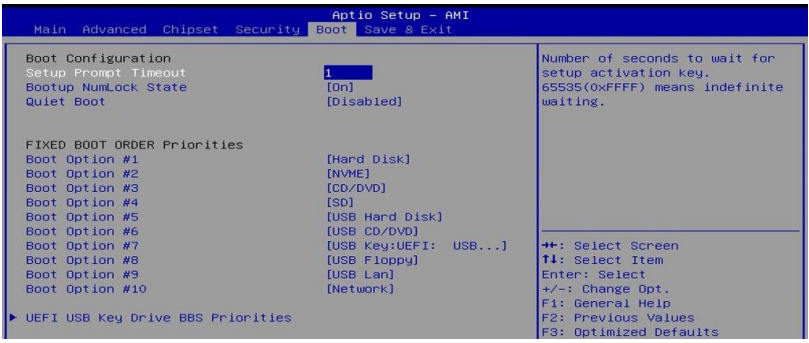

| BIOS Setting                | Description  |
|-----------------------------|--|
| Setup Prompt Timeout        | Number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting. |
| Bootup NumLock State        | Selects the keyboard NumLock state.  |
| Quiet Boot                  | Enables / Disables Quiet Boot option.  |
| FIXED BOOT ORDER Priorities | Sets the system boot order.  |

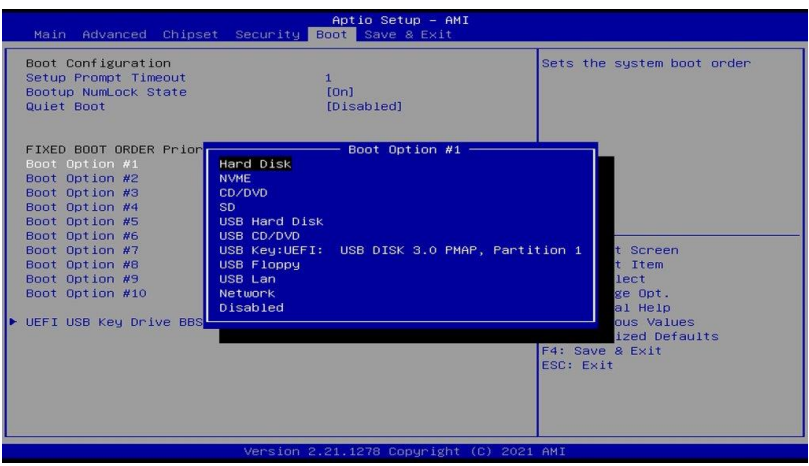

## 4.8 Save & Exit Settings

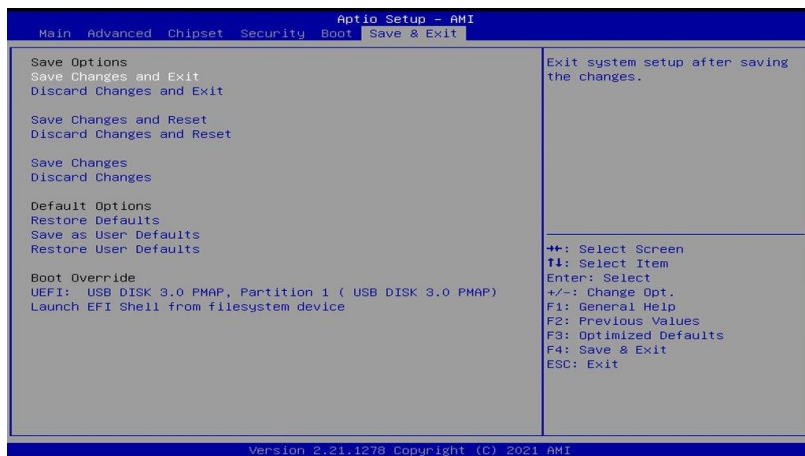

| BIOS Setting                            | Description  |
|---|--|
| Save Changes and Exit                   | Exits system setup after saving the changes.   |
| Discard Changes and Exit                | Exits system setup without saving any changes.   |
| Save Changes and Reset                  | Resets the system after saving the changes.  |
| Discard Changes and Reset               | Resets system setup without saving any changes.  |
| Save Changes                            | Saves changes done so far to any of the setup options.   |
| Discard Changes                         | Discards changes done so far to any of the setup options.  |
| Restore Defaults                        | Restores / Loads defaults values for all the setup options.  |
| Save as User Defaults                   | Saves the changes done so far as User Defaults.  |
| Restore User Defaults                   | Restores the user defaults to all the setup options.   |
| Launch EFI Shell from filesystem device | Attempts to launch EFI shell application (Shell.efi) from one of the available filesystem devices. |

# Appendix

This section provides the mapping addresses of peripheral devices and the sample code of watchdog timer configuration.

## A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

| Address               | Device Description                |
|-----------------------|-----------------------------------|
| 0x0000A00-0x0000A0F   | Motherboard resources             |
| 0x0000A10-0x0000A1F   | Motherboard resources             |
| 0x0000A20-0x0000A2F   | Motherboard resources             |
| 0x000002E-0x000002F   | Motherboard resources             |
| 0x000004E-0x000004F   | Motherboard resources             |
| 0x0000061-0x0000061   | Motherboard resources             |
| 0x0000063-0x0000063   | Motherboard resources             |
| 0x0000065-0x0000065   | Motherboard resources             |
| 0x0000067-0x0000067   | Motherboard resources             |
| 0x0000070-0x0000070   | Motherboard resources             |
| 0x0000080-0x0000080   | Motherboard resources             |
| 0x0000092-0x0000092   | Motherboard resources             |
| 0x00000B2-0x00000B3   | Motherboard resources             |
| 0x0000680-0x000069F   | Motherboard resources             |
| 0x0000164E-0x0000164F | Motherboard resources             |
| 0x0000EFA0-0x0000EFBF | Intel(R) SMBus - 43A3             |
| 0x000003F8-0x000003FF | Communications Port (COM1)        |
| 0x000002F8-0x000002FF | Communications Port (COM2)        |
| 0x00001800-0x000018FE | Motherboard resources             |
| 0x00003090-0x00003097 | Standard SATA AHCI Controller     |
| 0x00003080-0x00003083 | Standard SATA AHCI Controller     |
| 0x00003060-0x0000307F | Standard SATA AHCI Controller     |
| 0x00000000-0x00000CF7 | PCI Express Root Complex          |
| 0x00000D00-0x0000FFFF | PCI Express Root Complex          |
| 0x00000020-0x00000021 | Programmable interrupt controller |
| 0x00000024-0x00000025 | Programmable interrupt controller |
| 0x00000028-0x00000029 | Programmable interrupt controller |
| 0x0000002C-0x0000002D | Programmable interrupt controller |
| 0x00000030-0x00000031 | Programmable interrupt controller |
| 0x00000034-0x00000035 | Programmable interrupt controller |
| 0x00000038-0x00000039 | Programmable interrupt controller |
| 0x0000003C-0x0000003D | Programmable interrupt controller |
| 0x000000A0-0x000000A1 | Programmable interrupt controller |
| 0x000000A4-0x000000A5 | Programmable interrupt controller |
| 0x000000A8-0x000000A9 | Programmable interrupt controller |
| 0x000000AC-0x000000AD | Programmable interrupt controller |



|                       |  |
|-----------------------|--|
| 0x000000B0-0x000000B1 | Programmable interrupt controller                  |
| 0x000000B4-0x000000B5 | Programmable interrupt controller                  |
| 0x000000B8-0x000000B9 | Programmable interrupt controller                  |
| 0x000000BC-0x000000BD | Programmable interrupt controller                  |
| 0x000004D0-0x000004D1 | Programmable interrupt controller                  |
| 0x00002000-0x000020FE | Motherboard resources                              |
| 0x000000F0-0x000000F0 | Numeric data processor                             |
| 0x0000FFFF-0x0000FFFF | Intel(R) Active Management Technology - SOL (COM5) |
| 0x00000040-0x00000043 | System timer                                       |
| 0x00000050-0x00000053 | System timer                                       |
| 0x00003000-0x0000303F | Intel(R) UHD Graphics                              |
| 0x00001854-0x00001857 | Motherboard resources                              |

## B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

| Level              | Function  |
|--------------------|---|
| IRQ 4294967271-799 | Intel(R) Ethernet Controller (3) I225-LM                        |
| IRQ 16             | High Definition Audio Controller                                |
| IRQ 4              | Communications Port (COM1)                                      |
| IRQ 3              | Communications Port (COM2)                                      |
| IRQ 4294967293     | Intel(R) PCI Express Root Port #10 - 43B1                       |
| IRQ 14             | Intel(R) GPIO Controller - 34C6                                 |
| IRQ 4294967292     | Standard SATA AHCI Controller                                   |
| IRQ 55-204         | Microsoft ACPI-Compliant System                                 |
| IRQ 256-511        | Microsoft ACPI-Compliant System                                 |
| IRQ 4294967291     | Intel(R) USB 3.20 eXtensible Host Controller - 1.20 (Microsoft) |
| IRQ 28             | Trusted Platform Module 2.0                                     |
| IRQ 4294967294     | Intel(R) PCI Express Root Port #9 - 43B0                        |
| IRQ 13             | Numeric data processor  |
| IRQ 4294967280-88  | Intel(R) Ethernet Controller (3) I225-V                         |
| IRQ 19             | Intel(R) Active Management Technology - SOL (COM5)              |
| IRQ 0              | System timer  |
| IRQ 4294967290     | Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft) |
| IRQ 4294967289     | Intel(R) UHD Graphics   |
| IRQ 4294967270     | Intel(R) Management Engine Interface #1                         |
| IRQ 4294967271-799 | Intel(R) Ethernet Controller (3) I225-LM                        |

## C. Watchdog Timer Configuration

The Watchdog Timer (WDT) is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven.

Under normal circumstance, you will need to restart the WDT at regular intervals before the timer counts to zero.

### Sample Code:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "F81804.H"
//-----
int main (int argc, char *argv[]);
void EnableWDT(int);
void DisableWDT(void);
//-----
int main (int argc, char *argv[])
{
    unsigned char bBuf;
    unsigned char bTime;
    char **endptr;

    char SIO;

    printf("Fintek 81866 watch dog program\n");
    SIO = Init_ F81804();
    if (SIO == 0)
    {
        printf("Can not detect Fintek 81866, program abort.\n");
        return(1);
    }
    //if (SIO == 0)

    if (argc != 2)
    {
        printf("Parameter incorrect!!\n");
        return (1);
    }
}
```

```

bTime = strtol( argv[1], endptr, 10);
printf("System will reset after %d seconds\n", bTime);

if (bTime)
{
    EnableWDT(bTime); }
else
{
    DisableWDT();      }
return 0;
}
//-----
void EnableWDT(int interval)
{
    unsigned char bBuf;

    bBuf = Get_ F81804_Reg(0x2B);
    bBuf &= (~0x20);
    Set_ F81804_Reg(0x2B, bBuf);          //Enable WDTO

    Set_ F81804_LD(0x07);                //switch to logic device 7
    Set_ F81804_Reg(0x30, 0x01);        //enable timer

    bBuf = Get_ F81804_Reg(0xF5);
    bBuf &= (~0x0F);
    bBuf |= 0x52;
    Set_ F81804_Reg(0xF5, bBuf);        //count mode is second

    Set_ F81804_Reg(0xF6, interval);    //set timer

    bBuf = Get_ F81804_Reg(0xFA);
    bBuf |= 0x01;
    Set_ F81804_Reg(0xFA, bBuf);        //enable WDTO output

    bBuf = Get_ F81804_Reg(0xF5);
    bBuf |= 0x20;
    Set_ F81804_Reg(0xF5, bBuf);        //start counting
}
//-----
void DisableWDT(void)
{
    unsigned char bBuf;

    Set_ F81804_LD(0x07);                //switch to logic device 7

    bBuf = Get_ F81804_Reg(0xFA);
    bBuf &= ~0x01;
    Set_ F81804_Reg(0xFA, bBuf);        //disable WDTO output

    bBuf = Get_ F81804_Reg(0xF5);
    bBuf &= ~0x20;
    bBuf |= 0x40;
    Set_ F81804_Reg(0xF5, bBuf);        //disable WDT
}
//-----
//-----

```

```
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "F81804.H"
#include <dos.h>
//-----
unsigned int F81804_BASE;
void Unlock_F81804 (void);
void Lock_F81804 (void);
//-----
unsigned int Init_F81804(void)
{
    unsigned int result;
    unsigned char ucDid;

    F81804_BASE = 0x4E;
    result = F81804_BASE;

    ucDid = Get_F81804_Reg(0x20);
    if (ucDid == 0x07) //Fintek81866
    {
        goto Init_Finish;
    }

    F81804_BASE = 0x2E;
    result = F81804_BASE;

    ucDid = Get_F81804_Reg(0x20);
    if (ucDid == 0x07) //Fintek81866
    {
        goto Init_Finish;
    }

    F81804_BASE = 0x00;
    result = F81804_BASE;

Init_Finish:
    return (result);
}
//-----
void Unlock_F81804 (void)
{
    outportb( F81804_INDEX_PORT, F81804_UNLOCK);
    outportb( F81804_INDEX_PORT, F81804_UNLOCK);
}
//-----
void Lock_F81804 (void)
{
    outportb( F81804_INDEX_PORT, F81804_LOCK);
}
//-----
void Set_F81804_LD( unsigned char LD)
{
    Unlock_F81804();
    outportb( F81804_INDEX_PORT, F81804_REG_LD);
    outportb( F81804_DATA_PORT, LD);
    Lock_F81804();
}
```

```

}
//-----
void Set_F81804_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_F81804();
    outputb( F81804_INDEX_PORT, REG);
    outputb( F81804_DATA_PORT, DATA);
    Lock_F81804();
}
//-----
unsigned char Get_F81804_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_F81804();
    outputb( F81804_INDEX_PORT, REG);
    Result = inportb( F81804_DATA_PORT);
    Lock_F81804();
    return Result;
}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#ifndef F81804_H
#define F81804_H                1
//-----
#define F81804_INDEX_PORT      ( F81804_BASE)
#define F81804_DATA_PORT      ( F81804_BASE+1)
//-----
#define F81804_REG_LD          0x07
//-----
#define F81804_UNLOCK          0x87
#define F81804_LOCK            0xAA
//-----
unsigned int Init_F81804(void);
void Set_F81804_LD( unsigned char);
void Set_F81804_Reg( unsigned char,
unsigned char); unsigned char
Get_F81804_Reg( unsigned char);
//-----
#endif // F81804_H

```

## Onboard Connector Reference Types

| Function                 | Connector | Onboard Type                                     | Compatible Mating Type              |
|--------------------------|-----------|--|-------------------------------------|
| Audio                    | J3        | Hao Guo Xing Ye<br>DF11-12S-PA<br>66H            | Hirose<br>DF11-12DS-2C              |
| SATA HDD<br>Power        | J1        | E-CALLI<br>0110-071-040                          | JST<br>XHP-4                        |
| Front Panel<br>Setting   | J22       | E-CALL<br>2.5 mm-pitch<br>pin header<br>(Female) | Dupont<br>2.0 mm-pitch<br>(Female)  |
| USB 2.0                  | J8        | Hao Guo Xing Ye<br>DF11-8S-PA6<br>6H             | Hirose<br>DF11-8DS-2C               |
| Battery                  | J13       | Molex<br>53047-0210                              | Molex<br>51021-0200                 |
| COM1,2<br>Serial<br>Port | J15,J16   | Hao Guo Xing Ye<br>DF11-10S-PA<br>66H            | Hirose<br>DF11-10DS-2C              |
| DC Power<br>Input        | J4        | Yimtex<br>532VW4STR                              | JST<br>VHR-4N                       |
| Digital I/O              | J9        | Dupont<br>2.00<br>mm-pitch pin<br>header (Male)  | Dupont<br>2.00 mm-pitch<br>(Female) |
| LCD Backlight            | J23       | E-CALL<br>0110-161-040                           | JST<br>PHR-4.                       |
| LVDS                     | J12, J18  | Hirose<br>DF20G-20DP<br>-1V                      | Hirose<br>DF20A-20DS-1<br>C         |

Our company network supports you worldwide with offices in Germany, Austria, Switzerland, the UK and the USA. For more information please contact:

## Headquarters

### Germany



### FORTEC Elektronik AG

Augsburger Str. 2b  
82110 Germering

Phone: +49 89 894450-0  
E-Mail: [info@fortecaq.de](mailto:info@fortecaq.de)  
Internet: [www.fortecaq.de](http://www.fortecaq.de)

---

## Fortec Group Members

### Austria



### Distec GmbH Office Vienna

Nuschinggasse 12  
1230 Wien

Phone: +43 1 8673492-0  
E-Mail: [info@distec.de](mailto:info@distec.de)  
Internet: [www.distec.de](http://www.distec.de)

### Germany



### Distec GmbH

Augsburger Str. 2b  
82110 Germering

Phone: +49 89 894363-0  
E-Mail: [info@distec.de](mailto:info@distec.de)  
Internet: [www.distec.de](http://www.distec.de)

### Switzerland



### ALTRAC AG

Bahnhofstraße 3  
5436 Würenlos

Phone: +41 44 7446111  
E-Mail: [info@altrac.ch](mailto:info@altrac.ch)  
Internet: [www.altrac.ch](http://www.altrac.ch)

### United Kingdom



### Display Technology Ltd.

Osprey House, 1 Osprey Court  
Hinchingsbrooke Business Park  
Huntingdon, Cambridgeshire, PE29 6FN

Phone: +44 1480 411600  
E-Mail: [info@displaytechnology.co.uk](mailto:info@displaytechnology.co.uk)  
Internet: [www.displaytechnology.co.uk](http://www.displaytechnology.co.uk)

### USA



### Apollo Display Technologies, Corp.

87 Raynor Avenue, Unit 1  
Ronkonkoma, NY 11779

Phone: +1 631 5804360  
E-Mail: [info@apolloDisplays.com](mailto:info@apolloDisplays.com)  
Internet: [www.apolloDisplays.com](http://www.apolloDisplays.com)